AD-A248 105





DTIC ELECTE APRO 1 1992

> A SENSITIVITY ANALYSIS OF CIRCULAR ERROR PROBABLE APPROXIMATION TECHNIQUES

> > THESIS

Peter Puhek Captain, USAF

AFIT/GOR/ENS/92M-23

This document has been approved for public release and sale; its distribution is unlimited.

DEPARTMENT OF THE AIR FORCE

AIR UNIVERSITY

AIR FORCE INSTITUTE OF TECHNOLOGY

Wright-Patterson Air Force Base, Ohio

92 3 31 050





A SENSITIVITY ANALYSIS OF CIRCULAR ERROR PROBABLE APPROXIMATION TECHNIQUES

THESIS

Peter Puhek Captain, USAF

AFIT/GOR/ENS/92M-23

Accesion For			_
NTIS CRA&I DTIC TAB Unannounced Justification			
By Distribution /			
Availability Codes			
Dist	Avail e Spe		
AH			

Approved for public release; distribution unlimited

A SENSITIVITY ANALYSIS OF CIRCULAR ERROR PROBABLE APPROXIMATION TECHNIQUES

THESIS

Presented to the Faculty of the School of Engineering
of the Air Force Institute of Technology
Air University
In Partial Fulfillment of the
Requirements for the Degree of
Master of Science in Operations Research

Peter Puhek, B.S. Captain, USAF

March, 1992

Approved for public release; distribution unlimited

THESIS APPROVAL

STUDENT: Captain Peter P. Puhek CLASS: GOR-92M

THESIS TITLE:

A Sensitivity Analysis of Circular Error

Probable Approximation Techniques

DEFENSE DATE: 3 March 1992

COMMITTEE

NAME/DEPARTMENT

SIGNATURE

Advisor

Major Paul F. Auclair

Department of

Operational Sciences

Reader

Major J. Andreas Kowell

Department of

Operational Sciences

Preface

This study examines the sensitivities of several circular error probable (CEP) estimation methods to varying levels of sample size, bias, correlation, and ellipticity. It was recommended by both former and current ICBM accuracy analysts and sponsored by the HQ SAC/XPSW directorate. The results of this study should be useful to this office and to anyone interested in estimating CEPs from data which follow a bivariate normal distribution.

I would like to acknowledge several people for their contributions to this thesis. Major Dave Berg sponsored this thesis and taught me most of my computer programming skills. Major Paul Auclair patiently advised me in this endeavor, and Major Andy Howell added numerous insightful contributions. I thank my parents for starting me off on the right path in life, and my brother, Major Jim Puhek, for introducing me to the great Air Force life. Most importantly, I thank Jesus Christ for being my personal Savior, Lord, and Master, and I look forward to eternal life with Him soon.

Peter Puhek

Table of Contents

	Page
Preface	ii
Table of Contents	iii
List of Figures	vi
List of Tables	vii
Abstract	viii
I. Introduction	1-1
1.1 Background	1-1
1.2 Objective	1-3
1.3 Research Plan	1-3
1.3.1 Background	1-3
1.3.2 Experiment	1-3
1.3.3 Analysis and Results	1-3
1.3.4 Conclusions and Recommendations	1-4
II. Literature Search	2-1
2.1 Introduction	2-1
2.2 Discussion	2-1
2.2.1 CEP Methods	2-1
2.2.2 Previous Work	2-9
2.2.3 Extensions	2-12
2.3 Summary	2-13

				Page
III.	The Expe	riment .		3-1
	3.1	Purpose		3-1
	3.2	The Ma	thematical Models	3-1
		3.2.1	Preliminary Definitions	3-2
		3.2.2	Infinite Series Expansion	3-3
		3.2.3	Grubbs-Patnaik/Chi-square	3-3
		3.2.4	Modified RAND-234	3-4
		3.2.5	CEP3	3-4
		3.2.6	Ethridge Estimator	3-5
	3.3	Parame	ters	3-5
	3.4	Test De	sign Points	3-6
	3.5	Data .		3-7
		3.5.1	Generation of Sample Data	3-7
		3.5.2	Method of Data Collection	3-15
IV.	Analysis a	and Discu	ssion of Results	4-1
	4.1	Results		4-1
		4.1.1	Statistical Summary	4-1
		4.1.2	Frequency Summaries	4-2
		4.1.3	SAS Results.	4-5
		4.1.4	Summary of Results	4-8
	4.2	General	Trends	4-8
		4.2.1	CEP3	4-9
		4.2.2	Grubbs	4-9
		4.2.3	Rand	4-15
		4.2.4	Ethridge	4-15
	4.3	Problem	ns Encountered	4-15
		431	Random Nur ber Generator	.1.15

			Page
	4.3.2	Shortcomings of the Infinite Series Expansion	
		Method	4-19
	4.3.3	Grubbs Method.	4-19
V. Conclusio	ns and R	ecommendations	5-1
5.1	Conclus	sions	5-1
5.2	Recomm	mendations	5-2
Bibliography .			BIB-1
Appendix A.	Randoi	m Number Generator	A-1
A.1	The Pr	ograms	A-1
	A.1.1	SLAM II Network Program	A-1
	A.1.2	FORTRAN Program	A-1
Appendix B.	C Prog	grams	B-1
B.1	Prograi	ms	B-1
	B.1.1	Data Integration	B-1
	B.1.2	Data Transformation	B-2
	B.1.3	CEP Calculations	B-4
Appendix C.	Data \	Validation Program	C-1
Appendix D.	Covrel	ation Study	D-1
Appendix E.	CEP E	Estimates	E-1
Appendix F.	Relati	ve Errors	F-1
Appendix G.	Compa	arative Summary	G-1
Vita			VITA-1

List of Figures

Figure		Page
3.1.	Half-width as a Function of Sample Size	3-14
3.2.	Mean CEP as a Function of Sample Size	3-14
4.1.	Frequencies of Rankings	4-3
4.2.	Frequency of Grades	4-4
4.3.	CEP3 Sensitivity Analysis	4-16
4.4.	Grubbs Sensitivity Analysis - Part 1	4-11
4.5.	Grubbs Sensitivity Analysis - Part 2	4-12
4.6.	Grubbs Sensitivity Analysis - Part 3	4-13
4.7.	Grubbs Sensitivity Analysis - Part 4	4-14
4.8.	Rand Sensitivity Analysis	4-16
4.9.	Ethridge Sensitivity Analysis - Part 1	4-17
4.10	Ethridge Sensitivity Analysis - Part 2	4-18

List of Tables

Table		Page
3.1.	Parameter Values for Experiment	3-7
3.2.	Standard Normal Cumulative Probabilities	3-9
3.3.	X,Y Correlation Analysis	3-11
3.4.	Half-width Analysis	3-13
4.1.	Sample Statistics of Absolute Relative Errors	-1-1
4.2.	Frequencies of Rankings	4-2
4.3.	Frequency of Grades	4-5
4.4.	SAS Pearson Correlation Coefficients	4-5
4.5.	Type I Sums of Squares	4-6
4.6.	Stepwise Regression Summary	4-7
4.7.	Model Correlation Coefficients	4-7

Abstract

Several algebraic CEP estimation models were examined in this study. Each assumes that the crossrange and downrange miss distances of the sample data follow a bivariate normal distribution. The analysis determined the sensitivities of these models to changes in the parameters of sample size, bias, correlation, and ellipticity. The accuracy of each model is expressed in terms of relative error, and the parameter regions in which a certain method dominated as the most accurate were noted. In general, it was found that bias was the most significant parameter in determining the best CEP method. A simple method, based on the Rayleigh distribution dominated as the best when bias was 0, .25, .5, .75, or 1, and the Grubbs-Patnaik/chi-square method dominated for the bias setting of 2 regardless of the settings of the other parameters. Levels of bias greater than 2 were not addressed.

A SENSITIVITY ANALYSIS OF CIRCULAR ERROR PROBABLE APPROXIMATION TECHNIQUES

I. Introduction

1.1 Background

The Strategic Air Command (SAC) conducts operational flight tests of its intercontinental ballistic missiles (ICBMs) to monitor and demonstrate their flightworthiness. Weapon system performance analysts use the data generated by these tests in estimating the accuracy and reliability of Air Force ICBMs. During an ICBM test, each re-entry vehicle (RV) has a simulated fuze point at a selected longitude, latitude, and height of burst, which could be as low as zero in the case of a simulated ground burst. The difference between the simulated and intended fuze points is referred to as the miss distance. ICBM accuracy is a function of miss distance, and this thesis focuses on those techniques used to estimate ICBM accuracy.

ICBM accuracy is generally given in terms of a circular error probable (CEP) measure. CEP is the radius of a circle, centered on the mean or intended fuze point, in which 50% of the RVs can be expected to arrive or in which a single RV has a 0.5 probability of arriving [8:1]. SAC has several CEP estimation techniques. The two most accurate techniques require numerical integration and can take several hours to run or a personal computer [2:1-2,4-6]. Some of the other approximation techniques are much quicker, but according to previous research, they require sample sizes of 30 or more to accurately estimate CEP [2:1-2].

The precision of a CEP estimation technique is expressed in terms of relative error (RE), which is defined as the percentage difference between a CEP estimate

given by a quick method and that given by the exact method for the same test scores. The exact method is a numerical integration technique which uses infinite series expansion, and it will be discussed in detail in Chapter 3. Thus, the exact method is the benchmark for comparing the precision of the other CEP estimation techniques. Equation (1.1) expresses relative error in mathematical terms [14:9].

$$RE = \frac{CEP_{approx} - CEP_{exact}}{CEP_{exact}} \tag{1.1}$$

In 1986, an Air Force Institute of Technology (AFIT) thesis entitled An Examination of Circular Error Probable Approximation Techniques reported that an 80286-class personal computer could generate CEP estimates using the quick methods in about two seconds or less [2:4-2,4-4,4-5]. The important conclusion of the thesis is that the quick methods have less than three percent RE for sample sizes of 40 or more and are substantially faster than the numerical integration methods of estimating CEPs. Because these quick methods give approximately the same results as the time-consuming numerical integration methods at a fraction of the time, they are often preferred for operational analyses. The disadvantage of the quicker approximation techniques is that their accuracy under a number of conditions is not documented. Variations in the characteristics of the data such as bias, ellipticity, correlation, and sample size could potentially induce unacceptably high REs in the CEP estimates. For valid applications, the precision of the quick methods under varying data characteristics must be assessed.

The current and projected limits placed on SAC's ICBM flight test program motivated this research. Fiscal and political constraints indicate that the ICBM flight test rate may be reduced to as few as three test firings per year for each system [1]. As a result, it may be virtually impossible to attain the sample sizes assumed in previous research efforts. SAC is interested in determining how well the

quick methods estimate the true CEP of an ICBM, given only three to fifteen flight tests and data with varying degrees of bias, correlation, and ellipticity [1].

1.2 Objective

The objective of this study is to determine the RE of the various quick CEP estimation methods under a number of combinations of sample size, bias, ellipticity, and correlation.

1.3 Research Plan

- 1.3.1 Background. The CEP estimation methods which apply to this study are introduced in Chapter 2. Several different categories of methods are discussed along with their specific models. The previous work applicable to this study and the extensions to the previous work made by this study are presented at the end of Chapter 2.
- 1.3.2 Experiment. Chapter 3 describes the purpose, design, and conduct of the experiment. The crux of the experiment entailed coding the CEP estimation methods into computer programs, executing these programs over a wide variety of data conditions, and observing the resulting CEP estimates. Every aspect relating to the conduct of the experiment is discussed in detail; the results of the experiment and corresponding analysis are addressed in subsequent chapters.
- 1.3.3 Analysis and Results. The analysis and discussion of the results of the experiment are given in Chapter 4. The CEP estimation methods are analyzed in terms of their relative errors. Statistics are presented to facilitate an individual and comparative assessment of the relative errors for each method. Figures are used to complement and verify the statistical results and to visualize the accuracies and parameter sensitivities of each CEP estimation method. The chapter closes with a

discussion of each method's ability to accurately estimate CEPs and of any problems encountered implementing the methods.

1.3.4 Conclusions and Recommendations. Chapter 5 summarizes the important findings and conclusions of the experiment. Recommendations on how to best use and possibly extend the findings of this research close both the chapter and the study.

II. Literature Search

2.1 Introduction

The following paragraphs summarize the literature pertinent to this study. Specifically, the discussion covers the topics of the relevant ICBM CEP estimation methods, the previous work done in researching these methods, and the extension to the previous work that this present study will attempt to accomplish.

2.2 Discussion

2.2.1 CEP Methods. There are numerous ICBM CEP estimation methods.

The available methods of CEP estimation fall into one of the following categories: 1) nonparametric methods; 2) closed-form integration of the bivariate normal density function; 3) numerical integration of the bivariate normal distribution function; 4) Monte Carlo sampling techniques; 5) algebraic approximation of CEP. [14:2]

The pertinent CEP methods will be discussed in the context of these five categories.

2.2.1.1 Nonparametric Methods.

The term nonparametric statistics has no standard definition that is agreed upon by all statisticians. However, most would agree that non-parametric statistical methods work well under fairly general assumptions about the nature of any probability distributions or parameters that are involved in an inferential problem. As a working definition we will define parametric methods as those that apply to problems where the distribution from which the sample is taken is specified except for the values of a finite number of parameters. Nonparametric methods apply in all other instances. [9:672]

One nonparametric CEP method is of interest. This method involves the radial miss distances, which are calculated as

$$r_i = \sqrt{D_i^2 + C_i^2} (2.1)$$

where

 r_i = radial miss distance of the i^{th} observation

 D_i = downrange miss distance of the i^{th} observation

 $C_i = \text{crossrange miss distance of the } i^{th} \text{ observation } [14:2]$

The median can be determined quickly in terms of order statistics. If the number of samples is odd, the median is the $r_{\left[\frac{i+1}{2}\right]}$ order statistic of the radial miss distances. If the number of samples is even, the median is calculated as $\frac{1}{2}(r_{\left[\frac{i}{2}\right]}+r_{\left[\frac{i+2}{2}\right]})$ by using the two central order statistics of the r_i .

For large sample size[s,] the sample median of $\{r_i\}$ is a good estimate of the population median and, hence, CEP. In flight test analysis, however, large sample sizes occur infrequently. The nonparametric approach is, therefore, usually unsuitable. [14:2]

The following CEP estimation method is a parametric method, but it will be discussed here because it also uses the radial miss distance. It results from integrating the Rayleigh distribution from its center to the radial distance that includes 50 percent of its density, as outlined in a 1983 Air Command and Staff College (ACSC) report [3:10-11]. It will be referred to as the "CEP3" method since it is listed as the third CEP estimation method in the ACSC report. Equation (2.2) shows the simplicity of this method.

$$CEP = .9394(\frac{\sum_{i=1}^{n} r_i}{n}) \tag{2.2}$$

"To use this CEP estimator, one needs only to estimate the mean radial error" [3:11]. The r_i in equation (2.2) is calculated using equation (2.1).

2.2.1.2 Closed-form Integration of the Bivariate Normal Density Function. The CEP is found by doubly integrating the density function with respect to crossrange and downrange miss distance variables and by finding the CEP value that is the solution to equation (2.3):

$$\iint_{C_{GER}} f(x,y)dxdy = 0.5 \tag{2.3}$$

where

 C_{CEP} = a circle centered at the target with radius CEP f(x,y) = the bivariate normal density function x = the crossrange miss distance y = the downrange miss distance [2:1-1]

The joint probability density function is given as

$$f(x,y) = \frac{1}{2\pi\sigma_x\sigma_y\sqrt{1-\rho_{xy}^2}} \left[exp(-\Omega)\right]$$
 (2.4)

where

$$\Omega = \frac{1}{2(1 - \rho_{xy}^2)} \left\{ \left[\frac{x - \mu_x}{\sigma_x} \right]^2 - 2\rho_{xy} \left[\frac{(x - \mu_x)(y - \mu_y)}{\sigma_x \sigma_y} \right] + \left[\frac{y - \mu_y}{\sigma_y} \right]^2 \right\}$$

and

x is normally distributed with mean, μ_x , and variance, σ_x^2 y is normally distributed with mean, μ_y , and variance, σ_y^2 $\rho_{xy} = \text{correlation of } x \text{ and } y \text{ such that}$

$$\rho_{xy} = \frac{\sigma_{xy}}{\sigma_x \sigma_y}$$

In general, a closed-form integration for the bivariate normal distribution does not exist. Given certain restrictions, such as uncorrelated samples with zero mean, and equal downrange and crossrange standard deviations, a closed-form solution can be determined. Similar, simple solutions exist for less restrictive cases, however, uncorrelated samples with zero mean and equal down and crossrange standard deviations are rarely found in flight test analysis. Hence, the closed-form integration approach is usually suitable only for initial CEP estimates. [14:2-3]

Previous work which analyzed this function showed that for the ideal conditions of no bias, ellipticity, or correlation, $CEP = 1.1774\sigma$ [3:7-8]. This result of stating CEP as a function of σ is mentioned later in the discussion of the development of the RAND-234 tables and in the design of the experiment in Chapter 3.

2.2.1.3 Numerical Integration. ICBMs entered the Air Force weapons inventory in the early 1960s. During the early history of ICBMs, analysts did not have easy access to computers. Before the computer proliferation of the 1970s, numerically integrating the bivariate normal density function as a means to estimate CEP involved using one of a number of table look-up techniques. Three of the techniques will be discussed in the following paragraphs.

In 1960. H. Leon Harter published look-up tables to aid in estimating CEP. He converted the rectangular coordinate system variables of crossrange and downrange to the polar coordinate system variables of radius and offset angle. He integrated with respect to the radius variable, leaving an expression that included a single integral with respect to the offset angle. Instead of making the second integration, he provided two sets of tables which yield the CEP based on the ellipticity of the data. Both tables use the three variables of radius, ellipticity, and probability. Since, by definition, the probability of the radius equalling the CEP is 0.5, the CEP can be found by either table with knowledge of only the ellipticity [6:725-728]. This method allows for ellipticity, but not for bias or correlation.

In 1949, H. H. Germond of RAND published a study which doubly integrated the bivariate normal distribution. His method allows for both ellipticity and bias. However, the double integration resulted in four unknown variables—the downrange and crossrange coordinates of the center of the ellipse and the lengths of its semi-major and semi-minor axes. He set up tables to display the results of the numerical integration based on the four variables. As exhaustive tables listing all possible combinations of the four variables would be too voluminous, he developed worksheets to allow the user to make hand calculations at the required variable settings [4:1-13]. This method goes one step beyond Harter's in that it allows for bias as well as correlation.

In 1952, the RAND Corporation published CEP tables based on the results of the numerical integration of an offset bivariate normal density function [10:1-17]. These tables specifically account for aim points which are offset, or not coincident, with the center of a target. Use of these tables requires three variables. The first variable is bias, which is the distance of the target from the aimpoint or weapon arrival point. The second variable is the standard deviation of the weapon's arrival distribution. The standard deviation is calculated by dividing the CEP centered on the mean point of impact by 1.1774. The third variable is the radius of the intended target. Given these three variables, the associated probability can be found or interpolated from the tables. These tables are very important because a later method uses a cubic polynomial model to fit the data in the tables with their corresponding CEPs. This later method is the modified RAND-234 method, and it will be discussed later in the algebraic approximation section.

These first three numerical integration techniques are examples of the state-of-the-art for CEP estimations during the early ICBM era. However, with the proliferation of computers in the 1970's and beyond, the capability to more accurately estimate CEPs became available at the analyst level. Two methods were developed

to exploit the use of computers and eliminate the need for tables: the Correlated Bivariate Normal (CBN) method and the infinite series expansion method.

In 1974, L. S. Simkins of John Hopkins University published an article entitled "Calculation of Circle of Equiprobability for a Biased, Correlated, Bivariate, Normal Distribution" [13:1]. Simkins used the capability of computers to exploit an earlier work done by DiDonato and Jarnagin, which reduced the double integration of the general bivariate normal distribution to a large algebraic expression with many terms.

...this procedure ...requires not that we calculate the probability, P, associated with a given [CEP], but that we find the [CEP] for which P = .50. An iterative procedure mentioned previously has been validated and usually converges after five to ten iterations (depending on the accuracy required, and upon the first estimate of [CEP]) [13:6].

The CBN method has three strong points and one weak point. First, the use of a computer eliminates the tedium of using tables. Second, the CBN nethod is generally more accurate than any of the methods that require the use of tables. It attains its level of precision by continuing to iterate until the proportion of the distribution contained within a circle of radius CEP does not differ from 0.5 by more then a user specified error limit. With specified error limits typically a small fraction of one percent, the CEP given by the CBN method is at least as accurate as the table interpolation methods. The third strong point of the CBN method is that it can handle bias, ellipticity, and correlation. Its one weak point is that it can take a considerable amount of computer time to calculate a CEP, depending upon the number of intervals the integral is broken into. Previous work using an 802S6-class personal computer showed that the CBN algorithm required 10 minutes for 40 intervals, 1 hour for 100 intervals, and 16 hours for 400 intervals [3:4-6]. "The more intervals the integral is broken into, the more accurate the approximation. At times the CBN takes longer than the exact method to give a CEP" [3:4-5]. This

assertion will be discussed further after presentation of the next and final numerical integration technique.

In 1984, C. C. Smith of the TRW Corporation presented a second numerical integration technique in her paper, "CEP Calculation Using Infinite Series" [15:1-7]. This technique became known as the exact method because "... it is the benchmark against which all the other approximation techniques were measured" [3:4-6]. The infinite series method requires an initial CEP estimate and then iterates the procedure until a CEP is found which gives a probability of 0.5 to within the user specified error limit. The infinite series expansion yields a CEP that is more accurate than the CBN method, but it generally takes more computer time [2:2-2]. Since the infinite series method is more accurate than the CBN method, the CBN method will not be discussed beyond this chapter. The infinite series method will be discussed in detail in Chapter 3.

Modern computers achieve greater accuracy than the table look-up techniques, but the CBN and infinite series methods are computationally intensive and require a great deal of computer processing time on a personal computer.

While numerical integration methods provide good estimates of CEP, and can be used to evaluate the accuracy of the other CEP approximation methods, they require considerable computer time, and are usually impractical in flight test analysis. [14:3]

Later in this chapter, a few algebraic CEP approximation methods will be discussed. They are very fast compared to the CBN and the infinite series methods [2:4-2,4-4,4-5]. The infinite series method will be used as the standard or benchmark to compare how well these algebraic methods estimate CEP, and hence, will be referred to as the $\epsilon xact$ method for the remainder of this study.

2.2.1.4 Algebraic Approximation of CEP. There are three noteworthy algebraic CEP estimation methods. These methods are called quick CEP estimation

methods because they produce estimates in about two seconds or less on an 80286-class personal computer [2:4-2,4-4,4-5]. "They are fast, accurate and require few assumptions" [14:4].

The first method is the modified RAND-234 method.

It is a mathematical expression for circular error probable that approximates the tabular R-234 probabilities mentioned earlier in this chapter. A least-squares fit to a third order polynomial was used to derive the CEP formula. [16:2]

The modified RAND-234 method will be discussed in detail in Chapter 3.

The second and third quick CEP estimation methods are similar. Both were originally presented in 1964 by Frank E. Grubbs in an article entitled "Approximate Circular and Noncircular Offset Probabilities of Hitting" [5:1]. His methods are designed to incorporate the following guidance:

For equal or unequal delivery errors and an offset point of aim, the chance that the burst point of a warhead occurs within a given distance of a selected point of the target is approximated by reference to weighted noncentral chi-square distributions. [5:1]

The two methods proposed by Grubbs are the Grubbs-Patnaik/chi-square method and the Grubbs-Patnaik/Wilson-Hilferty method. The two methods are similar in algebra and, therefore, give similar results. However, the Grubbs-Patnaik/chi-square method uses an inverse chi-square function based on the fact that the bias is a sum of noncentral chi-square random variables [2:3-2]. The incorporation of the inverse chi-square function into the Grubbs-Patnaik/chi-square method makes it generally more accurate than the Grubbs-Patnaik/Wilson-Hilferty method [2:4-8]. Since the Grubbs-Patnaik/chi-square method is usually the more accurate of the two Grubbs methods, only the Grubbs-Patnaik/chi-square method will be tested in Chapter 3.

2.2.1.5 Monte Carlo Sampling Methods. Another category of CEP estimation techniques includes the Monte Carlo sampling methods.

Monte Carlo sampling methods of CEP determination are used to calculate the probability of impact given a circle of known radius. As in the case of numerical integration, Monte Carlo methods require an iterative scheme of estimation and considerable computer time, rendering them impractical in flight test analysis, but a good measure in evaluating other CEP approximation methods [14:3].

None of the CEP approximation methods use Monte Carlo sampling methods, so there will be no further discussion of this topic.

2.2.2 Previous Work. The present project is an extension of three previous studies that analyzed several CEP calculation methods. The following discussion summarizes these studies, noting their objectives and contributions to the analysis of the CEP estimation methods.

In 1982, C. C. Smith of the TRW Corporation submitted a study entitled "Methods of CEP Calculation" to the Air Force [14:1]. It classified ICBM CEP calculation methods into a number of categories and described several methods in detail [14:1-9]. The paper included the results of comparing the three quick methods with each other while varying the parameters of bias, ellipticity, or correlation [14:11-13]. The underlying assumption of the analysis is a known bivariate normal density function. The strong point of the study is the graphical section which clearly presents the effects of varying one of the parameters while holding the other two constant. There are two weak points to the study. First, the effects of varying two or all three parameters simultaneously are not included in the analysis because it examined changes in only one parameter at a time. The second weakness was that the experiments did not consider sample size. With small sample sizes and varying data conditions commonplace in operational testing, further research to address these matters is warranted.

In 1986, Captain Rich Elder of the Air Force Institute of Technology (AFIT) expanded on Smith's study. His thesis answered the following question:

Given non-correlated sample impacts, how do common CEP approximation techniques (Grubbs-Patnaik/chi-square, Modified RAND-234, Grubbs-Patnaik/Wilson-Hilferty, or CBN) compare in accuracy and computational effort (measured by computer time) to the exact method (numerical integration) over the possible range of the parameters bias and ellipticity? [2:1-5]

There are three main differences between the two studies. Smith's study did not consider sample size, while Elder set the sample size at 40 and 400. The second difference was the emphasis Elder placed on personal computer processing time. Smith's study contains no information regarding computer processing time for any method. Third, the two studies present the results differently. The graphic presentation in Smith's study is easily understood. Elder listed his results in tables, which are more difficult to interpret. Concerning the objective of his thesis, Elder concluded:

In general it was found that each of the approximation techniques is best in some regime of the parameter space with the Grubbs-Patnaik/chi-square technique being the most reliable estimator. For fast calculations of CEP, the correlated bivariate normal and the exact method may not be feasible because both are computationally rigorous and require from 2 minutes to several hours of computer time (on a personal computer) to give an estimate of CEP. [2:viii]

Elder addresses two important points in his thesis. First, Elder presented valuable information in comparing the CEP methods with respect to personal computer processing time [2:4-2,4-4,4-5]. Second, his explicit discussion of sample size revealed that the Grice methods performed very well with sample sizes of 40 and 400 [2:2-5]. However, From Gid not address the effects upon the predictive accuracy of the quick CEP methods caused by simultaneously varying the parameters of sample size, bias,

ellipticity, and correlation. This important issue still needs to be analyzed by further research.

The third study addresses the issue of small sample sizes, but it is substantially different in purpose than the first two studies. In 1983, Major Ronald A. Ethridge wrote an Air Command and Staff College report entitled "Robust Estimation of Circular Error Probable for Small Sample Sizes" [3]. The paper developed and tested a robust estimation procedure for estimating CEP given small samples of miss-distance data [3:2]. A key advantage of robust estimation procedures is their relative insensitivity to underlying assumptions [3:21]. "[A] robust estimator attempts to use more of the information contained in the sample data than nonparametric estimators, while avoiding the assumption problems of parametric estimators by using a broad family of underlying distributions" [3:ix]. To show that his proposed estimator is robust, Ethridge uses the estimator property called efficiency.

Given two unbiased estimators, $\hat{\theta}_1$ and $\hat{\theta}_2$, of a parameter θ , with variances $V(\hat{\theta}_1)$ and $V(\hat{\theta}_2)$, respectively, the efficiency of $\hat{\theta}_2$ relative to $\hat{\theta}_1$ is defined to be the ratio

$$efficiency = \frac{V(\hat{\theta}_1)}{V(\hat{\theta}_2)}$$

If $V(\hat{\theta}_2) < V(\hat{\theta}_1)$, the $\hat{\theta}_2$ is a better unbiased estimator than $\hat{\theta}_1$. [9:390]

Ethridge used the property of efficiency as the measure-of-effectiveness in his tests. His paper begins by listing nine other CEP methods. Eight of these methods are parametric [3:5-18], and one of these methods is nonparametric [3:18-19]. The next portion of his report develops his proposed robust CEP estimator [3:21-28]. After presenting the nine CEP methods and his proposed robust CEP estimator, Ethridge discusses the experiment he used to analyze the efficiencies of the 10 CEP estimators listed in his report.

The test was a Monte Carlo study with the following elements:

- 1) Sample sizes of 5, 7, 9, 11, 13, 15, 17, 19, and 21
- 2) 2000 replications for each sample size
- 3) $\mu_x = \mu_y = 0$
- 4) Ellipticity values of .2, .4, .6, .8, 1.0
- 5) Correlation values of .4, .5, .6, .7 [3:29-35].

Ethridge concludes his report by stating:

No single estimation technique was judged "best" for all sample sizes and underlying distributions. Statistical tests of the underlying assumptions should be used to choose the most efficient estimator for the sample. For the "small deviations" tested in this study, the proposed estimator did prove to be robust. The maximum regret (loss in efficiency from best estimator) for the robust estimator was less than five percent. The estimator was also always more efficient than the sample median as an estimator of CEP. Since these two estimators were the only estimators considered in this study which are not based on a normal underlying distribution, the real savings from the robust estimator may come when the assumption of normality is violated. Little efficiency is lost when normality is present and much is gained if normality is violated. Therefore, the efficiency of this robust estimator should be tested for large deviations in the underlying assumptions. [3:x]

In his report, Ethridge emphasized the efficiency of CEP estimators. No attempt was made to show how well the CEP methods actually estimate CEP. A logical extension of Ethridge's report would be to assess the accuracy of Ethridge's new CEP estimator.

2.2.3 Extensions. Despite the contributions of Smith, Elder, and Ethridge, at least three issues remain unresolved. The first relates to how various combinations of bias, ellipticity, and correlation affect the accuracy of the CEP estimation methods.

The second unresolved issue concerns the effects of small sample sizes upon the accuracy of the quick CEP estimation methods. Smith did not address sample size,

and the smallest sample size Elder used was 40. Although Ethridge studied sample sizes as small as 5, his emphasis was on efficiency, not on the ability of a method to estimate CEP. This study will use the following five small sample sizes: 3, 5, 7, 10, and 15.

The third issue is the determination of the accuracy of Ethridge's new estimator. This study will analyze and document the accuracy results of the Ethridge estimator. These extensions of the previous studies should provide the information necessary to determine which CEP estimation method should be used during some specific test or study.

2.3 Summary

This chapter summarized the literature pertinent to this study. The chapter began with a brief overview of the general categories of ICBM CEP estimation methods. Each of the general categories was discussed in detail, and several important CEP estimation methods were introduced. The next section of the chapter high-lighted the previous research done to analyze the effects of independently varying sample size, bias, correlation, and empticity on the predictive accuracy of the quick CEP estimation methods. The chapter concluded with a discussion of the extensions of the previous research attempted in this study.

III. The Experiment

3.1 Purpose

The purpose of the experiment was to determine the accuracy and sensitivity of several ICBM CEP estimation methods, assuming that the underlying distribution of the accuracy data is bivariate normal. Since the important parameters of an empirical bivariate normal distribution are bias, ellipticity, and correlation, these parameters were set to several representative values that could possibly be observed in actual ICBM accuracy tests.

The intent of this study was not to find a specific optimal range of the parameters, as they are not under the control of the analyst. However, the results of this study should enable the analyst to determine which CEP estimation method would be most appropriate for a given set of parameter values. Appropriateness in this sense implies that the selected CEP estimation method has the least amount of relative error in the given parameter region.

3.2 The Mathematical Models

The experiment included the following five CEP estimation methods:

- 1) Infinite series expansion
- 2) Grubbs-Patnaik/chi-square
- 3) Modified RAND-234
- 4) Ethridge Estimator
- 5) CEP3

The mathematical models for each of these methods are given in this section, and the computer code implementing them is in Appendix B. Before presenting these models, some preliminary definitions common to all the models are given.

3.2.1 Preliminary Definitions. The coordinate system used to measure errors is the (x,y)-axis system centered on the aim point.

x = crossrange error axis
 (positive to the right of the aimpoint,
 negative to the left of the aim point)

y = downrange error axis
 (positive beyond the aim point,
 negative short of the aim point)

 $\tilde{x} = \text{crossrange sample mean, equation (3.1)}$

 $\bar{y} = \text{downrange sample mean, equation (3.2)}$

n = sample size

$$\bar{x} = \frac{\sum_{i=1}^{n} x_i}{n} \tag{3.1}$$

$$\bar{y} = \frac{\sum_{i=1}^{n} y_i}{n} \tag{3.2}$$

 S_x = sample standard deviation of crossrange errors, equation (3.3)

 $S_y = \text{sample standard deviation of downrange errors, equation (3.4)}$

$$S_x = \sqrt{\frac{\sum_{i=1}^n (x_i - \bar{x})^2}{n-1}}$$
 (3.3)

$$S_{y} = \sqrt{\frac{\sum_{i=1}^{n} (y_{i} - \bar{y})^{2}}{n-1}}$$
(3.4)

bias
$$(b) = \sqrt{\bar{x}^2 + \bar{y}^2}$$
 (3.5)

ellipticity
$$(\epsilon) = \frac{S_x}{S_y}$$
 (3.6)

$$correlation (\rho) = \frac{\sum_{i=1}^{n} (x_i - \bar{x})(y_i - \bar{y})}{\sqrt{\left[\sum_{i=1}^{n} (x_i - \bar{x})^2\right] \left[\sum_{i=1}^{n} (y_i - \bar{y})^2\right]}}$$
(3.7)

radial miss distance
$$(r_i) = \sqrt{x_i^2 + y_i^2}$$
 (3.8)

3.2.2 Infinite Series Expansion. This is the method referred to as the exact method. The method is defined in equation (3.9) and further explained in equations (3.10) to (3.12).

$$P(R) = \frac{R^2}{2} D \sum_{k=0}^{\infty} \sum_{j=0}^{\infty} x_k y_j \frac{(k+1)!(j+1)!}{(k+j+1)!}$$
(3.9)

where

P(R) = Probability of a circle of radius, R,
including a specified percentage of the scores.
In this case P(R) = 0.5 so that R = CEP.

$$D = \frac{1}{S_x S_y} exp \left[-\left(\frac{\bar{x}^2}{2S_x^2} + \frac{\bar{y}^2}{2S_y^2} \right) \right]$$
 (3.10)

$$x_k = \frac{(2k)!}{(k+1)!(k!)^2} \left(\frac{-R^2}{8S_x^2}\right)^k \sum_{l=0}^k \frac{k!}{(k-l)!(2l)!} \left(\frac{-2\bar{x}^2}{S_x^2}\right)^l$$
(3.11)

$$y_{j} = \frac{(2j)!}{(j+1)!(j!)^{2}} \left(\frac{-R^{2}}{8S_{y}^{2}}\right)^{j} \sum_{i=0}^{j} \frac{j!}{(j-i)!(2i)!} \left(\frac{-2\bar{y}^{2}}{S_{y}^{2}}\right)^{i}$$
(3.12)

For a more detailed discussion of this method, refer to Smith's article [15:1-16].

3.2.3 Grubbs-Patnaik/Chi-square. The CEP estimation method is defined in equation (3.13). Further definition of terms are given in equations (3.14) to (3.17).

$$CEP = \sqrt{\frac{kv}{2m}} \tag{3.13}$$

where

$$m = (S_x^2 + S_y^2 + \bar{x}^2 + \bar{y}^2) \tag{3.14}$$

$$v = 2(S_r^4 + 2\rho^2 S_r^2 S_r^2 + S_y^4) + 4(\bar{x}^2 S_r^2 + 2\bar{x}\bar{y}\rho S_x S_y + \bar{y}^2 S_y^2)$$
(3.15)

$$k = \chi^{-1}(0.5) \tag{3.16}$$

$$df = \frac{2m^2}{v} \tag{3.17}$$

The $\chi^{-1}(0.5)$ in equation (3.16) is the inverse of the chi-square density function with $2m^2/v$ degrees of freedom at the cumulative probability setting of 0.5 [2:3-3]. For a more detailed description of this method, refer to Elder's thesis [2:3-2,3-3].

3.2.4 Modified RAND-234. This CEP estimation method is defined in equation (3.18). The terms are further defined from equation (3.19) to (3.22).

$$CEP = CEP_{MPI}(1.0039 - 0.0528v + 0.478v^2 - 0.0793v^3)$$
 (3.18)

where

 $CEP_{MPI} = CEP$ centered on the mean point of impact

$$CEP_{MPI} = 0.614S_S + 0.563S_L (3.19)$$

 S_S = smaller of the two standard deviations

 $S_L = larger$ of the two standard deviations

$$S_S = \sqrt{\frac{S_x^2 + S_y^2 - \sqrt{(S_x^2 - S_y^2)^2 + 4\rho^2 S_x^2 S_y^2}}{2}}$$
(3.20)

$$S_L = \sqrt{\frac{S_x^2 + S_y^2 + \sqrt{(S_x^2 - S_y^2)^2 + 4\rho^2 S_x^2 S_y^2}}{2}}$$
(3.21)

$$v = \frac{bias}{CEP_{MPI}} \tag{3.22}$$

For a more detailed description of this method, refer to Elder's thesis [2:3-4,3-5].

3.2.5 CEP3. This simple CEP estimation method is defined in equation (3.23).

$$CEP = .9394 \left(\frac{\sum_{i=1}^{n} r_i}{n} \right)$$
 (3.23)

For a more detailed description of this method, refer to Ethridge's ACSC report [3:10-11].

3.2.6 Ethridge Estimator. This CEP estimator is defined in equation (3.24). Further details of the terms are found in equations (3.25) to (3.30).

$$CEP = e^{\dot{\mu}} \tag{3.24}$$

where

$$\hat{\mu} = \sum_{i=1}^{n} w_i t_i \tag{3.25}$$

$$w_i = \frac{\frac{1}{d_i}}{\sum_{i=1}^{n} (\frac{1}{d_i})} \tag{3.26}$$

$$d_i = max[1 - \frac{(.03)(k_s - 3)^3(t_i - \dot{t})^2}{s^2}, 0.01]$$
 (3.27)

 $k_s = \text{sample kurtosis}$

$$k_s = \frac{n\sum_{i=1}^{n} (t_i - \bar{t})^4}{\left[\sum_{i=1}^{n} (t_i - \bar{t})^2\right]^2}$$
(3.28)

$$\bar{t} = \frac{\sum_{i=1}^{n} t_i}{n} \tag{3.29}$$

$$t_i = \ln(r_i) \tag{3.30}$$

 $t_i = \text{natural logarithm of the } i^{th} \text{ radial error}$

 $\dot{t}=\mathrm{sample}\;\mathrm{median}$

 s^2 = sample variance of the natural logarithms of radial errors

For a more detailed description of this method, refer to Ethridge's ACSC report [3:23-27].

3.3 Parameters

The assumption of this thesis is that the underlying distribution of ICBM test data is the bivariate normal density function. The parameters that describe the location and shape of this function are bias, ellipticity, and correlation. A density plot of ideal test data would look like a circle centered on the origin of the (x,y)-axis system. If the test data are biased, the density plot would be centered at a position on the (x,y)-axis system other than the origin. The further the density plot is from the origin, the greater the bias. The other two parameters, ellipticity and correlation, describe the shape of the density plot. Even though a circle is a special case of an ellipse with equal major and minor axes, the density plot will be considered elliptical in this study when its shape is oval. If the density plot is elliptical and the major and minor axes do not coincide with the x-axis or the y-axis, the downrange and crossrange scores which make up the density plot are correlated. A density plot which is biased, elliptical, and correlated can be thought of as an ellipse whose major and minor axes do not coincide with the x-axis or the y-axis and whose center is not at the origin.

The true values of bias, ellipticity, and correlation can be estimated accurately for large sample sizes. However, in the case of sample sizes of 15 or less, accurately estimating the values of bias, ellipticity, and correlation is nearly impossible. Thus, CEP estimation requires methods that are not sensitive to moderate deviations from the ideal condition of unbiased, circular accuracy distributions.

This experiment determined the relative errors of the CEP estimation methods for a variety of departures from the ideal case. The parameters of sample size, bias, ellipticity, and correlation were set to several different levels to produce 875 design points. The specific parameter settings are listed in the next section.

3.4 Test Design Points

There are a total of 875 test design points. Each point represents a unique combination of the values of sample size, bias, ellipticity, and correlation. In distributional terms, each point represents a unique density plot with respect to shape, location, and orientation. The values of the different parameters are listed in Ta-

ble 3.1. Each of the 875 test design points is made of a unique combination of the values listed in Table 3.1.

Table 3.1. Parameter Values for Experiment

Sample sizes	3, 5, 7, 10, 15
	0, .25, .5, .75, 1, 1.5, 2
Ellipticity	.2, .4, .6, .8, 1
Correlation	0, .4, .7, .85, 1

3.5 Data

In order to analyze the accuracy of the CEP estimation methods, sample data for each of the 875 design points was generated. Each of the methods produced CEP estimates from this data, with the *exact* method being the standard for determining the accuracy of the other four methods. The measure of accuracy used in this study is relative error (RE) as calculated in equation (1.1). The remainder of this chapter discusses the process of generating sample data, the procedures taken to verify sample data, and the methods used to calculate and record the REs.

3.5.1 Generation of Sample Data. The process of generating sample data required two steps. First, a random number generator was used to produce 10,000 sample (x,y)-scores based on an ideal bivariate normal density function. The random number generator was part of the SLAM II simulation language developed by Pritsker & Associates [11:vii]. The parameter settings of the random number generator were a mean of zero and a standard deviation of one. The 10.000 sample scores were put into a data file and formed the basis for generating the scores for the 875 design points. The second step of the data-generating process involved transforming the scores in the file to reflect the different data characteristics of the 875 design points. A computer program written in the C programming language performed the data transformation. All of the C programs in this study were developed on

the author's CompuAdd 386-SX personal computer using the Borland International C++ compiler.

The C program that performed the second step in the above process was part of a series of C programs linked together in a batch file. This series of C programs not only performed the second step of transforming the scores for the 875 test design points, but it also proceeded to calculate the CEP estimates for each of the methods. The C programs in the batch file serially performed the following three steps for each of the 875 design points:

- Step 1: Generate 10,000 (x,y)-scores from an ideal bivariate normal density function.
- Step 2: Transform scores to reflect the data characteristics of the 875 test design points.
- Step 3: Input the transformed scores into the CEP estimation methods to calculate CEPs.

The SLAM II program written to perform Step 1 is listed in Appendix A. The C programs which perform Step 2 and Step 3 are listed in Appendix B. The batch file that linked the programs together is listed at the end of Appendix B.

3.5.1.1 Verification and Validation of Random Number Generator. The 10,000 (x,y)-scores were produced by combining two random number streams of 10,000 numbers each. Two different seeds were used in the random number generator to produce the two different streams of numbers. As mentioned above, the source code necessary to produce these two random number streams is listed in Appendix A. With a knowledge of and access to a SLAM II software package, verification of the source code in Appendix A can be accomplished by simply typing the program and running it.

The validation of the two random number streams was done with a C program. Appendix C contains the source code of this program, which calculates the

means, standard deviations, and cumulative probabilities of the two random number streams. Table 3.2 summarizes the output of the program. Column 1 gives the

Table 3.2. Standard Normal Cumulative Probabilities

(1)	(2)	(3)	(4)
1 ,	` '	` '	\
Upper	Expected	Cumulative	Cumulative
Bound of	Cumulative	Probabilities	Probabilities
Interval	Probabilities	for Stream 1	for Stream 2
-3.0	0.0014	0.0010	0.0011
-2.5	0.0062	0.0063	0.0058
-2.0	0.0228	0.0221	0.0227
-1.5	0.0668	0.0648	0.0673
-1.0	0.1587	0.1610	0.1594
-0.5	0.3085	0.3064	0.3085
0.0	0.5000	0.4919	0.5025
0.5	0.6915	0.6873	0.6906
1.0	0.8413	0.8367	0.8396
1.5	0.9332	0.9322	0.9355
2.0	0.9772	0.9759	0.9767
2.5	0.9938	0.9931	0.9937
3.0	0.9986	0.9988	0.9995
+∞	1.0000	1.0000	1.0000
Mean	0.0000	0.0141	0.0002
Std Dev	1.0000	1.0052	0.9986

upper bounds of the interval, column 2 gives the expected cumulative probabilities of the intervals [9:760], column 3 gives the cumulative probability of stream 1, and column 4 gives the cumulative probabilities of stream 2. The results in Table 3.2 show that the two random number streams perform to expectation almost perfectly. Note the two bottom rows of Table 3.2. The last two rows of Table 3.2 list the means and standard deviations of the two random number streams. By definition, a standard normal distribution has a mean of zero and a standard deviation of one. Both stream 1 and stream 2 have means and standard deviations of approximately zero and one respectively. The logical conclusion pertaining to the data listed in

Table 3.2 is that the SLAM II random number generator produced valid standard normal random number streams.

3.5.1.2 Correlation Study of Input Data. The previous section verified that the two random streams were distributed normally with means of zero and standard deviations of one. This section examines the correlation between the two data streams. Since the simulated downrange and crossrange data was composed of merging the two data streams, it is important to show that there is no correlation between the two streams of random numbers. When the two streams of random numbers are not correlated, the observed correlations are due to the correlation induced by the experiment and to random variations.

Two C programs were written for this cerrelation study. Both programs are included in Appendix D. Table 3.3 displays the results of examining 1000 randomly generated pairs of standard normal deviates.

The data reveal that the correlation between the 1000 pairs of points is zero. If the larger sample sizes yielded correlations other than those close to zero, it would indicate that the two data streams were correlated. Similarly, the average correlation for smaller sample sizes is also approximately zero. The negligible average correlations for all sample sizes imply that the assumption of independent random numbers is a reasonable one. However, there are observations of higher correlations as sample size decreases, especially when the sample size is 10 or less. The higher correlations with the smaller sample sizes are presumably the result of random chance. Despite these random correlations, average correlation observed for each sample size is approximately zero. Thus, the generated pairs of points appear to be uncorrelated, but relatively high random correlations may occur in actual or simulated data when the sample size is small.

3.5.1.3 Determination of Sample Size. The decision to use 10,000 scores for this experiment was based upon the results of confidence interval analysis. The

Table 3.3. X,Y Correlation Analysis

Range	5	10	20	50	100	500	1000
(.9,1)	2	0	0	0	0	0	0
(.8,.9)	6	0	0	0	0	0	0
(.7,.8)	10	2	0	0	0	0	0
(.6,.7)	10	3	0	0	0	0	0
(.5,.6)	12	.1	1	0	0	0	0
(.4,.5)	7	5	2	0	0	0	0
(.3,.4)	15	11	4	1	0	. 0	0
(.2,.3)	14	9	7	3	1	0	0
(.1,.2)	7	11	5	4	2	0	0
(0,.1)	17	6	6	2	3	1	1
(1,0)	10	8	5	3	1	1	0
(2,1)	15	4	7	2	2	0	0
(3,2)	12	8	6	4	1	0	0
(4,3)	9	14	4	1	0	0	0
(5,4)	12	9	3	0	0	0	0
(6,5)	14	4	0	0	0	0	0
(7,6)	6	2	0	0	0	0	0
(8,7)	10	0	0	0	0	0	0
(9,8)	7	0	0	0	0	0	0
(-1,9)	5	0	0	0	0	0	0
Mean	02	.00	.00	.01	.01	.01	.00

reason for using a large sample size was to reduce the variance of the estimates of the mean CEP for a given technique and set of experimental conditions. The experiment would not produce useful results if estimates for the mean CEP had large confidence intervals, which would impair the ability to discriminate between alternative approximation techniques. The following mathematical statements define the lower and upper confidence bounds for the mean CEP estimate.

$$Lowerbound = \overline{CEP} - z_{(1-\alpha/2)} * \sqrt{\frac{\sum_{i=1}^{n} (CEP_i - \overline{CEP})^2}{n(n-1)}}$$
(3.31)

$$Upperbound = \overline{CEP} + z_{(1-\sigma/2)} * \sqrt{\frac{\sum_{i=1}^{n} (CEP_i - \overline{CEP})^2}{n(n-1)}}$$
(3.32)

where

n = number of CEPs in analysis

 CEP_i = the CEP for observation i

 \overline{CEP} = mean CEP

 $\alpha =$ level of confidence

 $z_{(1-\alpha/2)}$ = the standard normal statistic for

half of the confidence level

The lower and upper bounds above define the confidence interval for the estimate of the mean CEP. As the number of CEPs included in the analysis approaches infinity, the lower and upper bounds would converge to the mean CEP. However, to conduct this experiment on the available computer within reasonable time limits, a finite number of CEPs had to be chosen. Obviously, the sample size had to be small enough for the computer to handle, but large enough to generate acceptable confidence intervals. An examination of the confidence interval half-width provided the basis to strike a compromise between sample size and precision. Half-width for

the mean CEP is defined in equation (3.33).

$$Half - width = z_{(1-\alpha/2)} * \sqrt{\frac{\sum_{i=1}^{n} (CEP_i - \overline{CEP})^2}{n(n-1)}}$$
 (3.33)

The half-width is one-half of the confidence interval. A desired objective for this experiment was to use a number of CEPs which made the half-width one foot or less. If this objective could not be attained, then the secondary objective was to use a large enough sample to make the half-width less than one percent of the mean CEP. Since the mean CEP for the ideal case should be around 1000 for each method, the half-width under the secondary objective should be 10 or less.

Table 3.4 lists the mean and half-width of CEP estimates obtained by applying the Grubbs-Patnaik/chi-square method to data sets of varying sample sizes. Notice

Table 3.4. Half-width Analysis

Sample	Half-	Mean
Size	Width	CEP
2000	0.853	956.24
4000	0.034	952.98
6000	0.797	955.53
8000	0.739	960.90
10000	0.342	961.16
12000	0.174	960.60
14000	0.161	963.26
16000	0.097	958.95
18000	0.364	958.19
20000	0.056	958.95

in Table 3.4 that the half-width is less than one for each of the sample sizes listed. Figure 3.1 shows a plot of the half-width as a function of sample size. Since the primary goal was to determine the sample size where half-width is less than one foot, the goal could likely be attained with a sample size of 2,000 or more.

Figure 3.1. Half-width as a Function of Sample Size

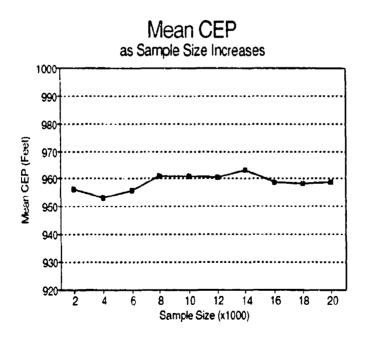


Figure 3.2. Mean CEP as a Function of Sample Size

The plot of this data in Figure 3.2 reveals that the mean CEP estimates do not vary much as sample size increases. In fact, beyond a sample size of 8,000, there is little change in the mean CEP estimates. From the data in Table 3.4, Figure 3.1, and Figure 3.2, it appeared that a sample size of 10,000 (x,y)-scores should be adequate to conduct the experiment. The mean CEP estimates are stable and the 95 percent confidence interval is within less than one-tenth of one percent of the mean CEP.

3.5.2 Method of Data Collection. The computer programs used to generate the data for this experiment are listed in Appendix B. They yielded mean CEP and relative error values for each approximation technique at each design point. Tables of these results are provided in Appendices E and F.

IV. Analysis and Discussion of Results

4.1 Results

The results of the experiment are listed in Appendices E, F, and G. Appendix E lists the CEP estimates produced by each method for each of the 875 test points. The relative errors of these estimates are included in Appendix F. Multiplying the relative errors by 100 would give the percent deviation from the CEP calculated by the exact method. Appendix G compares the estimates at each test point by assigning a letter grade to each of them. These grades indicate the magnitude of the relative error associated with each est:

""". The grades progress from "A" to "G", with "A" representing the least relative error and "G" representing the largest relative error.

4.1.1 Statistical Summary. Table 4.1 summarizes some of the sample statistics for the absolute values of the relative errors listed in Appendix F. It lists the

Table 4.1. Sample Statistics of Absolute Relative Errors

Method	Mean	Std Dev	Min	Max	Range
Grubbs	0.061	0.054	0.000	0.346	0.346
Rand	0.132	0.065	0.010	0.291	0.281
Eth	0.133	0.066	0.002	0.324	0.322
CEP3	0.038	0.031	0.000	0.117	0.117

mean, standard deviation, minimum, maximum, and corresponding range of the absolute values of the relative errors for each method. Absolute values were used in the table because the magnitude of the relative error, rather than its sign, was of interest. Based on the absolute value of the minimum and maximum values, the Grubbs method has errors as great as 34.6%; the Rand method, 29.1%; the Ethridge method, 32.4%; and the CEP3 method, 11.7%. The standard deviations of the absolute values of the relative errors are comparable, but the means are noticeably

different. The CEP3 method has a mean absolute relative error of 3.8%; Grubbs, 6.1%; Rand, 13.2%; and Ethridge, 13.3%. The information in Table 4.1 is not conclusive in any particular matter; but, the relatively small means of the CEP3 and Grubbs methods tend to indicate a possible overall dominance over the other two methods in the parameter space of this test.

4.1.2 Frequency Summaries. The following two tables and corresponding figures summarize the important data listed in Appendix G. Table 4.2 and Figure 4.1 show the frequency that each method ranked first, second, third, and fourth in terms of lowest relative error for each of the 875 test points. Although every method is the

Table 4.2. Frequencies of Rankings

Method	First	Second	Third	Fourth
Grubbs	265	371	164	75
Rand	37	81	374	383
Eth	27	131	300	417
CEP3	546	292	37	Û

best for some of the test points, either the CEP3 or Grubbs method is best for most of them.

Table 4.3 and Figure 4.2 summarize the quality of the 875 CEP estimates for each method. As mentioned earlier, the letter grades correspond to the magnitude of the relative errors. A grade of "A" represents the smallest relative errors and "G" the largest.

The data reveals that all of the methods yield "A" quality estimates for some test points. Furthermore, the CEP3 and Grubbs methods produce more estimates with less than 10% relative error and fewer with greater than 10% relative error than the other two methods. Thus, the CEP3 and Grubbs methods are generally superior to the other two in terms of the ranking and quality of their estimates.

Frequency of Rankings

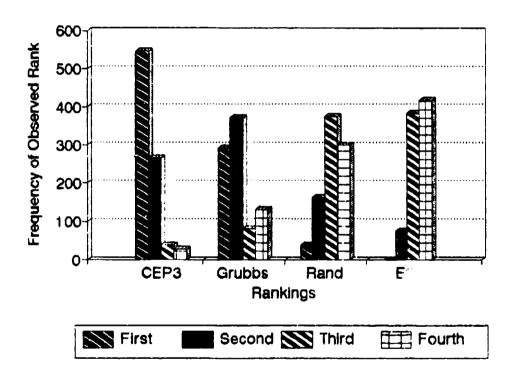


Figure 4.1. Frequencies of Rankings

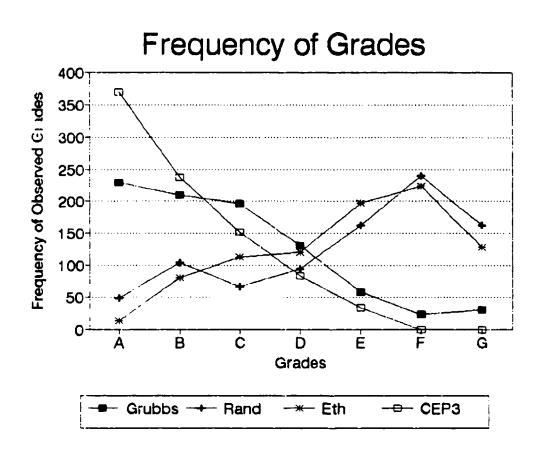


Figure 4.2. Frequency of Grades

Table 4.3. Frequency of Grades

Grade	Relative Error Range	Grubbs	Rand	Eth	CEP3
A	$0\% \rightarrow 2.5\%$	229	49	14	370
В	$2.5\% \rightarrow 5\%$	209	103	80	237
C	$5\% \rightarrow 7.5\%$	196	66	113	151
D	$7.5\% \rightarrow 10\%$	130	93	120	83
E	$10\% \rightarrow 15\%$	58	162	197	34
F	$15\% \rightarrow 20\%$	23	240	223	0
G	$20\% \rightarrow 40\%$	30	162	128	0

4.1.3 SAS Results. SAS is the statistical software package that was used to analyze the relative errors of each method [12]. The goal of the SAS analysis was to determine the sensitivities of each of the methods to sample size, bias, ellipticity, and correlation.

The first statistic of interest is the Pearson Correlation Coefficient. This correlation coefficient ranges from minus one to plus one. If the value of the coefficient is near zero, it indicates little or no linear relationship between two parameters. If the value of the coefficient is near plus or minus one, it indicates a strong linear relationship between two parameters. Table 4.4 summarizes the Pearson correlation coefficients for each of the method's relative errors versus the four parameters of sample size, bias, ellipticity, and correlation. Table 4.4 shows that sample size has

Table 4.4. SAS Pearson Correlation Coefficients

Method	Sample Size	Bias	Ellip	Corr
Grubbs	-0.174	-0.315	-0.388	-0.329
Rand	-0.138	0.872	-0.166	0.037
Eth	-0.749	-0.152	0.394	-0.317
CEP3	0.001	-0.567	0.150	-0.567

no relationship with the relative errors from CEP3, and that correlation has a very small relationship with the relative errors from the Rand method. On the other

hand, there is a stong relationship between bias and the relative errors from the Rand method, and between sample size and the relative errors from the Ethridge method. One last important point to note about the correlation analysis that is not listed in Table 4.4 is that the correlation coefficients between each of the parameters are zero for all four methods. This zero correlation between the parameters means that covariance is zero and, therefore, does not have to be addressed.

The next SAS statistics of interest are the Type I and Type II sums of squares. The model sums of squares are broken down into the sums of squares that each parameter contributes to it. The Type I sums of squares are the extra sums of squares that each parameter adds to the model sums of squares given that the previously listed parameters are already in the model. Since there is no correlation between any of the parameters, the order that the parameters are listed does not affect the Type I sums of squares.

The Type II sums of squares are the partial sums of squares that a parameter contributes to the model sums of squares, given that all of the other parameters are in the model. Since there is no correlation between the parameters, the partial sums of squares for each parameter are not dependent on which parameters are already in the model. Having zero correlation between the parameters means that the Type I and Type II listings of the sums of squares are equal. Since the Type I and Type II sums of squares are the same for the analysis, only Type I sums of squares will be given in Table 4.5. The important point to note about Table 4.5 is that within each

Table 4.5. Type I Sums of Squares

Method	Sample Size	Bias	Ellip	Corr
Grubbs	0.100	0.330	0.499	0.359
Rand	0.071	2.849	0.104	0.005
Eth	2.150	0.089	0.594	0.386
CEP3	0.000	0.513	0.036	0.512

row, some numbers are noticeably larger than the others. The larger numbers in

each row indicate the corresponding parameters that explain a substantial degree of the variation in the model's predicted response. For example, the level of bias in the data is the predominant factor for the Rand method. On the other hand, the Ethridge estimator appears to be most sensitive to sample size.

The next operation SAS performed was a stepwise regression study to determine which parameters were significant at the 0.01 level. Table 4.6 shows that all

Table 4.6. Stepwise Regression Summary

Method	Sample Size	Bias	Ellip	Corr
Grubbs	YES	YES	YES	YES
Rand	YES	YES	YES	NO
Eth	YES	YES	YES	YES
CEP3	NO	YES	YES	YES

the parameters are significant in the regression models except sample size for CEP3 and correlation for Rand.

The final SAS statistic of interest is the model R^2 value, given that the parameters are included as shown in Table 4.6. The model R^2 values listed in Table 4.7 represent the percent of the total variation accounted for by the parameters in the

Table 4.7. Model Correlation Coefficients

Method	Model R^2
Grubbs	0.3883
Rand	0.8071
Eth	0.8406
CEP3	0.6664

model. Note that the R^2 values given here represent the ratio of the model sums of squares to the total sums of squares uncorrected for the mean. A low R^2 , such as 0.3883 for the Grubbs method indicates that over 60% of the variation in the total model is due to randomness, assuming that the regression model is linear. Even

with four significant parameters in the Grubbs regression, the overall model explains 38.83% of the total variation in the observed response. This low percentage indicates a lack of sensitivity of the Grubbs method to systematic changes in the four parameters. The CEP3 model explains 66.64% of the total variation, which indicates a moderate sensitivity to cha. ges in its three significant parameters. Both the Rand and Ethridge models explain over 80% of the total variation in their corresponding responses, which indicates a strong sensitivity of their relative errors to changes in at least one of the parameters.


4.1.4 Summary of Results. Examining the data in Appendices E, F, and G revealed that the relative errors of the CEP3 and Grubbs methods are usually less than 10% and are consistently lower than those of the Rand and Ethridge estimators. However, each method is the best in some parameter region, and no method totally dominates the others. Each method also exhibits differing levels of sensitivity to changes in the four parameters. The Rand method is very sensitive to changes in bias, while the Ethridge method is very sensitive to changes in sample size. The CEP3 method is equally sensitive to changes in bias and correlation, and the Grubbs method is not particularly sensitive to changes in any of the parameters.

4.2 General Trends

Appendix G lists the best CEP method for each parameter region. Overall, the CEP3 method is the best 546 times, and the Grubbs method is the best 265 times for a combined total of the two methods being the best for 811 out of the 875 test points. In general, bias was the most significant parameter affecting which method was the best. For bias settings of 0, .25, .5, .75, and 1, the CEP3 method was usually the best regardless of the other parameter settings. For the bias setting of 1.5, both CEP3 and Grubbs were always the best, but neither dominated the other. For the bias setting of 2, the Grubbs method was usually the best regardless

of the other parameter settings. The following sections discuss the general trends of each method.

- 4.2.1 CEP3. The CEP3 method ranked first or second 838 times out of the 875 test points. Of its 875 relative errors, 607 were less than 5%. Figure 4.3 shows some of the relative errors as a function of the annotated parameter settings. The figure highlights the methods's sensitivity to bias. The top portion of Figure 4.3 shows an interaction between bias and correlation. The effect of correlation is different at different levels of bias. Comparing the top and bottom portions of Figure 4.3 indicates an interaction between ellipticity and correlation. Correlation has a different effect based on the level of ellipticity. When bias is 0, .25, .5, .75, or 1, the relative errors are less than 5% for all other parameter settings except for when ellipticity is .2 or .4. When bias is 1.5 or 2, the relative errors are all greater than 5% for all parameter settings except when ellipticity equals one. In general, the CEP3 method is insensitive and accurate for all parameter settings given that bias is 0, .25, .5, .75, or 1.
- 4.2.2 Grubbs. The Grubbs method ranked first or second 636 times out of the 875 test points. Of its 875 relative errors, 438 were less than 5%. Figures 4.4 to 4.7 show some of the relative errors as a function of the annotated parameter settings. Figures 4.4 and 4.5 reveal that the Grubbs method is more accurate for larger values of bias. A comparison of the two figures reveals that the Grubbs method performs better with large sample sizes. Examining Figure 4.4 alone also indicates that the Grubbs method is more accurate for larger values of ellipticity, that is, a more circular distribution, when sample size is small. Figures 4.6 and 4.7 both show that the method is more accurate for higher levels of correlation. Comparing Figures 4.6 and 4.7 implies, once again, that the Grubbs method performs better with larger sample sizes. Examining Figures 4.4 to 4.7 indicates that a number of interaction terms such as correlation and bias may be significant. The Grubbs

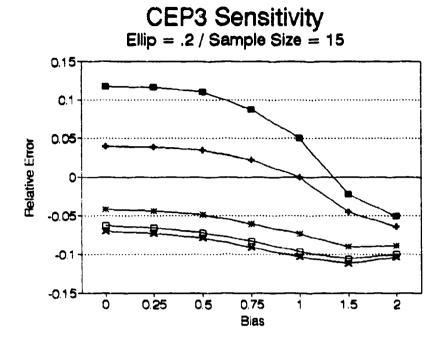

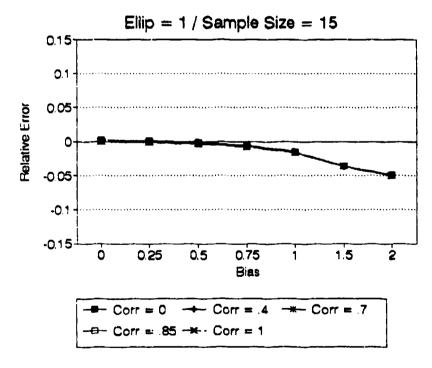
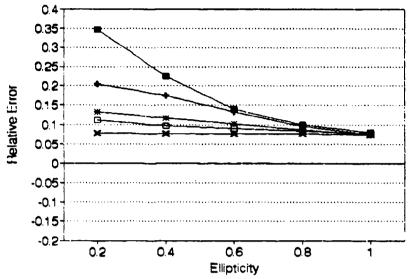


Figure 4.3. CEP3 Sensitivity Analysis





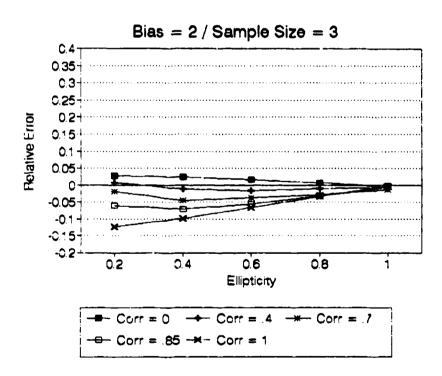
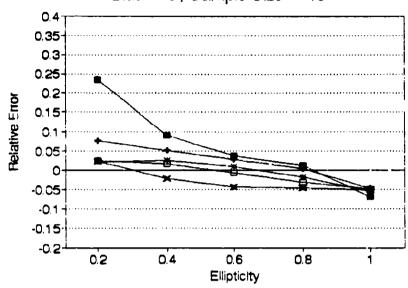


Figure 4.4. Grubbs Sensitivity Analysis - Part 1

Grubbs Sensitivity Bias = 0 / Sample Size = 15



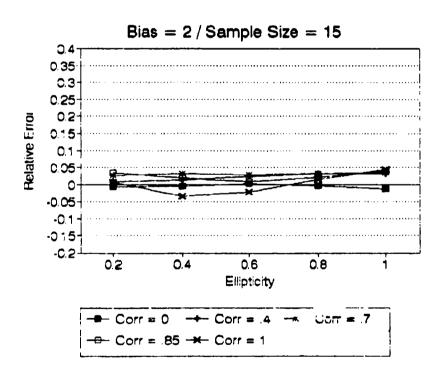
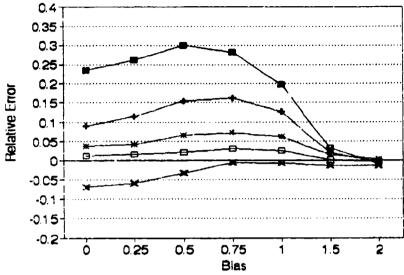


Figure 4.5. Grubbs Sensitivity Analysis - Part 2





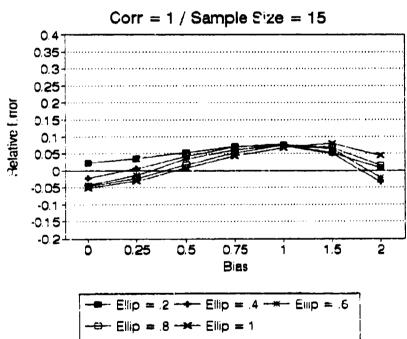
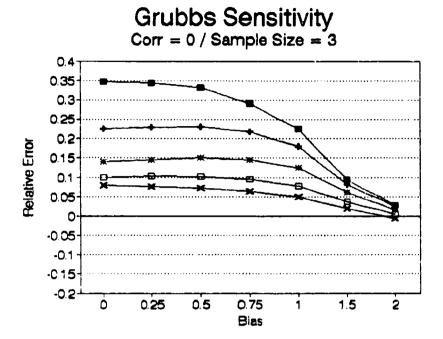


Figure 4.6. Grubbs Sensitivity Analysis - Part 3



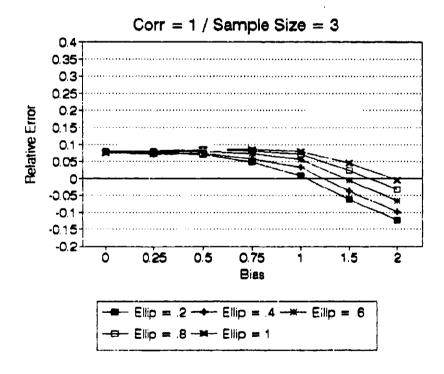


Figure 4.7. Grubbs Sensitivity Analysis - Part 4


method is most accurate when correlation is near 1, sample size is near 15, and bias is near 2.

- 4.2.3 Rand. The Rand method ranked first or second 118 times out of the 875 test points. Of its 875 relative errors, 152 were less than 5%. Figure 4.8 shows some of the relative errors as a function of the annotated parameter settings. The figure highlights this method's sensitivity to bias. The method is accurate in the parameter regions of low bias and large sample size; specifically, when bias is 0, .25, and .5, and when sample size is 10 and 15. The parameter values of ellipticity and correlation have a negligible influence on the relative errors produced by this method. The method is not generally accurate in any other parameter region.
- 4.2.4 Ethridge. The Ethridge method ranked first or second 158 times for the S75 test points. Of its 875 relative errors, 94 were less than 5%. Figures 4.9 and 4.10 show some of the relative errors as a function of the annotated parameter settings. The figures highlight this method's sensitivity to sample size and ellipticity. In general, this method has small relative errors and appears to be unbiased only when sample size is three or five, ellipticity is close to one, bias is close to zero, and correlation is close to zero.

4.3 Problems Encountered

Several problems surfaced during this experiment. Some of these problems were minor and others were fundamental to impacting the success of the experiment. Each of these problems is addressed below.

4.3.1 Random Number Generator This experiment used random numbers from the SLAM II simulation package. An earlier attempt was made to produce a portable personal computer based random number generator. The portable random number generator would have freed this experiment from any necessity to use the

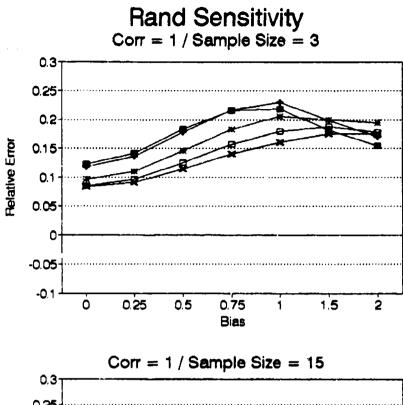

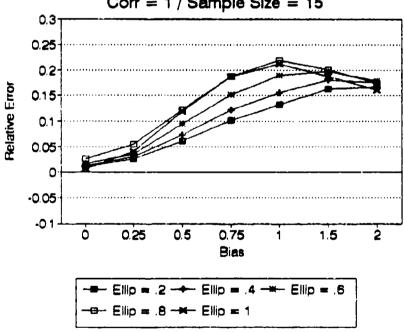


Figure 4.8. Rand Sensitivity Analysis

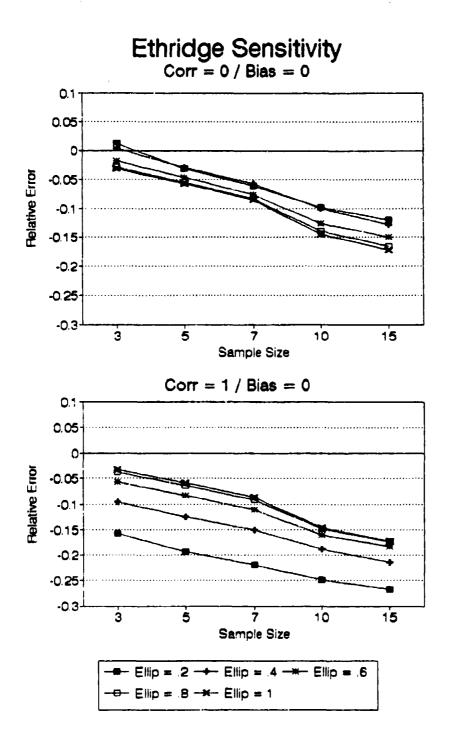


Figure 4.9. Ethridge Sensitivity Analysis - Part 1

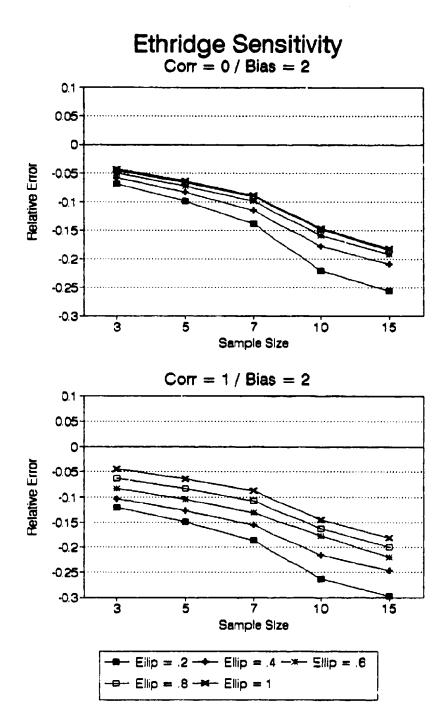


Figure 4.10. Ethridge Sensitivity Analysis - Part 2

larger mini or mainframe computers. A random number generator was written in the C programming language on the author's personal computer. During the verification and validation process, it was found that the variates produced by the random number generator did not represent the distributions which they were trying to simulate. This attempt was abandoned and the SLAM II random number generator was adopted.

4.3.2 Shortcomings of the Infinite Series Expansion Method. One problem was encountered while implementing this method concerning the determination of the summation limits of j and k in equation (3.9). Since the summation limits of j and k are theoretically $+\infty$, the computer implementation required the specification of limits to stop the summations when a tolerance limit was reached. For most test points, 10 was an adequate limit. Certain mixes of parameter values such as ellipticities of .4 or .2 coupled with a correlation of zero, required higher limits of j and k. This mix of ellipticities and correlation for biases of one or less required j and k to be set to 40. As bias increased to two, the required limits of j and k were as high as 90 for the mix of ellipticity less than .4 and correlation of zero.

Previous research suggested that the infinite series method produces inaccurate results or fails to converge for ellipticity values of .2 or less [2:4-7]. Consequently, all of the results were verified with the MathCAD mathematical software package [7] on a SUN computer at the Air Force Institute of Technology. MathCAD provided the ability to numerically integrate the functional form of the bivariate normal density function directly. There were no convergence problems with MathCAD, and all answers were calculated in 15 seconds of less. The results from MathCAD were identical to the results of the infinite series expansion method for values of ellipticity of .2, .4, .6, .8, and 1.

4.3.3 Grubbs Method. One problem was encountered while implementing the Grubbs method. This problem involved equation (3.15) and its impact on equations

(3.13) and (3.17). The value of v must be positive or else it would cause a negative value within the square root of equation (3.13), and a negative number of degrees of freedom in equation (3.17). There were a few test scores which produced large negative values for \bar{y} in equation (3.15). The large negative \bar{y} 's caused v to be negative, resulting in computer errors. Computer code was added to check for negative values of v, and to reverse the sign when this condition was found. This code solved the problem, but further research should look into the shortcoming of the model in this area, and whether there is any significant impact on the accuracy of this model caused by the reversal of the sign of v when this condition is encountered.

V. Conclusions and Recommendations

5.1 Conclusions

The objective of this study was to determine the relative errors of the various quick CEP estimation methods under a number of combinations of small sample sizes, bias, ellipticity, and correlation. This study, in essence, computed the points of a coarse grid response surface. This information should provide ICBM accuracy analysts a better understanding of the sensitivities of these methods to different combinations of data characteristics. The analyst can calculate preliminary statistics from the test data, and then use the results of this study to see which CEP method is the best in the given parameter region.

The results of the experiment give both general and specific guidance on choosing which CEP method is best in a given parameter region. In general, although three to four main effects are significant for each method, RE is primarily determined by one or two parameters. With few exceptions, the best method is solely a function of the setting of bias. The CEP3 method is the method of choice when bias is 0, .25, .5, .75, or 1, independent of the values of the other parameters. The Grubbs method is generally the most accurate method for the bias setting of 2 independent of the values of the other parameters. Beyond this general guidance, information was provided to help the analyst see the dynamics of each CEP method to assess their sensitivities to different combinations of parameter settings. Several plots were shown to observe the interaction effects of the parameters. Since there are some parameter regions where the general rule concerning bias does not hold, evaluating RE at different combinations of parameter levels is important to be certain that the best method is chosen for the given test data.

Overall, the CEP3 and Grubbs methods are superior to the other two methods. In the few cases where the Rand and Ethridge methods were the best, the CEP3 or Grubbs methods were almost as good. All of the resultant data from the experiment are listed in the appendices as a resource for the analyst. A more detailed analysis of the performance of the CEP methods in a given parameter region can be performed as desired.

An important issue regarding the general objective of this study dealt with the ability to accurately estimate CEP for small sample sizes. The sample sizes of 3, 5, 7, 10, and 15 were thoroughly analyzed as one of the parameters of the experiment. Both the CEP3 and the Grubbs methods performed very well for each of the sample sizes, given the levels of bias specified for each method.

The graphical analysis of the accuracy of the CEP approximation methods revealed the possible existence of significant two-factor interactions among the four parameters considered. Thus, the models based on only the four main effects may be somewhat deficient and the corresponding R^2 values misleading. Developing more suitable models using two-factor and possibly three-factor interactions could possibly result in adequate metamodels of RE for each of the methods considered.

This study represents the first evaluation of the Ethridge estimator. Except for the nominal parameter settings of small sample size, low bias, low correlation, and a nearly circular data distribution, it appears to have a significant negative bias. Its use for approximately normally distributed downrange and crossrange miss-distance data does not seem to be warranted. Further research of its application as a robust estimator remains to be done.

5.2 Recommendations

Within the parameter regions of this study, the best method for a given set of data was determined to be a function of the value of bias. When bias equals 0, .25, .5, .75, or 1, the CEP3 method should be chosen. When bias equals 2, the Grubbs method should be chosen. Further research should look into refining the coarse grid

response surface for bias values between 1 and 2 since this is the region where the best method transitions from CEP3 to Grubbs.

This study focused on the least biased estimator. Another study could examine a response surface of the mean square error of the relative errors to account for the variability in the estimates as well as the mean. Knowledge of both the mean and variance of the relative errors could further assist ICBM analysts in choosing which method is most appropriate for a given set of test data.

As computer technology advances, the ICBM accuracy analysts continue to gain new methods to improve the quality of their work. In the past, the quick CEP methods were used to provide timely and accurate CEP estimates so that the time-consuming process of integrating the bivariate normal distribution by the numerical integration methods could be avoided. This study compared the results of the exact method with the results of MathCAD as part of the validation process. It was found that the results of the two methods were identical. Future work in ICBM accuracy analysis could exploit the mathematical software available today, such as MathCAD or Mathematica. The quick CEP estimation methods are still important because of their convenience and case of use. The importance of the new mathematical software could also be in the area of future studies that require accurate numerical integration of the bivariate normal density function. These math packages could supplement or replace the exact method as the new benchmark method.

If the exact method is to be used in the future, two important issues should be taken into account. First, this method required several hours to calculate one CEP when the data characteristics were highly elliptical, highly biased, and uncorrelated. The exact method should be programmed on a mainframe computer to reduce the time consumed by the process of obtaining the exact CEP estimates.

The second issue concerning the exact method is the summation limits of the infinite series expansions. Any computer program implementing this method must be dynamically flexible in determining when to stop the summations. If the limits

are too small, the CEPs will be overestimated. If the limits are too large, the program might terminate with a floating point error. For highly elliptical, uncorrelated data with biases greater than 2, the author's computer could not accommodate the required summation limits of 90 or more. A more powerful computer should be used to attain the exact CEP estimates for cases when ellipticity is .4 or less.

If further research is to be done on the quick CEP methods, a personal computer based random number generator should be either developed or acquired. A random number generator of this nature will free the researcher from a dependency on mainframe computers for this capability. This is a matter of personal preference and convenience, but highly recommended.

This study assumed that the underlying distribution of the crossrange and downrange miss distances followed a bivariate normal density function. Further research could be done assuming nonnormal miss-distance data. Such studies should focus on nonparametric or robust estimators. The Ethridge estimator did not perform well in this experiment, but, as a robust estimator, it may perform best when the assumption of normality is violated.

Appendix A. Random Number Generator

A.1 The Programs

The 10,000 (x,y)-scores were taken from the SLAM II simulation language package. The extraction of the data required two programs. The first program is the SLAM II network flow program. It was written in such a way that two activities each require a service time with a distribution that is normally distributed with a mean of zero and a standard deviation of one. The second program is a FORTRAN program that records the service times of the two activities and outputs these times to data files. Each of the two activities has its own data file. One file will be used for the crossrange miss scores, and the other file will be used for the downrange miss scores. The respective two files in the program below are called X.DAT and Y.DAT. The SLAM II and FORTRAN programs are listed below.

A.1.1 SLAM II Network Program

A.1.2 FORTRAN Program

PROGRAM CEP
DIMENSION NSET(5000)

```
COMMON/SCOM1/ATRIB(100), DD(100), DDL(100), DTNOW,
    1II, MFA, MSTOP, NCLNR, NCRDR, NPRNT, NNRUN, NNSET,
    2NTAPE, SS(100), SSL(100), TNEXT, TNOW, XX(100)
     COMMON QSET(5000)
     EQUIVALENCE(NSET(1), QSET(1))
     NNSET=5000
     NCRDR=5
     NPRNT=6
     NTAPE=7
     OPEN(UNIT=8,FILE-'X.DAT',STATUS='NEW')
      OPEN(UNIT=9,FILE='Y'.DAT',STATUS='NEW')
     CALL SLAM
     CLOSE(8)
      CLOSE(9)
      STOP
      END
С
С
   THIS USERF FUNCTION EXTRACTS RANDOM NUMBERS
      FUNCTION USERF(I)
      GO TO (1,2) I
      USERF = RNORM(0..1..1)
1
      WRITE(8,1000) USERF
      RETURN
      USERF = RNORM(0.,1.,2)
      WRITE(9,1000) USERF
      RETURN
1000 FORMAT(1X,F8.4)
      END
```

Appendix B. C Programs

B.1 Programs

The following C programs process the 10,000 (x,y)-scores so that the final output is a list of the CEP estimates from the five methods. This appendix guides the interested reader through the process.

B.1.1 Data Integration. The first program is called "xy.c". The input to this file are the two data files from SLAM II called "x.dat" and "y.dat". The data in these files are still in their standard normal form with a mean of zero and a standard deviation of one. This program reads in data from "x.dat" as the crossrange error scores and the "y.dat" as the downrange error scores. The two files are merged into one file called "xy.dat" which has the crossrange scores in the left column and the downrange scores in the right column.

The study assumes that the CEP of interest is 1000 feet. If the bivariate normal density function is to have a CEP of 1000 feet, its standard deviation must be 1000/1.1774 or 849 feet. Since the data files contain standard normal values, each datum is multiplied by 849 to reflect a distribution whose CEP is 1000 feet. The program is listed as follows:

```
FILE *inx,*iny,*outxy;
                            /* pointer for output file */
   int i;
                            /* counter variables */
  float x,y;
                            /* the (X,Y) miss point */
   float sigx, sigy;
                           /* standard deviations for x and y */
/* open external files */
   inx = fopen("x.dat", "r");
   iny = fopen("y.dat", "r");
   outxy = fopen("xy.dat", "w");
/* calculate the standard deviations for x and y */
   sigy = 1000./1.1774;
   sigx = 1000./1.1774;
   for (i=0;i<N;i++) {
      fscanf(inx, "%f", &x); /* generate x random normal number */
      fscanf(iny, "%f", &y); /* generate y random normal number */
                               /* convert x to a crossrange score */
      x *= sigx;
      y *= sigy;
                               /* convert y to a downrange score */
      fprintf(outxy,"%8.2f %8.2f\n",x,y);
   fclose(inx);
   fclose(iny);
   fclose(outxy);
   return;
}
```

B.1.2 Data Transformation. The program called "tweak.c" transforms the data in "xy.dat" to reflect the data characteristics of the current test design point. "tweak.c" reads in the values of bias, ellipticity, and correlation from a data file containing a database of the test design point parameter values. After the current parameter values are read in, the proper manipulations are made to the data in "xy.dat". The output file of the transformed data is called "tweak.dat". The program is listed as follows:

```
/* tweak.c */
```

```
/* This program does the data manipulation to the (X,Y) points to
  reflect the proper BIAS, ELLIPTICITY, and CORRELATION */
#include <stdio.h>
#include <math.h>
#define N 10000
#define PI 3.14159265358979323846
main()
   FILE *in1,*in2,*out;
   int i,j;
   float bias,theta,rad,ellip,rho,x,y,rotx,roty,m[2][2];
   in1 = fopen("xy.dat", "r");
   in2 = fopen("param.dat", "r");
   out = fopen("tweak.dat", "w");
   fscanf(in2,"%d %f %f %f",&j,&bias,&ellip,&rho);
/* calculate the correlation offset */
   theta = rho*45.; /* theta expressed in degrees */
   rad = (theta/360.)*2.*PI; /* theta converted to radians */
/* calculate rotation matrix, m */
   m[0][0] = m[1][1] = cos(rad);
   m[1][0] = -\sin(rad);
   m[0][1] = sin(rad);
/* calculate bias */
   bias = bias*849.33;
/* manipulate data */
   for (i=0;i<N;i++) {
      fscanf(in1,"%f %f",&x,&y);
      y += bias;
      x *= ellip;
      rotx = x*m[0][0] + y*m[1][0];
      roty = x*m[0][1] + y*m[1][1];
      x = rotx;
```

```
y = roty;
  fprintf(out,"%8.2f %8.2f\n",x,y);
}

fclose(in1);
fclose(in2);
fclose(out);

return;
}
```

B.1.3 CEP Calculations. The following five programs read in the transformed data from "tweak.dat" and calculate the appropriate CEP estimates. The first of these programs is "exact.c" which is the exact method. The exact method calculates one CEP for each of the 175 test design points. The "exact.c" program is listed as follows:

```
/* exact.c */
/* This program implements the "exact" method or rather Smith's
   infinite series expansion method. The Grubbs-Patnaik/Chi-square
  method is used as the input for the first guess. */
#include <staio.h>
#include <math.h>
#define N 1
float EXACT(float sx,float sy,float mux,float muy,float cep);
main()
   FILE *in1,*in2,*out;
                          /* counter variable for loops and such */
   int i, ii;
   float x,y;
                          /* standard errors for x and y */
   float sx, sy;
   float sumx, sumy;
                          /* means for x and y */
   float mux, muy;
                          /* cep estimate */
   float cep;
```

```
/* the probability of current cep */
 float cepprob;
 in1 = fopen("tweak.dat", "r");
 in2 = fopen("grubbs.dat", "r");
 out = fopen("exact.dat", "w");
 sumx = 0.0;
 sumy = 0.0;
 for (i=0;i<10000;i++) {
    fscanf(in1,"%f %f",&x,&y);
    sumx += x;
    sumy += y;
 }
 mux = sumx/10000.;
 muy = sumy/10000.;
 rewind(in1);
 sx = 0.0;
 sy = 0.0;
 for (i=0;i<10000;i++) {
    fscanf(in1,"%f %f",&x,&y);
    sx += (x-mux)*(x-mux);
    sy += (y-muy)*(y-muy);
 }
 sx = sqrt(sx/9999.);
  sy = sqrt(sy/9999.);
  fscanf(in2,"%d %f",&ii,&cep);
  cepprob = EXACT(sx,sy,mux,muy,cep);
  if (cepprob <= .5) {
    while (cepprob < .5) {
cep += 10;
cepprob = EXACT(sx,sy,mux,muy,cep);
     while (cepprob > .5) {
cep -= 1;
cepprob = EXACT(sx,sy,mux,muy,cep);
```

```
while (cepprob < .5) {
cep += .1;
cepprob = EXACT(sx,sy,mux,muy,cep);
     }
  }
  else {
     while (cepprob > .5) {
cep -= 10.;
cepprob = EXACT(sx,sy,mux,muy,cep);
      while (cepprob < .5) {
cep += 1.;
cepprob = EXACT(sx,sy,mux,muy,cep);
     while (cepprob > .5) {
cep -= .1;
cepprob = EXACT(sx,sy,mux,muy,cep);
  }
  fprintf(out,"%f\n",cep);
  fclose(in1);
  fclose(in2);
  fclose(out);
  return;
}
float EXACT(float sx,float sy,float mux,float muy,float cep)
  int i, j, k, l, m, z, f1, f2, f3;
  float sum1,sum2,sum3,x1,x2,x3,x4,xsum;
  float y1,y2,y3,y4,ysum,xk,yj,temp;
               /* the probability of current cep estimate */
  float D; /* D will be the up front conglomerate term */
  float ugly;
  float bigsum;
/* calculate D, the front conglomerate term */
  D = (cep*cep/(2.*sx*sy))*exp(-((mux*mux)/(2.*sx*sx)+
```

```
(muy*muy)/(2.*sy*sy)));
   bigsum = 0.;
   for (k=0;k<10;k++) {
      for (j=0;j<10;j++) {
/* ugly factorial term */
f1 = k+1;
f2 = j+1;
f3 = k+j+1;
 sum1 = sum2 = sum3 = 1.;
for (m=1; m<=f1; m++) sum1 *= (float)m;
for (m=1; m \le f2; m++) sum2 *= (float)m;
 for (m=1;m<=f3;m++) sum3 *= (float)m;
 ugly = (sum1/sum3)*sum2;
/* calculate xk */
 f1 = 2*k;
 f2 = k+1;
 f3 = k;
 sum1 = sum2 = sum3 = 1.;
 for (m=1;m<=f1;m++) sum1 *= (float)m;</pre>
 for (m=1; m<=f2; m++) sum2 *= (float)m;
 for (m=1;m<=f3;m++) sum3 *= (float)m;</pre>
 sum3 = sum3*sum3;
 x1 = (sum1/sum2)/sum3;
 temp = 1.;
 if (k == 0) x2 = 1.;
 else {
    x2 = (-(cep*cep)/(8.*sx*sx));
    for (m=1; m \le k; m++) temp *= x2;
    x2 = temp;
 }
 xsum = 0.;
 for (l=0;1<=k;1++) {
    f1 = k;
    f2 = k-1;
    f3 = 2*1;
    sum1 = sum2 = sum3 = 1.;
    for (m=1;m<=f1;m++) sam1 *= (float)m;
```

```
for (m=1;m<=f2;m++) sum2 *= (float)m;
   for (m=1;m<=f3;m++) sum3 *= (float)m;
   x3 = (sum1/sum2)/sum3;
   temp = 1.;
   if (1 == 0) x4 = 1.;
   else {
       x4 = (-(2.*mux*mux)/(sx*sx));
       for (m=1; m<=1; m++) temp *= x4;
       x4 = temp;
   }
   xsum += x3*x4;
 }
xk = x1*x2*xsum;
/* calculate yj */
 f1 = 2*j;
 f2 = j+1;
 f3 = j;
 sum1 = sum2 = sum3 = 1.;
 for (m=1;m<=f1;m++) sum1 *= (float)m;
 for (m=1;m<=f2;m++) sum2 *= (float)m;
 for (m=1; m \le f3; m++) sum3 *= (float)m;
 sum3 = sum3*sum3;
 v1 = (sum1/sum2)/sum3;
 temp = 1.;
 if (j == 0) y2 = 1.;
 else {
    y2 = (-(cep*cep)/(8.*sy*sy));
    for (m=1; m \le j; m++) temp *= y2;
    y2 = temp;
 }
 ysum = 0.;
 for (i=0;i<=j;i++) {
    f1 = j;
    f2 = j-i;
    f3 = 2*i;
    sum1 = sum2 = sum3 = 1.;
    for (m=1;m<=f1;m++) sum1 *= (float)m;
```

```
for (m=1;m<=f2;m++) sum2 *= (float)m;</pre>
   for (m=1;m<=f3;m++) sum3 *= (float)m;
   y3 = (sum1/sum2)/sum3;
   temp = 1.;
    if (i == 0) y4 = 1.;
    else {
       y4 = (-(2.*muy*muy)/(sy*sy));
       for (m=1; m \le i; m++) temp *= y4;
       y4 = temp;
    ysum += y3*y4;
}
yj = y1*y2*ysum;
bigsum += xk*yj*ugly;
   P = D*bigsum;
  return (P);
}
```

The programs for the other four CEP methods also read in the transformed data from "tweak.dat", but in addition to calculating a CEP for each test design point, they also calculate CEPs for each of the sample sizes too. The Grubbs-Patnaik/chi-square program is listed as "grubbs.c", the Modified RAND-234 method is listed as "rand.c", the CEP3 method is listed as "cep3.c", and the Ethridge method is listed as "eth.c".

```
/* grubbs.c */
#include <stdio.h>
#include <math.h>

#define ROUND(a) ((a)>0 ? (int)(a+0.5) : -(int)(0.5-a))

float interpolate(float a,float aup,float alow,float kup,float klow);
float GRUBBS(float store[2][15],int n);
```

```
main()
                            /* pointers for external files */
   FILE *in,*out;
                            /* counter variables */
   int i,j,n,z;
   float store[2][15];
                            /* stores x & y values for this rep */
                            /* CEP from Grubbs-Patnaik/Chi-Square */
   float GRUBBSCEP;
   float sum, avg;
   in = fopen("tweak.dat", "r");
   out = fopen("grubbs.dat", "w");
/* for sample size of 15 */
   n = 15;
   sum = 0.0;
   for (i=0;i<650;i++) {
      for (j=0;j<n;j++) {
 fscanf(in,"%f %f",&store[0][j],&store[1][j]);
      GRUBBSCEP = GRUBBS(store,n);
      sum += GRUBBSCEP;
   }
   avg = sum/650.;
   fprintf(out,"%d %f\n",n,avg);
/* for sample size of 10 */
   rewind(in);
   n = 10;
   sum = 0.0;
   for (i=0;i<1000;i++) {
      for (j=0; j< n; j++) {
 fscanf(in, "%f %f", &store[0][j], &store[1][j]);
      GRUBBSCEP = GRUBBS(store,n);
       sum += GRUBBSCEP;
   }
   avg = sum/1000.;
   fprintf(out,"%d %f\n",n,avg);
 /* for sample size of 7 */
   rewind(in);
   n = 7;
```

```
sum = 0.0:
  for (i=0;i<1400;i++) {
     for (j=0;j<n;j++) {
fscanf(in, "%f %f", &store[0][j], &store[1][j]);
     GRUBBSCEP = GRUBBS(store,n);
     sum += GRUBBSCEP;
  }
  avg = sum/1400.;
  fprintf(out,"%d %f\n",n,avg);
/* for sample size of 5 */
  rewind(in);
  n = 5:
  sum = 0.0;
  for (i=0;i<2000;i++) {
      for (j=0; j < n; j++) {
fscanf(in,"%f %f",&store[0][j],&store[1][j]);
     GRUBBSCEP = GRUBBS(store,n);
      sum += GRUBBSCEP;
  avg = sum/2000.;
  fprintf(out,"%d %f\n",n,avg);
/* for sample size of 3 */
  rewind(in);
  n = 3;
  sum = 0.0;
  for (i=0;1<3300;i++) {
      for (j=0; j < n; j++) {
fscanf(in,"%f %f",&store[0][j],&store[1][j]);
      GRUBBSCEP = GRUBBS(store,n);
      sum += GRUBBSCEP;
  }
   avg = sum/3300.;
  fprintf(out,"%d %f\n",n,avg);
  fclose(in);
   fclose(out);
```

```
return;
}
float GRUBBS(float store[2][15],int n)
   int r;
   float m, v, df, k;
   float sx, sy;
   float xbar,ybar,rho,rhotop,rhox,rhoy;
   float xsum,ysum;
   float GRUBBSCEP; /* final CEP value */
   xsum = 0.;
   ysum = 0.;
   for (r=0;r<n;r++) {
      xsum += store[0][r];
      ysum += store[1][r];
   xbar = xsum/(float)n;
   ybar = ysum/(float)n;
   xsum = 0.;
   ysum = 0.;
   for (r=0;r<n;r++) {
      xsum += (store[0][r]-xbar)*(store[0][r]-xbar);
      ysum += (store[1][r]-ybar)*(store[1][r]-ybar);
   }
   sx = sqrt(xsum/((float)n-1.));
   sy = sqrt(ysum/((float)n-1.));
   rhotop = 0.;
   rhox = 0.;
   rhoy = 0.;
   for (r=0;r<n;r++) {
      rhotop += (store[0][r]-xbar)*(store[0][r]-ybar);
      rhox += (store[0][r]-xbar)*(store[0][r]-xbar);
      rhoy += (store[1][r]-ybar)*(store[1][r]-ybar);
```

```
}
 rho = rhotop/sqrt(rhox*rhoy);
 m = sx*sx + sy*sy + xbar*xbar + ybar*ybar;
 v = 2.*sx*sx*sx*sx + 2.*rho*rho*sx*sx*sy*sy + sy*sy*sy +
     4.*(xbar*xbar*sx*sx + 2.*xbar*ybar*rho*sx*sy +
     ybar*ybar*sy*sy);
 if (v \ge 0.0) df = (2.*m*m)/v;
 else {
    v = -v:
    df = 12.;
 }
 df = ROUND(df);
 if (df >= 11)
    k = (df - 0.7);
 else {
     switch (ROUND(df)) {
case 0:
  k = interpolate((float)df,1.,0.,0.455,0.);
  break:
case 1:
  k = interpolate((float)df,2.,1.,1.39,0.455);
  break;
case 2:
  k = interpolate((float)df,3.,2.,2.37,1.39);
  break;
case 3:
  k = interpolate((float)df,4.,3.,3.36,2.37);
  break:
case 4:
   k = interpolate((float)df,5.,4.,4.35,3.36);
  break;
case 5:
   k = interpolate((float)df,6.,5.,5.35,4.35);
   break;
case 6:
   k = interpolate((float)df,7.,6.,6.35,5.35);
```

```
break;
case 7:
   k = interpolate((float)df,8.,7.,7.34,6.35);
case 8:
   k = interprlate((float)df,9.,8.,8.34,7.34);
case 9:
   k = interpolate((float)df,10.,9.,9.34,8.34);
   break:
case 10:
   k = interpolate((float)df,11.,10.,10.3,9.34);
case 11:
   k = interpolate((float)df,12.,11.,11.3,10.34);
  GRUBBSCEP = sqrt((k*v)/(2.*m));
  return (GRUBESCEP);
}
float interpolate(float a, float aup, float alow, float kup, float klow)
  float k, percent;
  percent = (a - alow)/(aup - alow);
   k = klow + (percent*(kup - klow));
   return (k);
7
/* rand.c */
/* This program implements the modified RAND-234 cep
   estimation method. */
#include <stdio.h>
#include <math.h>
```

#define PI 3.14159265358979323846

```
float RAND234(float store[2][15],int n);
main()
                        /* pointers to the external files */
  FILE *in, *out;
                         /* counter variables */
  int i, j, n;
                          /* (x,y) miss point */
  float x,y;
   float store[2][15]; /* stores current x & y values */
   float RANDCEP;
                           /* CEP estimate of modified RAND-234 */
   float avg, sum;
   in = fopen("tweak.dat", "r");
   out = fopen("rand.dat", "w");
/* for sample size of 15 */
   n = 15:
   sum = 0.0;
   for (i=0;i<650;i++) {
      for (j=0;j<n;j++) {
 fscanf(in,"%f %f",&store[0][j],&store[1][j]);
      RANDCEP = RAND234(swore,n);
      sum += RANDCEP;
   }
   avg = sum/650.;
   fprintf(out,"%d %f\n",n,avg);
/* for sample size of 10 */
   rewind(in);
   n = 10:
   sum = 0.0;
   for (1=0;1<1000;i++) {
      for (j=0;j<n;j++) {
 fscanf(in,"%f %f",&store[0][j],&store[1][j]);
      RANDCEP = RAND234(store,n);
      sum += RANDCEP;
   avg = sum/1000.t
```

```
fprintf(out,"%d %f\n",n,avg);
/* for sample size of 7 */
  rewind(in);
  n = 7:
  sum = 0.0;
  for (i=0;i<1400;i++) {
      for (j=0; j< n; j++) {
fscanf(in, "%f %f", &store[0][j], &store[1][j]);
      RANDCEP = RAND234(store,n);
      sum += RANDCEP;
   }
   avg = sum/1400.;
   fprintf(out,"%d %f\n",n,avg);
/* for sample size of 5 */
   rewind(in);
   n = 5;
   sum = 0.0;
   for (i=0;i<2000;i++) {
      for (j=0;j< n;j++) {
 fscanf(in,"%f %f",&store[0][j],&store[1][j]);
      RANDCEP = RAND234(store,n);
      sum += RANDCEP;
   }
   avg = sum/2000.;
   fprintf(out,"%d %f\n",n,avg);
/* for sample size of 3 */
   rewind(in);
   n = 3;
   sum = 0.0:
   for (i=0;i<3300;i++) {
      for (j=0;j< n;j++) {
 fscanf(in,"%f %f",&store[0][j],&store[1][j]);
      RANDCEP = RAND234(store,n);
      sum += RANDCEP:
   avg = sum/3300.;
```

```
fprintf(out,"%d %f\n",n,avg);
  fclose(in);
  fclose(out):
  return;
}
float RAND234(float store[2][15],int n)
                          /* counter variables for loops and such */
   int r.s.t:
  float xbar, ybar;
   float xsum,ysum;
                         /* CEP estimate for modified RAND-234 */
   float RANDCEP;
                         /* Covariance matrix */
   float Cov[2][2];
                         /* Correlation matrix */
   float Corr[2][2];
                         /* Rotation matrix */
   float A[2][2];
                         /* stores cross multiples for Cov */
   float cross:
                         /* stores inter multiples for Cov */
   float inter;
                         /* the standard deviations */
   float s1,s2;
   float theta, rad;
                         /* angle of rotation to principal axes */
                         /* transformed mean vectors */
   float b1,b2;
   float k1,k2;
                         /* transformed Cov matrix princ axes */
                         /* the larger of k1 and k2 */
   float Large_sigma;
                         /* the smaller of k1 and k2 */
   float Small_sigma;
                         /* CEP of mean point of impact */
   float CEPMPI;
   float BIAS;
                         /* bias for RAND-234 */
                         /* the critical value for CEP */
   float V;
   xsum = 0.:
   ysum = 0.;
   for (r=0;r<n;r++) {
      xsum += store[0][r];
      ysum += store[1][r];
   xbar = xsum/(float)n;
   ybar = ysum/(float)n;
 /* Calculate Covariance matrix Cov[2][2] */
   for (r=0;r<2;r++) {
```

```
for (s=0;s<2;s++) {
cross = 0.;
inter = 0.:
for (t=0;t<n;t++) {
    cross += store[r][t]*store[s][t];
    inter += store[r][t]*store[s][t];
}
cross *= (float)n;
Cov[r][s] = (1./((float)n*((float)n-1.)))*(cross-inter);
  }
/* Calculate the Standard deviations, s1 & s2 */
   s1 = sqrt(Cov[0][0]);
   s2 = sqrt(Cov[1][1]);
/* Calculate the Correlation matrix, Corr[2][2] */
   Corr[0][0] = Corr[1][1] = 1.;
   Corr[0][1] = Corr[1][0] = Cov[0][1]/(s2*s2);
/* Calculate angle of rotation to principal axes, theta */
   if (s1 == s2) {
      if (Corr[0][1] > 0.)
 theta = -45:
      if (Corr[0][1] < 0.)
 theta = 45.;
   }
   else
      theta = .5*atan((2.*Corr[0][1]*s1*s2)/(s1*s1-s2*s2));
/* Calculate the Rotation matrix, A[2][2] */
   rad = (theta/360.)*2.*PI;
   \Lambda[0][0] = \Lambda[1][1] = \cos(rad);
   A[0][1] = \sin(rad);
   A[1][0] = -\sin(rad);
/* reverse sin of angle if theta is negative */
   if (theta < 0.) {
      A[0][1] = -\sin(rad);
      A[1][0] = s^{*}(rad);
   }
```

```
/* Transform mean vector to principal axes, b1 & b2 */
  b1 = A[0][0]*xbar + A[0][1]*ybar;
   b2 = A[1][0]*xbar + A[1][1]*ybar;
/* Transform C variance matrix to principal axes, k1 & k2 */
   k1 = sqrt(A[0][0]*(A[0][0]*Cov[0][0]+A[0][1]*Cov[1][0])+
     A[0][1]*(A[0][0]*Cov[0][1]+A[0][1]*Cov[1][1]);
   k2 = sqrt(A[1][0]*(A[1][0]*Cov[0][0]+A[1][1]*Cov[1][0])+
     A[1][1]*(A[1][0]*Cov[0][1]+A[1][1]*Cov[1][1]));
   if (k1 > k2) {
      Large_sigma = k1;
      Small_sigma = k2;
   }
   else {
      Large_sigma = k2;
      Small_sigma = k1;
   }
/* Calculate the CEPMPI */
   CEPMPI = 0.614*Small_sigma + 0.563*Large_sigma;
/* Calculate the BIAS */
   BIAS = sqrt(b1*b1+b2*b2);
/* Calculate V */
   V = BIAS/CEPMPI;
/* CALCULATE RANDCEP */
   RANDCEP = CEPMPI*(1.0039 - .0528*V + .4786*V*V - .0793*V*V*V);
   return (RANDCEP);
}
/* cep3.c */
/* This CEP method is given in the Ethridge ACSC paper. It is
    listed as CEP method #3, so I call it the cep3 method. It is
    based on a Rayleigh distribution and uses radial miss
```

```
distance. */
#include <stdio.h>
#include <math.h>
main()
{
  FILE *in, *out;
                        /* pointers for external files */
  float radial[15];
                        /* radial error */
  float x,y;
                        /* x and y scores */
  float CEP3;
                        /* stores the newly estimated cep */
  float sum;
                        /* sums radial miss scores */
  int i,j,n;
                        /* counter variables */
  float avg, bigsum;
   in = fopen("tweak.dat", "r");
   out = fopen("cep3.dat", "w");
/* for a sample size of 10 */
   n = 10;
   bigsum = 0.0;
   for (i=0;i<1000;i++){
      sum = 0.0;
      for (j=0; j< n; j++) {
 fscanf(in,"%f %f",&x,&y);
 radial[j] = sqrt(x*x + y*y);
 sum += radial[j];
      CEP3 = .9394*(sum/(float)n);
      bigsum += CEP3;
   avg = bigsum/1000.;
   fprintf(out,"15 %f\n",avg);
   fprintf(out,"10 %f\n",avg);
   fprintf(out,"7 %f\n",avg);
   fprintf(out,"3
                   %f\n",avg);
   fclose(in);
   fclose(out);
   return;
```

```
/* eth.c */
/* This program implements Ethridge's robust estimator as presented
   in his ACSC paper. */
#include <stdio.h>
#include <math.h>
float ETHRIDGE(float rlist[15],int n);
main()
                         /* pointers for external files */
   FILE *in,*out;
                         /* counter variables for loops and such */
   int i,j,n;
   float x,y;
                         /* (x,y) miss scores */
   float rlist[15];
                           /* stores radial miss distances */
                           /* CEP of the Ethridge method */
   float CEPETH;
   float avg, sum;
   in = fopen("tweak.dat", "r");
   out = fopen("eth.dat", "w");
/* for a sample size of 15 */
   n = 15:
   sum = 0.0;
   for (i=0;i<650;i++) {
      for (j=0; j < n; j++) {
 fscanf(in,"%f %f",&x,&y);
 rlist[j] = sqrt(x*x + y*y);
      CEPETH = ETHRIDGE(rlist,n);
      sum += CEPETH;
   }
   avg = sum/650.;
   fprintf(out,"%d %f\n",n,avg);
/* for a sample size of 10 */
```

}

```
rewind(in);
  n = 10;
  sum = 0.0;
  for (i=0;i<1000;i++) {
     for (j=0;j<n;j++) {
fscanf(in,"%f %f",&x,&y);
rlist[j] = sqrt(x*x + y*y);
 if (rlist[j] < 1.) rlist[j] = 1.;
     CEPETH = ETHRIDGE(rlist,n);
     sum += CEPETH;
  }
  avg = sum/1000.;
  fprintf(out,"%d %f\n",n,avg);
/* for a sample size of 7 */ '
  rewind(in);
  n = 7;
   sum = 0.0;
   for (i=0;i<1000;i++) {
      for (j=0;j<n;j++) {
 fscanf(in,"%f %f",&x,&y);
 rlist[j] = sqrt(x*x + y*y);
 if (rlist[j] < 1.) rlist[j] = 1.;</pre>
      CEPETH = ETHRIDGE(rlist,n);
      sum += CEPETH;
   }
   avg = sum/1000.;
   fprintf(out,"%d %f\n",n,avg);
/* for a sample size of 5 */
   rewind(in);
   n = 5;
   sum = 0.0;
   for (i=0;i<2000;i++) {
      for (j=0;j<n;j++) {
 fscanf(in,"%f %f",&x,&y);
 rlist[j] = sqrt(x*x + y*y);
 if (rlist[j] < 1.) rlist[j] = 1.;
      }
      CEPETH = ETHRIDGE(rlist,n);
```

```
sum += CEPETH;
  }
  avg = sum/2000.;
  fprintf(out,"%d %f\n",n,avg);
/* for a sample size of 3 */
  rewind(in);
  n = 3;
   sum = 0.0;
   for (i=0;i<3300;i++) {
      for (j=0;j<n;j++) {
 fscanf(in,"%f %f",&x,&y);
 rlist[j] = sqrt(x*x + y*y);
 if (rlist[j] < 1.) rlist[j] = 1.;
      CEPETH = ETHRIDGE(rlist,n);
      sum += CEPETH;
   }
   avg = sum/3300.;
   fprintf(out,"%d %f\n",n,avg);
   fclose(in);
   fclose(out);
   return;
}
float ETHRIDGE(float rlist[15],int n)
   int r,s;
                       /* counter var:ables for loops and such */
                       /* used to store location in sorted array */
   int detect;
                       /* store log of radial miss distances */
   float t[15];
                       /* a temporary array */
   float temp[15];
   float min;
                       /* stores minimum value in sort array */
   float CEPETH:
                       /* stores the CEP estimate for this method */
                       /* sample median */
   float tdot:
                       /* the mean of the t's */
   float tbar:
   float kstop;
                       /* numerator term of kurtosis calculation */
                       /* denominator term of kurtosis calculation */
   float ksbottom;
   float ks;
                       /* kurtosis */
   float ssquare;
                       /* sample variance */
   float tsq;
                       /* sum of the t-squared terms */
```

```
float d[15];
                     /* stores the array of d-values */
   float dstuff;
                      /* used in calculation of d-values */
   float w[15];
                      /* stores the array of w-values */
   float dinvsum:
                      /* sum of the inverse d-values */
   float muhat:
                      /* estimate of mu */
   float tdiff:
                      /* stores difference between t and tbar */
/* sort array of radial errors, rlist (in ascending order) */
   for (r=0:r<n:r++) {
      min = 10000.;
      for (s=0; s< n; s++) {
 if (rlist[s] <= min) {</pre>
    temp[r] = rlist[s];
    min = rlist[s];
    detect = s;
 }
     rlist[detect] += 100000.;
   }
/* convert sorted radial miss array to log values */
   for (r=0;r<n;r++)
      t[r] = log(temp[r]);
/* calculate sample median, tdot */
   if (n \% 2 == 0)
      tdot = (t[n/2]+t[(n/2)-1])/2.;
      tdot = t[(n-1)/2];
/* calculate tbar, the mean */
   tbar = 0.:
   for (r=0;r<n;r++)
      tbar += t[r];
   tbar = tbar/(float)n;
/* calculate kurtosis, ks */
   kstop = 0.;
   ksbottom = 0.;
   for (r=0;r<n;r++) {
      tdiff = t[r]-tbar;
      kstop += tdiff*tdiff*tdiff;
```

```
}
  kstop = kstop*(float)n;
  ksbottom = ksbottom*ksbottom;
  ks = kstop/ksbottom;
/* calculate sample variance, ssquare */
  tsq = 0.;
  for (r=0;r< n:r++)
     tsq += (t[r]-tbar)*(t[r]-tbar);
  ssquare = tsq/((float)n-1.);
/* calculate d-values */
   for (r=0:r<n:r++) {
      dstuff = 1.-(.03)*(ks-3.)*(ks-3.)*(ks-3.)*
      (t[r]-tdot)*(t[r]-tdot)/ssquare;
      if (dstuff > 0.01)
 d[r] = dstuff;
      else
 d[r] = 0.01;
   }
/* calculate the w-values */
   dinvsum = 0.:
   for (r=0;r<n;r++)
      dinvsum += (1./d[r]);
   for (r=0;r<n;r++)
      w[r] = (1./d[r])/dinvsum;
/* calculate muhat */
   muhat = 0.;
   for (r=0;r<n;r++)
      muhat += w[r]*t[r];
/* calculate the Ethridge estimator */
   CEPETH = exp(muhat);
   return (CEPETH);
}
A batch file linked the above files into one continuous process.
```

ksbottom += tdiff*tdiff;

```
It is listed as follows:
/* cep.bat */
tweak
exact
grubbs
cep3
eth
```

Appendix C. Data Validation Program

There were two streams of standard normal random numbers that were produced by the SLAM II software package. The following C program compares the data to a standard normal distribution. Both random number streams should have means of zero and standard deviations of one. The empirical cumulative distribution function should also conform closely to that of the standard normal distribution. The C program partitions the data into 14 intervals to analyze the frequency of the numbers falling into these intervals. These frequencies are compared to standard mathematical table values of the standard normal cumulative distribution function.

```
/* valid.c */
/* This program produces that data necessary to validate the
  two SLAM II random number streams as standard normal */
#include <stdio.h>
#include <math.h>
main()
  FILE *in1,*in2,*out;
   int i, j, pit[14][2]={0};
   float x,y,xbar,ybar,sx,sy,sumx,sumy,prob[14][2];
   in1 = fopen("x.dat", "r");
   in2 = fopen("y.dat", "r");
   out = fopen("valid.dat", "w");
/* calculate means for x & y */
   sumx = 0.;
   sumy = 0.;
   for (i=0;i<10000:i++) {
      fscanf(in1,"%f",&x);
      fscanf(in2,"%f",&y);
      sumx += x;
```

```
sumy += y;
  }
   xbar = sumx/10000.;
   ybar = sumy/10000.;
/* calculate standard deviations of x & y */
   rewind(in1):
   rewind(in2);
   sx = 0.:
   sy = 0.;
   for (i=0;i<10000;i++) {
      tscanf(in1,"%f",&x);
      fscanf(in2,"%f",&y);
      sx += (x-xbar)*(x-xbar);
      sy += (y-ybar)*(y-ybar);
   }
   sx = sqrt(sx/9999.);
   sy = sqrt(sy/9999.);
/* calculate cumulative probability densities */
   rewind(in1):
   rewind(in2);
   for(i=0;i<10000;i++) {
      fscanf(in1,"%f",&x);
      fscanf(in2,"%f",&y);
      if(x \le -3.) pit[0][0]++;
      if (y \le -3.) pit [0][1]++;
      if(x \le -2.5) pit[1][0]++;
      if(v \le -2.5) pit[1][1]++;
      if(x \le -2.) pit[2][0]++;
      if(y \le -2.) pit[2][1]++;
      if (x \le -1.5) pit [3] [0]++;
       if(y \le -1.5) pit[3][1]++;
       if(x \le -1.) pit[4][0]++;
       if(y \le -1.) pit[4][1]++;
       if(x \le -.5) pit[5][0]++;
       if(y \le -.5) pit[5][1]++;
```

```
if(x < 0.) pit[6][0]++;
     if(y < 0.) pit[6][1]++;
     if(x < .5) pit[7][0]++;
     if(y < .5) pit[7][1]++;
     if(x < 1.) pit[8][0]++;
     if(y < 1.) pit[8][1]++;
     if(x < 1.5) pit[9][0]++;
     if(y < 1.5) pit[9][1]++;
     if(x < 2.0) pit[10][0]++;
     if(y < 2.0) pit[10][1]++;
     if(x < 2.5) pit[11][0]++;
     if(y < 2.5) pit[11][1]++;
     if(x < 3.0) pit[12][0]++;
     if(y < 3.0) pit[12][1]++;
     if(x < 6.0) pit[13][0]++;
     if(y < 6.0) pit[13][1]++;
  }
  for (i=0;i<14;i++)
     for (j=0;j<2;j++)
prob[i][j] = (float)pit[i][j]/10000.;
  for (i=0;i<14;i++) {
     fprintf(out,"%2d
                         %6f
                                 %6f\n",
     i+1,prob[i][0],prob[i][1]);
  }
                            ybar: %f\n",xbar,ybar);
  fprintf(out,"xbar: %f
                          sy: %f\n",sx,sy);
  fprintf(out,"sx: %f
  fclose(in1);
  fclose(in2);
  fclose(out);
   return;
}
```

Appendix D. Correlation Study

A correlation study was made with the random number streams from the SLAM II random number generator. This study looks at the first 1000 (x,y)-points to calculate the correlation coefficient. The two data streams were generated independently and should have a correlation of zero. This analysis concluded that the correlation between these two random number streams is approximately zero and, therefore, the two streams are uncorrelated.

Two C programs were written to make the necessary calculations. The first C program is called "corr.c". "core.c" conducted independent studies of the 1000 points for each of the seven sample sizes. The second C program called "table.c" took the correlations from "core.c" and summed them up into Table 3.3. The source code for these two programs is given below.

```
/* corr.c */
#include <stdio.h>
#include <math.h>
main()
{
   FILE *in, *out;
   int i,j,k,m;
   float x[1000],y[1000];
   float xbar, ybar, rho, xdiff, ydiff, f1, f2, f3;
   float xsum, ysum;
   in = fopen("xydata.dat", "r");
   out = fopen("corr.dat", "w");
   fprintf(out,"CORRELATION ANALYSIS ");
   fprintf(out,"BETWEEN THE X & Y SCORES\n\n\n");
   fprintf(out,"SAMPLE
                          RUN\n");
                          NUMBER
   fprintf(out," SIZE
                                     CORRELATION\n");
   fprintf(out,"-----
                                     ----\n'');
```

```
for (i=0;i<1000;i++) fscanf(in,"%f %f",&x[i],&y[i]);
 k = 0;
 for (i=0;i<200;i++) {
    xsum = ysum = f1 = f2 = f3 = 0.;
     for (j=0;j<5;j++) {
xsum += x[k];
ysum += y[k];
k++;
    xbar = xsum/5.
    ybar = ysum/5.;
     k -= 5;
     for (j=0;j<5;j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
     rho = f1/(sqrt(f2*f3));
     }
  k = 0;
  for (i=0;i<100;i++) {
     xsum = ysum = f1 = f2 = f3 = 0.;
     for (j=0; j \rightarrow j; j++) {
xsum += x[k];
ysum += y[k];
k++;
     xbar = xsum/10.;
     ybar = ysum/10.;
     k = 10;
     for (j=0; j<10; j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
     }
```

```
rho = f1/(sqrt(f2*f3));
                              %3d
                                         %5.2f\n",i+1,rho);
    fprintf(out," 10
 }
 k = 0;
 for (i=0;i<50;i++) {
     xsum = ysum = f1 = f2 = f3 = 0.;
     for (j=0;j<20;j++) {
xsum += x[k];
ysum += y[k];
k++;
     xbar = xsum/20.;
     ybar = ysum/20.;
     k = 20;
     for (j=0; j<20; j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
     rho = f1/(sqrt(f2*f3));
     fprintf(out," 20
                                %2d
                                           %5.2f\n",i+1,rho);
  }
  k = 0;
  for (i=0;i<40;i++) {
     xsum = ysum = f1 = f2 = f3 = 0.;
     for (j=0;j<25;j++) {
xsum += x[k];
ysum += y[k];
k++;
     xbar = xsum/25.;
     ybar = ysum/25.;
     k = 25:
     for (j=0;j<25;j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (k[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
      }
```

```
rho = f1/(sqrt(f2*f3));
                               %2d
                                          %5.2f\n",i+1,rho);
    fprintf(out," 25
 }
 k = 0;
 for (i=0;i<20;i++) {
    xsum = ysum = f1 = f2 = f3 = 0.;
    for (j=0; j<50; j++) {
xsum += x[k];
ysum += y[k];
k++;
     }
     xbar = xsum/50.;
     ybar = ysum/50.;
     k = 50;
     for (j=0; j<50; j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++:
     rho = f1/(sqrt(f2*f3));
                                           %5.2f\n",i+1,rho);
     fprintf(out," 50
                               %2d
  }
  k = 0:
  for (i=0;i<10;i++) {
     xsum = ysum = f1 = f2 = f3 = 0.;
     for (j=0;j<100;j++) {
xsum += x[k];
ysum += y[k];
k++;
     xbar = xsum/100.;
     ybar = ysum/100.;
     k = 100;
     for (j=0;j<100;j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
     }
```

```
rho = f1/(sqrt(f2*f3));
                                          %5.2f\n",i+1,rho);
    fprintf(out," 100
                               %2d
 }
 k = 0;
 for (i=0;i<2;i++) {
    xsum = ysum = f1 = f2 = f3 = 0.;
    for (j=0;j<500;j++) {
xsum += x[k];
ysum += y[k];
k++;
     }
     xbar = xsum/500.;
     ybar = ysum/500.;
    k = 500;
     for (j=0;j<500;j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
     rho = f1/(sqrt(f2*f3));
                                %d
                                           %5.2f\n",i+1,rho);
     fprintf(out," 500
  }
  k = 0;
  for (1=0;i<1;i++) {
     xsum = ysum = f1 = f2 = f3 = 0.;
     for (j=0;j<1000;j++) {
xsum += x[k];
ysum += y[k];
k++;
     xbar = xsum/1000.;
     ybar = ysum/1000.;
     k = 1000;
     for (j=0;j<1000;j++) {
f1 += (x[k]-xbar)*(y[k]-ybar);
f2 += (x[k]-xbar)*(x[k]-xbar);
f3 += (y[k]-ybar)*(y[k]-ybar);
k++;
     }
```

```
rho = f1/(sqrt(f2*f3));
      fprintf(out,"1000
                                 %d
                                           %5.2f\n",i+1,rho);
   fclose(in);
   fclose(out);
   return;
}
/* table.c */
/* This program generates a table which contains the
   frequency distribution of correlation of given
   ranges for several sample sizes. */
#include <stdio.h>
main()
   FILE *in, *out;
   int i,j,size,num,m[20][8]={0};
   float avg5, avg10, avg20, avg25;
   float avg50, avg100, avg500, avg1000;
   float corr;
   avg5 = avg10 = avg20 = avg25 = avg50 = 0.;
   avg100 = avg500 = avg1000 = 0.;
   in = fopen("corr.dat", "r");
   out = fopen("newtable.dat", "w");
   fprintf(out,"
                                       X,Y");
   fprintf(out,"CORRELATION ANALYSIS\n\n");
   fprintf(out,"
                               NUMBER OF ");
   fprintf(out,"OBSERVATIONS PER SAMPLE SIZE\n\n");
   fprintf(out," RANGE | 5
                                         20
                                               25
                                   10
   fprintf(out,"50
                       100
                             500 ");
   fprintf(out,"1000\n");
```

```
fprintf(out,"-----"):
fprintf(out,"---- ");
fprintf(out,"----\n");
for (i=0:i<200:i++) {
   fscanf(in,"%d %d %f",&size,&num,&corr);
   avg5 += corr;
   if (corr >= .9) m[0][0]++;
   if (corr >= .8 && corr < .9) m[1][0]++;
   if (corr >= .7 && corr < .8) m[2][0]++;
   if (corr >= .6 && corr < .7) m[3][0]++;
   if (corr >= .5 && corr < .6) m[4][0]++;
   if (corr >= .4 && corr < .5) m[5][0]++;
   if (corr >= .3 && corr < .4) m[6][0]++;
   if (corr >= .2 \&\& corr < .3) m[7][0]++;
   if (corr >= .1 && corr < .2) m[8][0]++;
   if (corr >= 0. \&\& corr < .1) m[9][0]++;
   if (corr > -.1 && corr < 0) m[10][0]++;
   if (corr > -.2 && corr <= -.1) m[11][0]++;
   if (corr > -.3 && corr <= -.2) m[12][0]++;
   if (corr > -.4 && corr <= -.3) m[13][0]++;
   if (corr > -.5 && corr <= -.4) m[14][0]++;
   if (corr > -.6 && corr <= -.5) m[15][0]++;
   if (corr > -.7 \&\& corr <= -.6) m[16][0]++;
   if (corr > -.8 && corr <= -.7) m[17][0]++;
   if (corr > -.9 && corr <= -.8) m[18][0]++;
   if (corr > -1. && corr <= -.9) m[19][0]++;
avg5 = avg5/200.;
for (i=0;i<100;i++) {
   fscanf(in,"%d %d %f",&size,&num,&corr);
   avg10 += corr;
   if (corr >= .9) m[0][1]++;
   if (corr >= .8 && corr < .9) m[1][1]++;
   if (corr >= .7 && corr < .8) m[2][1]++;
   if (corr >= .6 && corr < .7) m[3][1]++;
   if (corr >= .5 && corr < .6) m[4][1]++;
   if (corr >= .4 && corr < .5) m[5][1]++;
   if (corr >= .3 && corr < .4) m[6][1]++;
   if (corr >= .2 && corr < .3) m[7][1]++;
    if (corr >= .1 && corr < .2) m[8][1]++;
```

```
if (corr >= 0. && corr < .1) m[9][1]++;
  if (corr > -.1 \&\& corr < 0) m[10][1]++;
  if (corr > -.2 && corr <= -.1) m[11][1]++;
  if (corr > -.3 \&\& corr <= -.2) m[12][1]++;
  if (corr > -.4 && corr <= -.3) m[13][1]++;
  if (corr > -.5 && corr <= -.4) m[14][1]++;
  if (corr > -.6 && cerr <= -.5) m[15][1]++;
   if (corr > -.7 \&\& corr <= -.6) m[16][1]++;
   if (corr > -.8 && corr <= -.7) m[17][1]++;
   if (corr > -.9 && corr <= -.8) m[18][1]++;
   if (corr > -1. \&\& corr <= -.9) m[19][1]++;
}
avg10 = avg10/100.;
for (i=0; i<50; i++) {
   fscanf(in,"%d %d %f",&size,&num,&corr);
   avg20 += corr;
   if (corr >= .9) m[0][2]++;
   if (corr >= .8 && corr < .9) m[1][2]++;
   if (corr >= .7 \&\& corr < .8) m[2][2]++;
   if (corr >= .6 \&\& corr < .7) m[3][2]++;
   if (corr >= .5 && corr < .6) m[4][2]++;
   if (corr >= .4 && corr < .5) m[5][2]++;
   if (corr >= .3 && corr < .4) m[6][2]++;
   if (corr >= .2 \&\& corr < .3) m[7][2]++;
   if (corr >= .1 && corr < .2) m[8][2]++;
   if (corr >= 0. \&\& corr < .1) m[9][2]++;
   if (corr > -.1 && corr < 0) m[10][2]++;
   if (corr > -.2 && corr <= -.1) m[11][2]++;
   if (corr > -.3 \&\& corr <= -.2) m[12][2]++;
   if (corr > -.4 && corr <= -.3) m[13][2]++;
   if (corr > -.5 && corr <= -.4) m[14][2]++;
   if (corr > -.6 && corr <= -.5) m[15][2]++;
   if (corr > -.7 \&\& corr <= -.6) m[16][2]++;
   if (corr > -.8 \&\& corr <= -.7) m[17][2]++;
   if (corr > -.9 && corr <= -.8) m[18][2]++;
   if (corr > -1. && corr <= -.9) m[19][2]++;
}
avg20 = avg20/50.;
for (i=0;i<40;i++) {
   fscanf(in, "%d %d %f", &size, &num, &corr);
```

```
avg25 += corr;
  if (corr >= .9) m[0][3]++;
  if (corr \ge .8 \&\& corr < .9) m[1][3]++;
  if (corr >= .7 && corr < .8) m[2][3]++;
  if (corr > = .6 \&\& corr < .7) m[3][3]++;
  if (corr >= .5 && corr < .6) m[4][3]++;
  if (corr >= .4 && corr < .5) m[5][3]++;
  if (corr >= .3 && corr < .4) m[6][3]++;
  if (corr \ge .2 \&\& corr < .3) m[7][3]++;
  if (corr >= .1 && corr < .2) m[8][3]++;
  if (corr >= 0. \&\& corr < .1) m[9][3]++;
  if (corr > -.1 && corr < 0) m[10][3]++;
  if (corr > -.2 && corr <= -.1) m[11][3]++;
   if (corr > -.3 && corr <= -.2) m[12][3]++;
   if (corr > -.4 && corr <= -.3) m[13][3]++;
   if (corr > -.5 \&\& corr <= -.4) m[14][3]++;
   if (corr > -.6 \&\& corr <= -.5) m[15][3]++;
   if (corr > -.7 \&\& corr <= -.6) m[16][3]++;
   if (corr > -.8 \&\& corr <= -.7) m[17][3]++;
   if (corr > -.9 \&\& corr <= -.8) m[18][3]++;
   if (corr > -1. && corr <= -.9) m[19][3]++;
}
avg25 = avg25/40.;
for (i=0;i<20;i++) {
   fscanf(in, "%d %d %f", &size, &num, &corr);
   avg50 += corr;
   if (corr >= .9) m[0][4]++;
   if (corr >= .8 \&\& corr < .9) m[1][4]++;
   if (corr >= .7 \&\& corr < .8) m[2][4]++;
   if (corr >= .6 \&\& corr < .7) m[3][4]++;
   if (corr >= .5 \&\& corr < .6) m[4][4]++;
   if (corr >= .4 && corr < .5) m[5][4]++;
   if (corr >= .3 && corr < .4) m[6][4]++;
   if (corr >= .2 \&\& corr < .3) m[7][4]++;
   if (corr >= .1 && corr < .2) m[8][4]++;
   if (corr >= 0. && corr < .1) m[9][4]++;
   if (corr > -.1 && corr < 0) m[10][4]++;
   if (corr > -.2 && corr <= -.1) m[11][4]++;
   if (corr > -.3 && corr <= -.2) m[12][4]++;
   if (corr > -.4 && corr <= -.3) m[13][4]++;
   if (corr > -.5 && corr <= -.4) m[14][4]++;
```

```
if (corr > -.6 && corr <= -.5) m[15][4]++:
  if (corr > -.7 && corr <= -.6) m[16][4]++;
  if (corr > -.8 \&\& corr <= -.7) m[17][4]++;
  if (corr > -.9 \&\& corr <= -.8) m[18][4]++;
  f (corr > -1. \&\& corr <= -.9) m[19][4]++;
avg50 = avg50/20.;
for (i=0;i<10;i++) {
  fscanf(in, "%d %d %f", &size, &num, &corr);
   avg100 += corr;
   if (corr >= .9) m[0][5]++;
   if (corr >= .8 && corr < .9) m[1][5]++;
   if (corr > = .7 && corr < .8) m[2][5]++;
   if (corr >= .6 \&\& corr < .7) m[3][5]++;
   if (corr >= .5 \&\& corr < .6) m[4][5]++;
   if (corr >= .4 \&\& corr < .5) m[5][5]++;
   if (corr >= .3 && corr < .4) m[6][5]++;
   if (corr >= .2 \&\& corr < .3) m[7][5]++;
   if (corr >= .1 && corr < .2) m[8][5]++;
   if (corr >= 0. && corr < .1) m[9][5]++;
   if (corr > -.1 && corr < 0) m[10][5]++;
   if (corr > -.2 && corr <= -.1) m[11][5]++;
   if (corr > -.3 && corr <= -.2) m[12][5]++;
   if (corr > -.4 && corr <= -.3) m[13][5]++;
   if (corr > -.5 && corr <= -.4) m[14][5]++;
   if (corr > -.6 \&\& corr <= -.5) m[15][5]++;
   if (corr > -.7 \&\& corr <= -.6) m[16][5]++;
   if (corr > -.8 && corr <= -.7) m[17][5]++:
   if (corr > -.9 && corr <= -.8) m[18][5]++;
   if (corr > -1. && corr <= -.9) m[19][5]++;
avg100 = avg100/10.;
for (i=0;i<2;i++) {
   fscanf(in, "%d %d %f", &size, &num, &corr);
   avg500 += corr;
   if (corr >= .9) m[0][6]++;
   if (corr >= .8 && corr < .9) m[1][6]++;
   if (corr >= .7 && corr < .8) m[2][6]++;
   if (corr >= .6 \& a corr < .7) m[3][6]++;
   if (corr >= .5 && corr < .6) n[4][6]++;
```

```
if (corr >= .4 && corr < .5) m[5][6]++;
  if (corr >= .3 && corr < .4) m[6][6]++;
  if (corr \ge 2 && corr < .3) m[7][6]++;
  if (corr >= .1 && corr < .2) m[8][6]++;
  if (corr >= 0. \&\& corr < .1) m[9][6]++;
  if (corr > -.1 && corr < 0) m[10][6]++;
  if (corr > -.2 && corr <= -.1) m[11][6]++;
  if (corr > -.3 && corr <= -.2) m[12][6]++;
   if (corr > -.4 \&\& corr <= -.3) m[13][6]++;
   if (corr > -.5 && corr <= -.4) m[14][6]++;
   if (corr > -.6 \&\& corr <= -.5) m[15][6]++;
   if (corr > -.7 \&\& corr <= -.6) m[16][6]++;
   if (corr > -.8 \&\& corr <= -.7) m[17][6]++;
   if (corr > -.9 \&\& corr <= -.8) m[18][6]++;
   if (corr > -1. \&\& corr <= -.9) m[19][6]++;
}
avg500 = avg500/2.;
for (i=0;i<1;i++) {
   fscanf(in,"%d %d %f",&size,&num,&corr);
   avg1000 += corr;
   if (corr >= .9) m[0][7]++;
   if (corr \ge .8 \&\& corr < .9) m[1][7]++;
   if (corr >= .7 \&\& corr < .8) m[2][7]++;
   if (corr >= .6 && corr < .7) m[3][7]++;
   if (corr >= .5 \&\& corr < .6) m[4][7]++;
   if (corr >= .4 && corr < .5) m[5][7]++;
   if (corr >= .3 && corr < .4) m[6][7]++;
   if (corr >= .2 \&\& corr < .3) m[7][7]++;
   if (corr >= .1 && corr < .2) m[8][7]++;
   if (corr >= 0. \&\& corr < .1) m[9][7]++;
   if (corr > -.1 && corr < 0) m[10][7]++;
   if (corr > -.2 && corr <= -.1) m[11][7]++;
   if (corr > -.3 \&\& corr <= -.2) m[12][7]++;
   if (corr > -.4 \&\& corr <= -.3) m[13][7]++;
   if (corr > -.5 && corr <= -.4) m[14][7]++;
   if (corr > -.6 \&\& corr <= -.5) m[15][7]++;
   if (corr > -.7 && corr <= -.6) m[16][7]++;
   if (corr > -.8 \&\& corr <= -.7) m[17][7]++;
   if (corr > -.9 && corr <= -.8) m[18][7]++;
   if (corr > -1. && corr <= -.9) m[19][7]++;
}
```

```
fprintf(out," [.9,1] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[0][0], m[0][1], m[0][2], m[0][3], m[0][4],
m[0][5], m[0][6], m[0][7]);
fprintf(out," [.8,.9) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[1][0],m[1][1],m[1][2],m[1][3],m[1][4],
m[0][5], m[1][6], m[1][7]);
fprintf(out," [.7,.8) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[2][0], m[2][1], m[2][2], m[2][3], m[2][4],
m[2][5], m[2][6], m[2][7]);
fprintf(out," [.6,.7) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[3][0], m[3][1], m[3][2], m[3][3], m[3][4],
m[3][5], m[3][6], m[3][7]);
fprintf(out," [.5,.6) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[4][0], m[4][1], m[4][2], m[4][3], m[4][4],
m[4][5], m[4][6], m[4][7]);
fprintf(out," [.4,.5) | %3d%6d%6d%6d%6d%6d%6d%6d\n".
m[5][0], m[5][1], m[5][2], m[5][3], m[5][4],
m[5][5], m[5][6], m[5][7]);
fprintf(out," [.3,.4) | %3d%6d%6d%6d%6d%6d%6d%6d%6d\n",
m[6][0], m[6][1], m[6][2], m[6][3], m[6][4],
m[6][5], m[6][6], m[6][7]);
fprintf(out," [.2,.3) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[7][0], m[7][1], m[7][2], m[7][3], m[7][4],
m[7][5], m[7][6], m[7][7]);
fprintf(out," [.1,.2) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[8][0], m[8][1], m[8][2], m[8][3], m[8][4],
m[8][5], m[8][6], m[8][7]);
fprintf(out," [0,.1) | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[9][0], m[9][1], m[9][2], m[9][3], m[9][4],
m[9][5], m[9][6], m[9][7]);
fprintf(out," (-.1,0) | %3d%6d%6d%6d%6d%6d%6d\n",
m[10][0],m[10][1],m[10][2],m[10][3],m[10][4],
m[10][5], m[10][6], m[10][7]);
 fprintf(out,"(-.2,-.1] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
 m[11][0],m[11][1],m[11][2],m[11][3],m[11][4],
 m[11][5],m[11][6],m[11][7]);
 fprintf(out,"(-.3,-.2] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
 m[12][0],m[12][1],m[12][2],m[12][3],m[12][4],
 m[12][5],m[12][6],m[12][7]);
 fprintf(out,"(-.4,-.3] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
 m[13][0],m[13][1],m[13][2],m[13][3],m[13][4],
```

```
m[13][5],m[13][6],m[13][7]);
fprintf(out,"(-.5,-.4] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[14][0],m[14][1],m[14][2],m[14][3],m[14][4],
m[14][5],m[14][6],m[14][7]);
fprintf(out,"(-.6,-.5] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[15][0], m[15][1], m[15][2], m[15][3], m[15][4],
m[15][5],m[15][6],m[15][7]);
fprintf(out,"(-.7,-.6] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[16][0],m[16][1],m[16][2],m[16][3],m[16][4],
m[16][5],m[16][6],m[16][7]);
fprintf(out,"(-.8,-.7] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[17][0],m[17][1],m[17][2],m[17][3],m[17][4],
m[17][5], m[17][6], m[17][7]);
fprintf(out,"(-.9,-.8] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[18][0],m[18][1],m[18][2],m[18][3],m[18][4],
m[18][5],m[18][6],m[18][7]);
fprintf(out," [-1,-.9] | %3d%6d%6d%6d%6d%6d%6d%6d\n",
m[19][0], m[19][1], m[19][2], m[19][3], m[19][4],
m[19][5],m[19][6],m[19][7]);
fprintf(out,"----");
fprintf(out,"----");
fprintf(out,"----\n\n");
fprintf(out," MEAN
                       %5.2f%6.2f%6.2f%6.2f%6.2f%6.2f",
avg5,avg10,avg20,avg25,avg50,avg100);
fprintf(out,"%6.2f%6.2f\n",avg500,avg1000);
fclose(in);
fclose(out);
return;
```

}

Appendix E. CEP Estimates

This Appendix lists the CEP estimates for each of the 875 test design points. The names of the four parameters and the names of the CEP estimation methods for this experiment are abbreviated in the table headings as follows:

Index

Test Point - TP

Parameters

Sample Size - SS

Bias - Bias

Ellipticity - Ell

Correlation - Corr

Estimation Methods

Exact - Exact

Grubbs-Patnaik/chi-square method - Grubbs

Modified RAND-234 method - Rand

Ethridge method - Eth

CEP3 method - CEP3

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
				~~					
1	3	0.00	1.0	0.00	1000.0	1080.4	1082.7	969.5	1002.2
2	3	0.00	1.0	0.40	1002.0	1076.2	1083.2	969.5	1002.2
3	3	0.00	1.0	0.70	1002.0	1075.9	1082.5	969.5	1002.2
4	3	0.00	1.0	0.85	1002.0	1078.2	1082.0	969.5	1002.2
5	3	0.00	1.0	1.00	1002.0	1076.4	1081.3	969.5	1002.2
6	3	0.00	0.8	0.00	898.4	988.1	974.7	873.0	904.5
7	3	0.00	0.8	0.40	902.2	988.8	976.5	873.0	904.5
8	3	0.00	0.8	0.70	905.3	983.3	978.0	873.0	904.5
9	3	0.00	0.8	0.85	906.3	982.3	978.2	873.0	904.5
10	3	0.00	0.8	1.00	906.7	976.5	978.0	873.0	904.5
11	3	0.00	0.6	0.00	793.1	904.7	869.0	779.0	813.9

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	CEP3
· 12	3	0.00	0.6	0.40	805.1	911.9	876.3	779.0	813.9
13	3	0.00	0.6	0.70	818.8		885.1		813.9
14	3	0.00	0.6	0.85	823.4		887.8		813.9
15	3	0.00	0.6	1.00	825.0		888.7	779.0	813.9
16	3	0.00	0.4	0.00	686.3		767.2		733.5
17	3	0.00	0.4	0.40	714.7		786.6		733.5
18	3	0.00	0.4	0.70	747.4		808.5		733.5
19	3	0.00	0.4	0.85	757.7		815.6	688.8	733.5
20	3	0.00	0.4	1.00	761.3	820.3	818.3	688.8	733.5
21	3	0.00	0.2	0.00	599.6	806.9	672.6	606.8	669.6
22	3	0.00	0.2	0.40	643.8				669.6
23	3	0.00	0.2	0.70		791.6	755.9		669.6
24	3	0.00	0.2	0.85	714.8		767.8	606.8	669.6
25	3	0.00	0.2	1.00			772.8	606.8	669.6
26	3	0.25	1.0	0.00			1108.6		1016.7
27	3	0.25	1.0	0.40			1109.0		1016.7
28	3	0.25	1.0	0.70			1108.3		1016.7
29	3	0.25	1.0	0.85			1107.8		1016.7
30	3	0.25	1.0	1.00			1107.2		1016.7
31	3	0.25	0.8	0.00			1001.5		919.9
32	3	0.25	0.8	0.40	918.1	1009.3	1003.6	887.5	919.9
33	3	0.25	0.8	0.70	923.5	1003.5	1005.7	887.5	919.9
34	3	0.25	0.8	0.85	924.0	1002.5	1006.2	887.5	919.9
35	3	0.25	0.8	1.00	924.0	997.0	1006.1	887.5	919.9
36	3	0.25	0.6	0.00	808.0	925.7	896.9	794.2	830.3
37	3	0.25	0.6	0.40	821.3	930.4	904.9	794.2	830.3
38	3	0.25	0.6	0.70	836.9	922.3	914.7	794.2	830.3
39	3	0.25	0.6	0.85	842.1	917.9	917.9	794.3	830.3
40	3	0.25	0.6	1.00	844.0	911.5	919.0	794.3	830.3
41	3	0.25	0.4	0.00	701.4	862.0	796.6	704.7	751.1
42	3	0.25	0.4	0.40	731.8	859.8	816.9	704.7	751.1
43	3	0.25	0.4	0.70	767.0	860.7	840.1	704.7	751.1
44	3	0.25	0.4	0.85	778.0	851.5	847.6	704.7	751.1
45	3	0.25	0.4	1.00	781.9	838.2	850.6	704.7	751.1
46	3	0.25	0.2	0.00	616.8	828.1	703.5	623.4	688.2
47	3	0.25	0.2	0.40	662.4	798.2	749.2	623.4	688.2
48	3	0.25	0.2	0.70	719.5	811.2	788.9	623.4	688.2
49	3	0.25	0.2	0.85	736.4				688.2
50	3	0.25	0.2	1.00	742.2		806.2	623.4	688.2
51	3	0.50	1.0	0.00	1063.1	1140.3	1184.3	1026.5	1061.8

TP	SS			Corr	Exact	Grubbs	Rand	Eth	CEP3
		0.50			4005.4	4447 5	4404		4004 0
52	3	0.50	1.0	0.40		1147.5			
53 54	3	0.50	1.0	0.70		1152.1			
54	3	0.50	1.0	0.85		1149.7			
	3	0.50			1065.0				
	3	0.50			960.1				
	3	0.50	8.0		966.5				
	3	0.50	8.0	• • • •		1063.0			
59	3	0.50	0.8	0.85		1060.4			
60	3	0.50		1.00		1059.1			
	3	0.50	0.6		853.9				
62					871.4				
63	3	0.50	0.6	0.70	892.2		1001.4		
64	3	0.50	0.6	0.85	899.0		1005.6		
65	3	0.50	0.6	1.00		973.5			880.6
66		0.50	0.4			921.7			
67		0.50	0.4			916.4			
68	3	0.50	0.4	0.70	826.6		932.2		
69	3	0.50	0.4	0.85	839.7	917.0			
70	3	0.50	0.4	1.00	844.4	906.4	944.1	752.1	804.3
71	3	0.50	0.2	0.00		892.9			
72	3	0.50	0.2	0.40	719.2	860.6	843.1	672.8	744.2
73	3	0.50	0.2	0.70	782.8	877.2	885.3	672.8	744.2
74	3	0.50	0.2	0.85	801.7	877.4	898.3	672.8	744.2
75	3	0.50	0.2	1.00	808.3	865.2	903.8	672.8	744.2
76	3	0.75	1.0	0.00	1142.6	1216.3	1302.7	1100.0	1135.6
77	3	0.75	1.0	0.40	1144.6	1231.1	1303.6	1100.0	1135.6
78	3	0.75	1.0	0.70	1144.4	1234.7	1304.5	1100.0	1135.6
79	3	0.75	1.0	0.85	1144.4	1243.5	1304.6	1100.0	1135.5
80	3	0.75	1.0	1.00	1144.4	1242.9	1304.6	1100.0	1135.6
81	3	0.75	0.8	0.00	1039.4	1138.9	1202.5	1007.2	1045.0
82	3	0.75	0.8	0.40	1048.7	1149.3	1207.7	1007.2	1045.0
83	3	0.75	0.8	0.70	1059.1	1148.2	1214.7	1007.2	1045.0
84	3	0.75	0.8	0.85	1062.7	1154.2	1217.1	1007.2	1045.0
85	3	0.75	0.8	1.00	1064.1	1150.6	1217.9	1007.2	1045.0
86	3	0.75	0.6	0.00	934.2	1069.2	1106.1	917.2	962.2
87	3	0.75	0.6	0.40	957.4	1071.0	1119.7	917.2	962.2
88	3	0.75	0.6	0.70	985.3	1078.2	1137.1	917.2	962.2
89	3	0.75	0.6	0.85	994.5	1073.6	1143.0	917.2	962.2
90	3	0.75	0.6	1.00	998.0	1070.4	1145.2	917.2	962.2
91	3	0.75	0.4	0.00	834.2	1016.5	1015.2	832.2	890.3

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
92	3	0.75	0.4	0.40		1006.2			
93	3	0.75	0.4	0.70		1010.6			
94		0.75	0.4			1013.0			
95	3	0.75	0.4	1.00		1003.9			
96	3	0.75	0.2	0.00		990.0			
97	3	0.75	0.2	0.40		954.8			
98	3	J.75	0.2	0.70		976.9			
99	3	0.75	0.2	0.85		977.4			
100		0.75	0.2	1.00	918.0	962.1	1054.8	756.3	834.5
101	3	1.00	1.0	0.00	1253.4	1315.4	1454.6	1202.6	1235.0
102	3	1.00	1.0	0.40	1255.3	1336.3	1457.2	1202.6	1235.0
103	3	1.00	1.0	0.70	1255.0	1350.1	1460.8	1202.6	1235.0
104	3	1.00	1.0	0.85	1254.9	1354.8	1462.1	1202.6	1235.0
105	3	1.00	1.0	1.00	1254.9	1354.8	1462.5	1202.6	1235.0
106	3	1.00	0.8	0.00	1152.2	1243.4	1359.3	1112.4	1149.2
107	3	1.00	0.8	0.40	1164.6	1256.7	1367.9	1112.4	1149.2
108	3	1.00	0.8	0.70	1178.5	1266.8	1379.8	1112.4	1149.2
109	3	1.00	0.8	0.85	1183.4	1268.4	1383.9	1112.4	1149.2
110	3	1.00	0.8	1.00	1185.3	1269.9	1385.6	1112.4	1149.2
111	3	1.00	0.6	0.00	1051.7	1183.0	1268.3	1025.6	1071.5
112	3	1.00	0.6	0.40	1079.7	1185.5	1287.2	1025.6	1071.5
113	3	1.00	0.6	0.70	1113.9	1183.9	1311.0	1025.6	1071.5
114	3	1.00	0.6	0.85	1125.2	1189.8	1319.0	1025.6	1071.5
115	3	1.00	0.6	1.00	1129.4	92.7	1322.2	1025.6	1071.5
116	3	1.00	0.4	0.00	962.5	1136.4	1183.8	944.4	1004.9
117	3	1.00	0.4	0.40	1006.4	1120.6	1219.3	944.4	1004.9
118	3	1.00	0.4	0.70	1063.5	1127.8	1257.5	944.4	1004.9
119	3	1.00	0.4	0.85	1082.1	1130.3	1269.7	944.4	1004.9
120	3	1.00	0.4	1.00	1088.8	1124.4	1274.7	944.4	1004.9
121	3	1.00	0.2	0.00	909.0	1112.9	1108.4	873.1	954.2
122	3	1.00	0.2	0.40	954.2	1079.1	1171.5	873.1	954.2
123	3	1.00	0.2	0.70	1030.8	1101.4	1222.7	873.1	954.2
124	3	1.00	0.2	0.85	1055.5	1100.4	1238.6	873.1	954.2
125	3	1.00	0.2	1.00	1064.2	1072.6	1245.5	873.1	954.2
126	3	1.50	1.0	0.00	1550.8	1581.8	1824.2	1478.5	1495.5
127		1.50				1595.7			
128						1612.4	1848.8	1478.5	1495.5
129		1.50				1615.2			
130						1622.5	1856.2	1478.5	1495.5
131		1.50	0.8	0.00	1462.9	1517.5	1738.6	1396.5	1420.7

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
132	3	1.50	0.8	0.40	1477.4	1523.3	1758.4	1396.5	1420.7
133	3	1.50	0.8	0.70	1494.1	1525.6	1784.8	1396.5	1420.7
134	3	1.50	0.8	0.85	1499.8	1530.4	1793.9	1396.5	1420.7
135	3	1.50	8.0	1.00	1502.0	1538.6	1797.6	1396.5	1420.7
136	3	1.50	0.6	0.00	1383.2	1468.4	1658.5	1319.3	1354.6
137	3	1.50	0.6	0.40	1409.9	1469.1	1692.3	1319.3	1354.6
138	3	1.50	0.6	0.70	1446.0	1456.4	1732.4	1319.3	1354.6
139	3	1.50	0.6	0.85	1458.6	1454.8	1745.6	1319.3	1354.6
140	3	1.50	0.6	1.00	1463.3	1457.2	1750.9	1319.3	1354.6
141	3	1.50	0.4	0.00	1323.3	1431.5	1585.5	1249.3	1299.7
142	3	1.50	0.4	0.40	1355.1	1409.2	1639.5	1249.3	1299.7
143	3	1.50	0.4	0.70	1408.8	1411.6	1693.2	1249.3	1299 7
144	3	1.50	0.4	0.85	1428.3	1402.5	1710.2	1249.3	1299.7
145	3	1.50	0.4	1.00	1435.5	1380.5	1717.2	1249.3	1299.7
146	3	1.50	0.2	0.00	1288.5	1409.1	1521.8	1191.0	1260.0
147	3	1.50	0.2	0.40	1319.5	1386.0	1605.1	1191.0	1260.0
148	3	1.50	0.2	0.70	1384.3	1406.6	1668.7	1191.0	1260.0
149	3	1.50	0.2	0.85	1409.6	1386.9	1688.4	1191.0	1260.0
150	3	1.50	0.2	1.00	1418.8	1329.7	1697.3	1191.0	1260.0
151	3	2.00	1.0	0.00	1907.6	1898.7	2240.7	1825.1	1813.2
152	3	2.00	1.0	0.40	1909.1	1895.4	2263.7	1825.1	1813.2
153	3	2.00	1.0	0.70	1908.8	1884.7	2295.1	1825.1	1813.2
154	3	2.00	1.0	0.85	1908.6	1902.8	2306.1	1825.1	1813.2
155	3	2.00	1.0	1.00	1908.6	1899.5	2310.6	1825.1	1813.2
156	3	2.00	0.8	0.00	1836.5	1847.9	2163.4	1753.8	1749.4
157	3	2.00	0.8	0.40	1848.6	1830.7	2199.5	1753.8	1749.4
158	3	2.00	0.8	0.70		1811.7			
159	3	2.00	0.8	0.85	1868.9	1811.5	2259.6	1753.8	1749.4
160						1810.9			
161	3					1804.7			
162	3	2.00	0.6	0.40		1768.8			
163	3	2.00	0.6	0.70		1758.0			
164	3	2.00		0.85		1737.0			
165	3	2.00	0.6	1.00		1718.5			
166	3	2.00	0.4	0.00		1775.8			
167	3	2.00	0.4	0.40		1736.0			
168	3	2.00	0.4	0.70		1716.2			
169	3	2.00	0.4	0.85		1686.0			
170	3	2.00				1641.4			
171	3	2.00	0.2	0.00	1707.1	1755.5	1971.3	1588.6	1620.5

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
470		2 00	^ ^	0.40	1720 6	17/1 7	2078 5	1588.6	1620 5
172	3 3	2.00	0.2	0.40 5.70				1588.6	
173	3	2.00	0.2	0.85				1588.6	
174 175	3	2.00	0.2	1.00				1588.6	
176	5	0.00	1.0	0.00		1017.9			1002.2
177	5	0.00	1.0	0.40		1011.2			1002.2
178	5	0.00	1.0	0.70				942.7	
179	5	0.00	1.0	0.85				942.7	
180	5	0.00	1.0	1.00				942.7	
181	5	0.00	0.8	0.00				849.0	
182	5	0.00	0.8	0.40	902.2		944.2		
183	5	0.00	0.8	0.70	905.3		945.9		
184	5	0.00	0.8	0.85	906.3				
185	5	0.00	0.8	1.00	906.7		946.4		
18€	5	0.00	0.6	0.00	793.1				
187	5	0.00	0.6	0.40	805.1		846.0		
188	5	0.00	0.6	0.70	818.8				
189	5	0.00	0.6	0.85	823.4				
190	5	0.00	0.6	1.00	825.0				
191	5	0.00			686.3				
192	5	0.00				803.0			733.5
193	5	0.00	0.4	0.70	747.4	_		666.3	733.5
194	5	0.00	0.4	0.85	757.7	799.5	790.5	666.3	733.5
195	5	0.00	0.4	1.00	761.3	781.1	793.7	666.3	733.5
196	5	0.00	0.2	0.00	599.6	779.4	638.3	580.8	669.6
197	5	0.00	0.2	0.40	643 .:	743.0	688.6	580.8	669.6
198	5	0.00	0.2	0.70	698.7	762.8	732.1	580.8	669.6
199	5	0.00	0.2	0.85	714.8	770.3	745.6	580.8	669.6
200	5	0.00	0.2	1.00	720.3	752.3	751.4	580.8	669.6
201	5	0.25	1.0	0.00	1015.8	1035.2	1075.5	954.4	1016.7
202	5	0.25	1.0	0.40	1017.8	1031.1	1075.6	954.4	1016.7
203	5	0.25	1.0	0.70	1017.7	1033.7	1075.0	954.4	1016.7
204	5	0.25	1.0	0.85	1017.7	1037.9	1074.7	954.4	1016.7
205	5	0.25	1.0	1.00	1017.7	1034.8	1074.3	954.4	1016.7
206	5	0.25	0.8	0.00	913.7	955.6	971.3		
207	5	0.25	0.8	0.40		959.4			
208	5	0.25	0.8	0.70	922.0				
209	5	0.25	0.8	0.85	923.5				
210					924.0				
211	5	0.25	0.6	0.00	808.0	889.5	868.3	3 770.1	830.3

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
040		0.05	^ ^	0.40					
212	5	0.25					877.0		
213	5	0.25	0.6	0.70	836.9				
214	5	0.25	0.6	0.85	842.1		892.0		
215	5	0.25	0.6	1.00	844.0				
	5	0.25	0.4	0.00			767.8		
217		0.25	0.4	0.40	731.8				
	5	0.25	0.4	0.70	767.0			681.2	
219	5	0.25	0.4	0.85	778.0		825.3		
220	5	0.25	0.4	1.00	781.9				
221	5	0.25		0.00			672.6		
222	5	0.25	0.2		662.4				
223	5			0.70			768.2		688.2
224	5	0.25	0.2	0.85			781.9		688.2
225	5	0.25	0.2	1.00	742.2	782.8	787.8	596.8	688.2
226	5	0.50	1.0	0.00			1156.1		
227	5	0.50	1.0	0.40	1065.1	1096.5	1156.4	996.8	1061.8
228	5	0.50	1.0	0.70	1065.0	1097.3	1156.3	996.8	1061.8
229	5	0.50	1.0	0.85	1065.0	1100.7	1156.1	996.8	1061.8
230	5	0.50	1.0	1.00	1065.0	1101.8	1155.8	996.8	1061.8
231	5	0.50	0.8	0.00	960.1	1011.0	1055.0	904.6	967.5
232	5	0.50	8.0	0.40	966.5	1023.0	1058.6	904.6	967.5
233	5	0.50	0.8	0.70	973.1	1029.0	1063.1	904.6	967.5
234	5	0.50	0.8	0.85	975.4	1022.7	1064.6	904.6	967.5
235	5	0.50	0.8	1.00	976.4	1017.6	1065.0	904.6	967.5
236	5	0.50	0.6	0.00	85 3.9	946.9	956.0	813.8	880.6
237	5	0.50	0.6	0.40	871.4	953.8	967.2	813.8	880.6
238	5	0.50	0.6	0.70	892.2	958.9	981.7	813.8	880.6
239	5	0.50	0.6	0.85	899.0	956.4	986.5	813.8	880.6
240	5	0.50	0.6	1.00	901.6	942.7	988.4	813.8	880.6
241	5	0.50	0.4	0.00	748.9	894.9	860.5	725.8	804.3
242	5	0.50	0.4	0.40	784.6	888.7	886.6	725.8	804.3
243	5	0.50	0.4	0.70	826.6	898.6	916.2	725.8	804.3
244	5	0.50	0.4	0.85	839.7	906.1	925.9	725.8	804.3
245	5	0.50	0.4	1.00	844.4	887.0	929.8	725.8	804.3
246	5	0.50	0.2	0.00	670.7	877.5	771.3	642.6	744.2
247	5	0.50	0.2	0.40	719.2		826.0		744.2
248	5	0.50	0.2	0.70	782.8				
249	5	0.50	0.2	0.85	801.7		886.8		
250	5	0.50	0.2	1.00	808.3		893.1	642.6	
251	5	0.75	1.0	0.00			1280.6		

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
252	5	0.75	1.0	0.40		1195.2			
253	5	0.75	1.0	0.70		1203.5			
254	5	0.75	1.0	0.85		1202.6			
255	5	0.75		1.00		1209.5			
256	5	0.75	0.8	0.00		1097.1			
257	5	0.75	0.8	0.40		1121.3			
258	5	0.75	0.8	0.70	1059.1	1134.6	1198.4	975.6	1045.0
259	5	0.75	0.8	0.85		1125.8			1045.0
260	5	0.75	0.8	1.00	1064.1	1125.6	1202.2	975.6	1045.0
261	5	0.75	0.6	0.00	934.2	1042.2	1090.5	886.4	962.2
262	5	0.75	0.6	0.40	957.4	1050.1	1105.9	886.4	962.2
263	5	0.75	0.6	0.70	985.3	1065.0	1125.4	886.4	962.2
264	5	0.75	0.6	0.85	994.5	1066.6	1132.0	886.4	962.2
265	5	0.75	0.6	1.00	998.0	1058.5	1134.6	886.4	962.2
266	5	0.75	0.4	0.00	834.2	990.6	1001.7	800.5	890.3
267	5	0.75	0.4	0.40	876.1	984.1	1033.1	800.5	890.3
268	5	0.75	0.4	0.70	926.8	1010.6	1067.9	800.5	890.3
269	5	0.75	0.4	0.85	942.7	1012.2	1079.2	800.5	890.3
270	5	0.75	0.4	1.00	948.5	1005.2	1083.9	800.5	890.3
271	5	0.75	0.2	0.00	767.1	977.5	920.2	720.6	834.5
272	5	0.75	0.2	0.40	816.5	929.6	980.3	720.6	834.5
273	5	0.75	0.2	0.70	888.5	976.3	1030.2	720.6	834.5
274	5	0.75	0.2	0.85	810.3	984.6	1045.7	720.6	834.5
275	5	0.75	0.2	1.00	918.0	972.3	1052.6	720.6	834.5
276	5	1.00	1.0	0.00	1253.4	1272.3	1438.1	1166.7	1235.0
277	5	1.00	1.0	0.40	1255.3	1308.4	1441.5	1166.7	1235.0
278	5	1.00	1.0	0.70	1255.0	1333.2	1446.0	1166.7	1235.0
279	5	1.00	1.0	0.85	1254.9	1338.8	1447.6	1166.7	1235.0
280	5	1.00	1.0	1.00	1254.9	1339.4	1448.2	1166.7	1235.0
281	5	1.00	0.8	0.00	1152.2	1213.4	1346.7	1077.6	1149.2
282	5	1.00	0.8	0.40	1164.6	1244.1	1356.8	1077.6	1149.2
283	5	1.00	0.8	0.70	1178.5	1258.6	1370.3	1077.6	1149.2
284	5	1.00	0.8	0.85	1183.4	1264.5	1374.9	1077.6	1149.2
285	5	1.00	0.8	1.00	1185.3	1264.1	1376.8	1077.6	1149.2
286	5	1.00	0.6	0.00	1051.7	1154.8	1259.2	990.9	1071.5
287	5	1.00	0.6	0.40	1079.7	1174.3	1280.2	990.9	1071.5
288	5	1.00	0.6	0.70	1113.9	1192.8	1306.4	990.9	1071.5
289	5	1.00	0.6	0.85	1125.2	1194.3	1315.2	990.9	1071.5
290	5	1.00	0.6	1.00	1129.4	1194.6	1318.8	990.9	1071.5
291	5	1.00	0.4	0.00	962.5	1110.5	1177.4	907.8	1004.9

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	CEP3
292	5	1.00	0.4	0.40	1006.4	1109.3	1216.0	907.8	1004.9
293	5	1.00	0.4	0.70		1142.1			
294	5	1.00	0.4	0.85		1147.5			1004.9
295	5	1.00	0.4	1.00		1140.1			1004.9
296	5	1.00	0.2	0.00		1095.4			
297	5	1.00	0.2			1059.1			
298	5	1.00	0.2	0.70		1111.8			
299	5	1.00	0.2	0.85	1055.5	1122.0	1242.5	831.7	954.2
300	5	1.00	0.2	1.00	1064.2	1108.3	1250.2	831.7	954.2
301	5	1.50	1.0	0.00	1550.8	1556.9	1814.5	1439.6	1495.5
302	5	1.50	1.0	0.40	1552.5	1606.3	1826.5	1439.6	1495.5
303	5	1.50	1.0	0.70	1552.0	1622.5	1843.2	1439.6	1495.5
304	5	1.50	1.0	0.85	1551.8	1629.4	1849.1	1439.6	1495.5
305	5	1.50	1.0	1.00	1551.8	1627.3	1851.5	1439.6	1495.5
306	5	1.50	0.8	0.00	1462.9	1496.1	1733.1	1357.7	1420.7
307	5	1.50	0.8	0.40	1477.4	1534.8	1755.2	1357.7	1420.7
308	5	1.50	0.8	0.70	1494.1	1555.8	1784.0	1357.7	1420.7
309	5	1.50	0.8	0.85	1499.8	1551.6	1793.9	1357.7	1420.7
310	5	1.50	0.8	1.00	1502.0	1551.0	1798.0	1357.7	1420.7
311	5	1.50	0.6	0.00	1383.2	1450.5	1656.7	1279.1	1354.6
312	5	1.50	0.6	0.40	1409.9	1467.1	1693.1	1279.1	1354.6
313	5	1.50	0.6	0.70	1446.0	1485.5	1735.7	1279.1	1354.6
314	5	1.50	0.6	0.85	1458.6	1486.8	1749.9	1279.1	1354.6
315	5	1.50	0.6	1.00	1463.3	1474.2	1755.8	1279.1	1354.6
316	5	1.50	0.4	0.00	1323.3	3 1402.0	1586.8	1206.1	1299.7
317	5	1.50	0.4	0.40	1355.1	1414.1	1643.8	1206.1	1299.7
318	5	1.50	0.4	0.70	1408.8	3 1446.4	1699.8	1206.1	1299.7
319	5	1.50	0.4	0.85	1428.3	3 1445.2	1717.8	1206.1	1299.7
320	5	1.50	0.4	1.00		1422.3			
321	5	1.50	0.2	0.00		1382.4			
322		1.50	0.2	0.40		1382.0			
323		1.50	0.2			3 1438.3			
324		1.50				1439.6			
325		1.50	0.2	1.00		3 1394.3			
326		2.00	1.0	0.00		1892.5			
327		2.00	1.0	0.40		1 1919.5			
328			1.0	0.70		3 1904.6			
329			1.0	0.85		1899.9			
330						5 1915.7			
331	5	2.00	0.8	0.00	1836.	1842.0	2160.6	1715.5	1749.4

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
332	5	2.00	0.8	0.40		1844.8			
333	5	2.00	0.8	0.70		1829.8			
334	5	2.00	0.8	0.85		1811.3			
335	5	2.00	0.8	1.00		1810.8			
336	5	2.00	0.6	0.00		1792.7			
337	5	2.00	0.6	0.40		1801.4			
338	5	2.00	0.6	0.70	1826.2	1784.5	2209.3	1648.7	1694.5
339	5	2.00	0.6	0.85	1837.4	1750.8	2229.2	1648.7	1694.5
340	5	2.00	0.6	1.00	1841.8	1722.9	2237.6	1648.7	1694.5
341	5	2.00	0.4	0.00	1733.2	1749.6	2030.5	1588.9	1650.6
342	5	2.00	0.4	0.40	1755.4	1769.7	2109.9	1588.9	1650.6
343	5	2.00	0.4	0.70	1797.0	1778.9	2181.9	1588.9	1650.6
344	5	2.00	0.4	0.85	1814.3	1732.6	2204.9	1588.9	1650.6
345	5	2.00	0.4	1.00	1820.8	1648.9	2215.1	1588.9	1650.6
346	5	2.00	0.2	0.00	1707.1	1722.2	1975.6	1538.7	1620.5
347	5	2.00	0.2	0.40	1730.6	1756.8	2085.7	1538.7	1620.5
348	5	2.00	0.2	0.70	1778.3	1801.9	2165.4	1538.7	1620.5
349	5	2.00	0.2	0.85	1800.3	1770.0	2190.1	1538.7	1620.5
350	5	2.00	0.2	1.00	1808.1	1629.8	2202.1	1538.7	1620.5
351	7	0.00	1.0	0.00	1000.0	986.9	1034.0	915.2	1002.2
352	7	0.00	1.0	0.40	1002.0	977.3	1033.7	915.2	1002.2
353	7	0.00	1.0	0.70	1002.0	980.1	1032.3	915.2	1002.2
354	7	0.00	1.0	0.85	1002.0	976.1	1031.6	915.2	1002.2
355	7	0.00	1.0	1.00	1002.0	984.3	1031.1	915.2	1002.2
356	7	0.00	0.8	0.00	898.4	924.2	929.7	823.9	904.5
357	7	0.00	0.8	0.40	902.2	923.7	931.2	823.9	904.5
358	7	0.00	0.8	0.70	905.3	915.1	932.6	823.9	904.5
359	7	0.00	0.8	0.85	906.3	905.0	932.9	823.9	904.5
360	7	0.00	0.8	1.00	906.7	897.5	932.8	823.9	904.5
361	7	0.00	0.6	0.00	793.1	854.2	825.3	733.1	813.9
362	7	0.00	0.6	0.40	805.1	856.0	833.7	733.1	813.9
363	7	0.00	0.6	0.70	818.8	850.9	844.1	733.1	813.9
364	7	0.00	0.6	0.85	823.4	839.3	847.6	733.1	813.9
365	7	0.00	0.6	1.00	825.0	821.1	848.8	733.1	813.9
366	7	0.00	0.4	0.00	686.3		722.5	647.0	733.5
367	7	0.00	0.4	0.40	714.7	785.6	745.3	647.0	73 3.5
368	7	0.00	0.4	0.70	747.4		771.7	647.0	733.5
369	7	0.00	0.4	0.85	757.7			647.0	
370	7	0.00	c.:		761.3		783.8	647.0	733.5
371	7	0.00	0 2	00	599.6	765.0	623.5	562.9	669.6

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	CEP3
372	7	0.00	0.2	0.40	643.8		676.5	562.9	
373	7	0.00	0.2	0.70	698.7				
	7	0.00	0.2				736.5		
	7						742.7		669.6
376	7	0.25	1.0				1062.0		
	7	0.25	1.0	0.40			1061.7		1016.7
378	7	0.25	1.0	0.70			1060.6		1016.7
379	7	0.25	1.0				1060.0		
380	7	0.25	1.0				1059.7		
381	7	0.25	8.0	0.00			958.8		
382	7	0.25	0.8	0.40	918.1	938.8	960.8	836.9	919.9
383	7	0.25	0.8	0.70	922.0	940.0	963.1	836.9	
384	7	0.25	0.8	0.85	923.5	931.8	963.8	836.9	919.9
385	7	0.25	0.8	1.00	924.0	926.1	963.9	836.9	919.9
386	7	0.25	0.6	0.00	808.0	874.4	856.1	747.3	830.3
387	7	0.25	0.6	0.40	821.3	877.2	865.3	747.3	830.3
388	7	0.25	0.6	0.70	836.9	869.9	877.0	747.3	830.3
389	7	0.25	0.6	0.85	842.1	863.4	881.0	747.3	830.3
390	7	0.25	0.6	1.00	844.0	847.3	882.4	747.3	830.3
391	7	0.25	0.4	0.00	701.4	810.5	755.3	662.5	751.1
392	7	0.25	0.4	0.40	731.8	810.7	779.3	662.5	751.1
393	7	0.25	0.4	0.70	767.0	819.6	806.9	662.5	751.1
394	7	0.25	0.4	0.85	778.0	816.3	815.9	662.5	751.1
395	7	0.25	0.4	1.00	781.9	790.1	819.6	662.5	751.1
396	7	0.25	0.2	0.00	661.8	794.7	658.9	579.5	688.2
397	7	0.25	0.2	0.40	662.4	749.8	712.9	579.5	688.2
398	7	0.25	0.2	0.70	719.5	777.9	759.3	579.5	688.2
399	7	0.25	0.2	0.85	736.4	785.0	773.7	579.5	688.2
400	7	0.25	0.2	1.00	742.2	769.6	780.0	579.5	688.2
401	7	0.50	1.0	0.00	1063.1	1054.9	1144.1	967.5	1061.8
402	7	0.50	1.0	0.40	1065.1	1073.6	1144.2	967.5	1061.8
403	7	0.50	1.0	0.70	1065.0	1080.9	1143.7	967.5	1061.8
404	7	0.50	1.0	0.85	1065.0	1073.5	1143.5	967.5	1061.8
405	7	0.50	1.0	1.00	1065.0	1079.0	1143.3	967.5	1061.8
406	7	0.50	0.8	0.00	960.1	994.7	1044.3	879.3	967.5
407		0.50	0.8	0.40	966.5	1001.4	1047.9	879.3	967.5
408						1006.2	1052.5	879.3	967.5
409		0.50			975.4	1006.0	1054.0	879.3	967.5
410					976.4	1000.0	1054.5	879.3	967.5
411			0.6	0.00	853.9	933.4	946.0	793.9	880.6

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	CEP3
412	7	0.50	0.6	0.40	871 Δ	940.9	957.7	793.9	880.6
413	7	0.50	0.6	0.70				793.9	
		0.50	0.6		899.0		978.0		
415	7	0.50		1.00		927.4			880.6
	7	0.50	0.4	0.00	748.9		850.7		
417	7	0.50	0.4	0.40	784.6		878.0		
418	7	0.50	0.4	0.70	826.6		909.0		
419	7	0.50	0.4	0.85	839.7				
420		0.50			844.4				
421	7	0.50	0.2	0.00		871.3			
422	7	0.50	0.2	0.40	719.2			627.4	
423	7	0.50	0.2	0.70		855.2			
424	7	0.50	0.2	0.85		867.2			
425	7	0.50	0.2		808.3				
426	7	0.75				1141.6			
427		0.75		0.40		1170.5			
428	7	0.75		0.70		1185.3			
429	7	0.75		0.85		1194.8			
430	7	0.75		1.00		1188.7			
431	7	0.75				1085.7			
432		0.75				1099.1			
433	7	0.75				1110.7			
434	7	0.75				1119.9			1045.0
435	7	0.75	0.8	1.00	1064.1		1195.1		1045.0
436	7	0.75		0.00		1023.2			
437		0.75			957.4				
438	7	0.75			985.3				
439				0.85		1060.8			
440	7			1.00	998.0				
441	7			0.00	834.2	980.1	995.8		
442		0.75	0.4	0.40	876.1	968.9	1028.4	780.6	890.3
443	7	0.75	0.4	0.70	926.8	1003.7	1064.5	780.6	890.3
444		0.75				1012.8			
445	7	0.75	0.4	1.00	948.5	1001.4	1081.3	780.6	890.3
446							914.5		
447					816.5	916.9	976.8	703.4	834.5
448					888.5				
449					910.3				
450						977.7			
451						1254.0			

TP		Bias		Corr	Exact	Grubbs	Rand	Eth	CEP3
							4404 5		
	7	1.00	1.0	0.40		1298.3			
	7	1.00	1.0			1322.2			
	7	1.00		0.85		1329.2			
455		1.00		1.00		1335.4			
	7	1.00	8.0			1201.5			
457		1.00	8.0	0.40		1231.3			
	7	1.00	0.8	0.70		1259.6			
459	7	1.00	0.8	0.85		1258.3			
	7	1.00		1.00		1261.8			
461	7	1.00				1140.0			
462		1.00	0.6			1163.8			
463		1.00	0.6	0.70		1193.2			
464	7	1.00	0.6	0.85		1195.5			
	7	1.00		1.00		1201.4			
466		1.00	0.4			1099.9			
467	7	1.00	0.4	0.40	1006.4	1097.9	1214.8	883.5	1004.9
468	7	1.00	0.4	0.70	1063.5	1142.3	1257.1	883.5	1004.9
469	7	1.00	0.4	0.85	1082.1	1157.1	1271.0	883.5	1004.9
470	7	1.00	0.4	1.00	1088.8	1151.8	1276.9	883.5	1004.9
471	7	1.00	0.2	0.00	909.0	1093.4	1101.9	804.9	954.2
472	7	1.00	0.2	0.40	954.2	1045.5	1171.3	804.9	954.2
473	7	1.00	0.2	0.70	1030.8	1117.0	1227.0	804.9	954.2
474	7	1.00	0.2	0.85	1055.5	1133.2	1244.3	804.9	954.2
475	7	1.00	0.2	1.00	1064.2	1129.8	1252.4	804.9	954.2
476	7	1.50	1.0	0.00	1550.8	1547.0	1810.6	1393.2	1495.5
477	7	1.50	1.0	0.40	1552.5	1598.1	1823.4	1393.2	1495.5
478	7	1.50	1.0	0.70	1552.0	1629.0	1841.4	1393.2	1495.5
479	7	1.50	1.0	0.85	1551.8	1635.5	1847.8	1393.2	1495.5
480	7	1.50	1.0	1.00	1551.8	1651.0	1850.5	1393.2	1495.5
481	7	1.50	0.8	0.00	1462.9	1481.2	1731.1	1316.3	1420.7
482	7	1.50	0.8	0.40	1477.4	1537.3	1754.1	1316.3	1420.7
483	7	1.50	0.8	0.70	1494.1	1561.4	1784.2	1316.3	1420.7
484	7	1.50	0.8	0.85	1499.8	1569.9	1794.7	1316.3	1420.7
485	7	1.50	8.0	1.00	1502.0	1570.3	1799.1	1316.3	1420.7
486	7	1.50	0.6	0.00	1383.2	1429.9	1656.4	1242.9	1354.6
487	7	1.50	0.6	0.40	1409.9	1469.1	1694.0	1242.9	1354.6
488	7	1.50	0.6	0.70	1446.0	1505.1	1737.7	1242.9	1354.6
489		1.50	0.6	0.85	1458.6	1502.7	1752.4	1242.9	1354.6
490	7	1.50	0.6	1.00	1463.3	1500.1	1758.6	1242.9	1354.6
491	7	1.50	0.4	0.00	1323.3	1379.8	1587.9	1171.9	1299.7

TP				Corr	Exact	Grubbs	Rand	Eth	CEP3
	7	1.50	0.4	0.40		1417.0			
	7	1.50	0.4	0.70		1464.5			
	7~	1.50	0.4	0.85		1469.8			
495		1.50	0.4	1.00		1448.2			
496			0.2	0.00		1361.0			
497		1.50	0.2	0.40		1371.8			
498	7	1.50	0.2	0.70		1449.7			
499	7	1.50	0.2	0.85		1463.2			
500		1.50		1.00		1432.7			
	7	2.00	1.0	0.00		1892.5			
502	7	2.00	1.0	0.40	1909 1	1935.8	2258.4	1740.4	1813.2
503	7	2.00	1.0	0.70	1908.8	1911.4	2294.0	1740.4	1813.2
504	7	2.00	1.0	0.85	1908.6	1924.2	2306.5	1740.4	1813.2
505	7	2.00	1.0	1.00	1908.6	1932.3	2311.7	1740.4	1813.2
506	7	2.00	0.8	0.00	1836.5	1839.8	2160.1	1669.0	1749.4
507	7	2.00	0.8	0.40	1848.6	1874.1	2200.0	1669.0	1749.4
508	7	2.00	0.8	0.70	1863.7	1846.1	2248.6	1669.0	1749.4
509	7	2.00	0.8	0.85	1868.9	1853.4	2265.1	1669.0	1749.4
510	7	2.00	0.8	1.00	1871.2	1840.8	2272.1	1669.0	1749.4
511	7	2.00	0.6	0.00	1776.8	1786.2	2093.5	1600.8	1694.5
512	7	2.00	0.6	0.40	1796.3	1829.5	2150.8	1600.8	1694.5
513	7	2.00	0.6	0.70	1826.2	1821.1	2212.3	1600.8	1694.5
514	7	2.00	0.6	0.85	1837.4	1777.3	2232.6	1600.8	1694.5
515	7	2.00	0.6	1.00	1841.8	1755.6	2241.4	1600.8	1694.5
516	7	2.00	0.4	0.00	1733.2	1737.7	2032.6	1536.4	1650.6
517	7	2.00	0.4	0.40	1755.4	1784.1	2113.1	1536.4	1650.6
518	7	2.00	0.4	0.70	1797.0	1814.9	2185.8	1536.4	1650.6
519	7	2.00	0.4	0.85	1814.3	1771.5	2209.1	1536.4	1650.6
520	7	2.00	0.4	1.00	1820.8	1691.0	2219.7	1536.4	1650.6
521	7	2.00	0.2	0.00	1707.1	1710.9	1978.2	1472.2	1620.5
522	7		0.2			1752.4			
523	7	2.00	0.2	0.70	1778.3	1823.7	2169.9	1472.2	1620.5
524	7	2.00	0.2	0.85		1825.6			
525	7	2.00	0.2	1.00		1693.1			
526	10	0.00	1.0	0.00	1000.0		1021.6		1002.2
527	10	0.00	1.0	0.40		958.1			
528	10	0.00	1.0	0.70		963.7			1002.2
529	10	0.00	1.0	0.85	1002.0		1021.1		
530	10	0.00	1.0	1.00		967.9			1002.2
531	10	0.00	0.8	0.00	898.4		918.6		
				•					

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	CEP3
532	10	0.00	0.8	0.40	902.2	908.1	920.7	772.8	904.5
533	10	0.00	0.8	0.70	905.3		923.0	772.8	
534	10	0.00	0.8	0.85	906.3		923.7	772.8	
535	10	0.00	0.8	1.00		879.4	923.8		
536	10	0.00	0.6	0.00	793.1		814.8	693.0	
537	10	0.00	0.6	0.40	805.1		823.9	693.0	
538	10	0.00	0.6	0.70	818.8		835.5	693.0	
539	10	0.00	0.6	0.85	823.4		839.5		
540	10	0.00	0.6	1.00	825.0		841.0		
541	10	0.00	0.4	0.00	686.3		712.0		
542	10	0.00	0.4	0.40	714.7		736.0		
543	10	0.00	0.4	0.70	747.4		763.7		733.5
544	10	0.00	0.4	0.85	757.7		772.9		
545	10	0.00	0.4	1.00	761.3		776.8		
546	10	0.00	0.2	0.00	599.6		612.0		
547	10	0.00	0.2	0.40	643.8		667.3		
548	10	0.00	0.2	0.70	698.7		714.7		
549	10	0.00	0.2	0.85	714.8		729.5		
550	10	0.00	0.2		720.3		736.1	540.6	669.6
551	10	0.25	1.0	0.00	1015.8	981.6	1051.5	876.4	1016.7
552	10	0.25	1.0	0.40	1017.8	986.9	1051.5	876.4	1016.7
553	10	0.25	1.0	0.70	1017.7	982.7	1051.1	876.4	1016.7
554	10	0.25	1.0	0.85	1017.7	986.0	1050.8	876.4	1016.7
555	10	0.25	1.0	1.00	1017.7	991.9	1050.6	876.4	1016.7
556	10	0.25	0.8	0.00	913.7	928.7	949.7	792.8	919.9
557	10	0.25	0.8	0.40	913.7	930.3	952.2	792.8	919.9
558	10	0.25	0.8	0.70	922.0	921.0	955.2	792.8	919.9
559	10	0.25	0.8	0.85	923.5	922.7	956.2	792.8	919.9
560	10	0.25	0.8	1.00	924.0	910.0	956.6	792.8	919.9
561	10	0.25	0.6	0.00	808.0	857.0	847.8	713.6	830.3
562	10	0.25	0.6	0.40	821.3	863.1	857.7	713.6	830.3
563	10	0.25	0.6	0.70	836.9	866.4	870.5	713.6	830.3
564	10	0.25	0.6	0.85	842.1	851.1	874.9	713.6	830.3
565	10	0.25	0.6	1.00	844.0	832.4	876.7	713.6	830.3
566	10	0.25	0.4	0.00		795.1			
567	10	0.25	0.4	0.40	731.8				
568	10	0.25	0.4	0.70	767.0				
569	10	0.25	0.4	0.85	778.0			634.5	
570	10	0.25	0.4	1.00	781.9				
571	10	0.25	0.2	0.00	616.8	786.5	650.4	559.0	688.2

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	СЕРЗ
572	10	0.25	0.2	0.40	662.4	734.5	706.7	559.0	688.2
573	10	0.25			719.5			559.0	
574	10	0.25			736.4			559.0	
575	10				742.2				
576	10			0.00			1135.9		1061.8
577	10	0.50	1.0		1065.0				1061.8
578	10	0.50		0.70			1136.4		
579	10			0.85			1136.4		1061.8
580	10	0.50		1.00			1136.4		1061.8
581	10	0.50		0.00			1037.7		
582	10	0.50	0.8				1041.7		
583	10	0.50	0.8	0.70	973.1				967.5
584	10	0.50	0.8	0.85	975.4	997.4	1049.0	835.8	967.5
585	10	0.50	0.8	1.00	976.4	984.9	1049.8	835.8	967.5
586	10	0.50	0.6	0.00	853.9	921.6	940.5	752.4	880.6
587	10	0.50	0.6	0.40	871.4	929.6	953.0	752.4	880.6
588	10	0.50	0.6	0.70	892.2	939.3	969.2	752.4	880.6
589	10	0.50	0.6	0.85	899.0	936.8	974.9	752.4	880.6
590	10	0.50	0.6	1.00	901.6	920.3	977.2	752.4	880.6
591	10	0.50	0.4	0.00	748.9	870.9	846.1	676.9	804.3
592	10	0.50	0.4	0.40	784.6	859.1	874.6	676.9	804.3
593	10	0.50	0.4	0.70	826.6	884.1	906.8	676.9	804.3
594	10	0.50	0.4	0.85	839.7	896.0	917.6	676.9	804.3
595	10	0.50	0.4	1.00	844.4	873.8	922.2	676.9	804.3
596	10	0.50	0.2	0.00	670.7	869.5	756.5	591.6	744.2
597	10	0.50	0.2	0.40	719.2	804.7	815.7	591.6	744.2
598	10	0.50	0.2	0.70	782.8	845.8	865.4	591.6	744.2
599	10	0.50	0.2	0.85	801.7	857.7	880.8	591.6	744.2
600	10	0.50	0.2	1.00	808.3				744.2
601	10	0.75	1.0	0.00			1264.9		1135.6
602	10	0.75	1.0	0.40			1266.4		1135.6
603	10	0.75	1.0	0.70			1268.6		1135.6
604	10	0.75	1.0	0.85			1269.4		1135.5
605	10	0.75	1.0				1269.8		1135.6
606	10	0.75					1171.6		
607	10	0.75	0.8	0.40			1178.5		1045.0
608	10		0.8				1188.1		1045.0
609							1191.5		
610							1193.0		1045.0
611	10	0.75	り.6	0.00	934.2	1015.0	1080.7	810.5	962.2

TP	SS 	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
612	10	0.75	0.6	0.40	957.4	1032 5	1097 5	810 5	962.2
613	10	0.75			985.3				
614	10	0.75				1061.6			
615	10		0.6	1.00		1058.7			
616	10	0.75	0.4	0.00		973.4			
617	10	0.75	0.4	0.40		957.9			
618	10	0.75	0.4	0.70		1005.1			
619	10	0.75	0.4		942.7				
620	10	0.75	0.4	1.00		1015.7			
621	10	0.75	0.2	0.00		975.9			
622	10	0.75	0.2	0.40		909.6			
623	10	0.75	0.2	0.70		970.2			
624	10	0.75	0.2	0.85	910.3	986.5	1046.4	657.3	834.5
625	10	0.75	0.2	1.00	\$18.0	987.1	1054.1	657.3	834.5
626	10	1.00	1.0	0.00	1253.4	1247.4	1426.2	1057.8	1235.0
627	10	1.00	1.0	0.40	1255.3	1295.2	1430.3	1057.8	1235.0
628	10	1.00	1.0	0.70	1255.0	1324.2	1436.5	1057.8	1235.0
629	10	1.00	1.0	0.85	1254.9	1333.8	1438.7	1057.8	1235.0
630	10	1.00	1.0	1.00	1254.9	1340.9	1439.8	1057.8	1235.0
631	10	1.00	0.8	0.00	1152.2	1189.5	1338.3	982.8	1149.2
632	10	1.00	0.8	0.40	1164.6	1228.0	1349.6	982.8	1149.2
633	10	1.00	0.8	0.70	1178.5	1258.8	1365.2	982.8	1149.2
634	10	1.00	0.8	0.85	1183.4	1265.7	1370.8	982.8	1149.2
635	10	1.00	0.8	1.00	1185.3	1271.4	1373.2	982.8	1149.2
636	10	1.00	0.6	0.00	1051.7	1126.7	1253.9	908.2	1071.5
637	10	1.00	0.6	0.40	1079.7	1158.6	1276.7	908.2	1071.5
638	10	1.00	0.6	0.70	1113.9	1198.1	1305.3	908.2	1071.5
639	10	1.00	0.6	0.85	1125.2	1210.8	1315.2	908.2	1071.5
640	10	1.00	0.6			1208.5			1071.5
	10	1.00	0.4	0.00	962.5				1004.9
642	10	1.00	0.4			1085.2			1004.9
643	10	1.00	0.4			1149.3			1004.9
644	10	1.00	0.4			1166.3			1004.9
645	10	1.00	0.4			1167.8			1004.9
646	10	1.00	0.2	0.00		1089.9			
647	10	1.00	0.2	0.40		1035.8			
648	10	1.00	0.2	0.70		1115.3			
649	10	1.00	0.2	0.85		1134.4			
650	10	1.00	0.2	1.00		1144.9			
651	10	1.50	1.0	0.00	1550.8	1547.0	1806.9	1298.8	1495.5

TP				Corr	Exact	Grubbs	Rand	Eth	CEP3
	10		1 ^	0.40	4550.5	1615 4	4000 6	4000.0	4405 5
652 653	10	1.50	1.0	0.40		1615.4			
653 654	10	1.50				1637.1			
654	10	1.50				1660.2			
655 656	10	1.50	1.0			1662.2			
656 657	10	1.50	0.8	0.00		1476.7			
657	10	1.50	0.8	0.40		1540.9			
658	10	1.50	0.8	0.70		1574.5			
659	10	1.50	0.8			1583.8			
660	10	1.50				1585.2			
661	10	1.50	0.6			1411.7			
662	10	1.50	0.6			1468.5			
663	10	1.50	0.6	0.70		1516.8			
664	10	1.50	0.6	0.85		1517.3			
665	10			1.00		1520.7			
666	10	1.50	0.4			1368.4			
667	10		0.4			1412.5			
668	10	1.50	0.4	0.70		1479.2			
669	10	1.50	0.4	0.85		1488.0			
670	10			1.00	1435.5	1470.0	1733.2	1090.9	1299.7
671	10	1.50		0.00		1346.8	1528.1	1009.8	1260.0
672	10	1.50	0.2	0.40	1319.5	1362.4	1617.6	1009.8	1260.0
673	10	1.50	0.2	0.70	1384.3	1446.9	1685.3	1009.8	1260.0
674	10	1.50	0.2	0.85	1409.6	1479.8	1706.3	1009.8	1260.0
675	10	1.50	0.2	1.00	1418.8	1462.0	1716.7	1009.8	1260.0
676	10	2.00	1.0	0.00	1907.6	1889.6	2228.5	1629.5	1813.2
677	10	2.00	1.0	0.40	1909.1	1948.4	2256.5	1629.5	1813.2
678	10	2.00	1.0	0.70	1908.8	1948.4	2293.5	1629.5	1813.2
679	10	2.00	1.0	0.85	1908.6	1944.4	2306.7	1629.5	1813.2
680	10	2.00	1.0	1.00	1908.6	1954.5	2312.3	1629.5	1813.2
681	10	2.00	0.8	0.00	1836.5	1831.5	2158.6	1566.1	1749.4
682	10	2.00	0.8	0.40	1848.6	1890.1	2199.7	1566.1	1749.4
683	10	2.00	0.8	0.70	1863.7	1874.3	2249.3	1566.1	1749.4
684	10	2.00	0.8	0.85	1868.9	1861.1	2266.4	1566.1	1749.4
685	10	2.00	0.8	1.00	1871.2	1862.5	2273.8	1566.1	1749.4
686	10	2.00	0.6	0.00	1776.8	1782.3	2093.3	1493.9	1694.5
687	10	2.00	0.6	0.40	1796.3	1836.3	2151.9	1493.9	1694.5
688	10	2.00	0.6	0.70	1826.2	1848.8	2213.9	1493.9	1694.5
689	10	2.00	0.6	0.85	1837.4	1812.2	2234.7	1493.9	1694.5
690	10	2.00	0.6	1.00	1814.8	1770.2	2243.9	1493.9	1694.5
691	10	2.00	0.4	0.00	1733.2	1729.2	2033.4	1426.6	1650.6

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
692	10	2.00	0.4	0.40				1426.6	
693	10	2.00	0.4	0.70				1426.6	
694	10	2.00	0.4	0.85	1814.3	1809.7	2211.7	1426.6	1650.6
695	10	2.00	0.4	1.00	1820.8	1709.4	2222.7	1426.6	1650.6
696	10	2.00	0.2	0.00				1330.7	
697	10	2.00	0.2	0.40	1730.6	1748.1	2091.6	1330.7	1620.5
698	10	2.00	0.2	0.70				1330.7	
699	10	2.00	0.2	0.85				1330.7	
700	10	2.00	0.2	1.00	1808.1	1744.5	2210.4	1330.7	1620.5
701	15	0.00	1.0	0.00	1000.0	931.9	1012.1	828.2	1002.2
702	15	0.00	1.0	0.40	1002.0	953.5	1012.4	828.2	1002.2
703	15	0.00	1.0	0.70	1002.0	947.2	1011.7	828.2	1002.2
704	15	0.00	1.0	0.85	1002.0	953.3	1011.3	828.2	1002.2
705	15	0.00	1.0	1.00	1002.0		1011.0	828.2	1002.2
706	15	0.00	0.8	0.00	898.4	908.9	910.2	749.1	904.5
707	15	0.00	0.8	0.40	902.2	904.5	912.4	749.1	904.5
708	15	0.00	0.8	0.70	905.3	890.2	914.7	749.1	904.5
709	15	0.00	0.8	0.85	906.3	878.4	915.4	749.1	904.5
710	15	0.00	0.8	1.00	906.7	864.9	915.6	749.1	904.5
711	15	0.00	0.6	0.00	793.1	823.1	806.8	674.4	813.9
712	15	0.00	0.6	0.40	805.1	828.2	816.2	674.4	813.9
713	15	0.00	0.6	0.70	818.8	827.1	828.2	674.4	813.9
714	15	0.00	0.6	0.85	823.4	818.3	832.5	674.4	813.9
715	15	0.00	0.6	1.00	825.0	789.6	834.2	674.4	813.9
716	15	0.00	0.4	0.00	686.3	747.9	703.9	598.4	733.5
717	15	0.00	0.4	0.40	714.7	751.3	728.7	598.4	733.5
718	15	0.00	0.4	0.70	747.4	765.9	757.2	598.4	733.5
719	15	0.00	0.4	0.85	757.7	769.3	767.0	598.4	733.5
720	15	0.00	0.4	1.00	761.3	744.5	771.2	598.4	733.5
721	15	0.00	0.2	0.00	599.6	740.0	603.2	527.9	669.6
722	15	0.00	0.2	0.40	643.8	694.2	660.3	527.9	669.6
723	15	0.00	0.2	0.70	698.7	713.8	709.1	527.9	669.6
724	15	0.00	0.2	0.85	714.8	732.6	724.3	527.9	669.6
725	15	0.00	0.2	1.00	720.3	736.6	731.4	527.9	669.6
726	15	0.25	1.0	0.00	1015.8	954.5	1042.0	836.7	1016.7
727	15	0.25	1.0	0.40	1017.8	973.2	1042.4	836.7	1016.7
728	15	0.25	1.0	0.70	1017.7	984.1	1041.9	836.7	1016.7
729	15	0.25	1.0	0.85	1017.7		1041.6		1016.7
730	15	0.25	1.0	1.00	1017.7	987.6	1041.3	836.7	1016.7
731	15	0.25	0.8	0.00	913.7	927.0	941.4	753.5	919.9

TP		Bias		Corr	Exact	Grubbs	Rand	Eth	CEP3
732	15	0.25	8.0	0.40			944.1		
733	15	0.25	0.8	0.70	922.0				
734	15		0.8		923.5				
735	15				924.0				
736	15				808.0				
737	15	0.25			821.3				
738	15	0.25	0.6	0.70	836.9		863.5		
739	15	0.25	0.6		842.1				
740	15	0.25	0.6		844.0				
741	15		0.4				739.6		
742	15	0.25		0.40			765.5		
743	15	0.25	0.4	0.70	767.0				751.1
744	15	0.25	0.4	0.85	778.0		805.3		751.1
745	15	0.25	0.4	1.00	781.9	786.2	809.8	608.4	751.1
746	15	0.25	0.2		616.8	777.6	642.0	536.7	688.2
747	15	0.25	0.2	0.40	662.4	725.2	699.9	536.7	688.2
748	15	0.25	0.2	0.70	719.5	752.9	749.1	536.7	688.2
749	15	0.25	0.2	0.85	736.4	765.1	764.5	536.7	688.2
750	15	0.25	0.2	1.00	742.2	768.1	771.7	536.7	688.2
751	15	0.50	1.0	0.00	1063.1	1028.6	1127.6	889.0	1061.8
752	15	0.50	1.0	0.40	1065.1	1045.7	1128.4	889.0	1061.8
753	15	0.50	1.0	0.70	1065.0	1068.7	1128.8	889.0	1061.8
754	15	0.50	1.0	0.85	1065.0	1074.0	1128.8	889.0	1061.8
755	15	0.50	1.0	1.00	1065.0	1072.6	1128.8	889.0	1061.8
756	15	0.50	0.8	0.00	960.1	981.3	1030.5	800.4	967.5
757	15	0.50	0.8	0.40	965.5	990.5	1035.0	800.4	967.5
758	15	0.50	0.8	0.70	973.1	997.9	1040.8	800.4	967.5
759	15	0.50	0.8	0.85	975.4	999.1	1042.9	800.4	967.5
760	15	0.50	0.8	1.00	976.4	993.1	1043.8	800.4	967.5
761	15	0.50	0.6	0.00	853.9	910.2	934.1	721.5	880.6
762	15	0.50	0.6	0.40	871.4	915.6	947.2	721.5	880.6
763	15	0.50	0.6	0.70	892.2	936.5	964.1	721.5	880.6
764	15	0.50	0.6	0.85	899.0	937.3	970.1	721.5	880.6
765	15	0.50	0.6	1.00	901.6	931.6	972.7	721.5	880.6
766	15	0.50	0.4	0.00	748.9	864.7	840.2	657.6	804.3
767	15	0.50	0.4	0.40	784.6	839.4	869.6	657.6	804.3
768	15	0.50	0.4	0.70	826.6	877.7	902.5	657.6	804.3
769	15	0.50	0.4	0.85	839.7	883.9	913.7	657.6	804.3
770	15	0.50	0.4	1.00	844.4	878.7	918.7	657.6	804.3
771	15	0.50	0.2	0.00	670.7	870.9	750.6	578.7	744.2

TP				Corr	Exact	Grubbs	Rand	Eth	CEP3
770	15		0.0	0.40	710.0	700 0	011 0	 5 7 0 7	744 0
772 773	15 15	0.50 0.50	0.2	0.70	719.2 782.8		861.8		
774	15	0.50			801.7				
775	15				808.3				
776	15	0.75			1142.6				
777	15	0.75			1144.6				
778	15	0.75	1.0		1144.4				
779	15	0.75		0.85	1144.4				
780	15	0.75		1.00		1193.9			
781	15	0.75			1039.4				
782	15	0.75			1048.7				
783	15	0.75			1059.1				
784	15	0.75	0.8	0.85	1062.7	1109.8	1187.8	853.6	1045.0
785	15	0.75	0.8	1.00	1064.1	1118.1	1189.4	853.6	1045.0
786	15	0.75	0.6	0.00	934.2	1002.0	1076.2	778.9	962.2
787	15	0.75	0.6	0.40	957.4	1013.2	1093.9	778.9	962.2
788	15	0.75	0.6	0.70	985.3	1053.5	1116.3	778.9	962.2
789	15	0.75	0.6	0.85	994.5	1059.7	1124.3	778.9	962.2
790	15	0.75	0.6	1.00	998.0	1058.6	1127.8	778.9	962.2
791	15	0.75	0.4	0.00	834.2	969.6	990.5	710.9	890.3
792	15	0.75	0.4	0.40	876.1	936.6	1025.4	710.9	890.3
793	15	0.75	0.4	0.70	926.8	1001.3	1063.3	710.9	890.3
794	15	0.75	0.4	0.85	942.7	1010.8	1076.1	710.9	890.3
795	15	0.75	0.4	1.00	948.5	1015.1	1081.9	710.9	890.3
796	15	0.75	0.2	0.00	767.1	982.4	910.5	636.9	834.5
797	15	0.75				900.7			
798	15	0.75			888.5				
799	15	0.75			910.3				
	15	0.75			918.0				
					1253.4				
802					1255.3				
803	15				1255.0				
804	15	1.00	1.0	0.85		1333.2			
805	15	1.00	1.0	1.00		1338.9			
806	15	1.00	0.8	0.00		1180.7			
807	15	1.00				1225.4			
808	15	1.00			1178.5				
809	15	1.00		0.85		1266.3			
810	15	1.00	0.8						1149.2
811	15	1.00	0.6	0.00	1051.7	111/.2	1251.3	880.1	1071.5

TP	SS	Bias	E11	Corr	Exact	Grubbs	Rand	Eth	CEP3
812	15	1.00	0.6	0.40	1079 7	1144.7	1275 2	880 1	1071 5
813	15		0.6			1203.1			
814	15	1.00				1210.8			
815	15	1.00				1214.2			
816	15	1.00				1084.2			
	15	1.00				1068.2			
818	15	1.00	0.4	0.70		1150.6			
819	15	1.00	0.4	0.85	1032.1	1163.4	1274.2	813.4	1004.9
820	15	1.00	0.4	1.00	1088.8	1168.2	1281.0	813.4	1004.9
821	15	1.00	0.2	0.00	909.0	1089.4	1101.9	740.0	954.2
822	15	1.00	0.2	0.40	954.2	1017.7	1173.9	740.0	954.2
823	15	1.00	0.2	0.70	1030.8	1111.4	1231.1	740.0	954.2
824	15	1.00	0.2	0.85	1055.5	1135.7	1249.0	740.0	954.2
825	15	1.00	0.2	1.00	1064.2	1144.8	1257.8	740.0	954.2
826	15	1.50	1.0	0.00	1550.8	1530.2	1803.2	1243.7	1495.5
827	15	1.50	1.0	0.40	1552.5	1621.0	1818.5	1243.7	1495.5
828	15	1.50	1.0	0.70	1552.0	1655.6	1839.3	1243.7	1495.5
829	15	1.50	1.0	0.85	1551.8	1667.1	1846.9	1243.7	1495.5
830	15	1.50	1.0	1.00	1551.8	1673.9	1850.2	1243.7	1495.5
831	15	1.50	0.8	0.00	1462.9	1464.0	1727.2	1182.3	1420.7
832	15	1.50	0.8	0.40	1477.4	1544.8	1752.6	1182.3	1420.7
833	15	1.50	0.8	0.70	1494.1	1585.1	1784.9	1182.3	1420.7
834	15	1.50	0.8	0.85	1499.8	1601.9	1796.5	1182.3	1420.7
835	15	1.50	0.8	1.00	1502.0	1604.7	1801.7	1182.3	1420.7
836	15	1.50	0.6			1401.9	1655.6	1112.1	1354.6
837				0.40		1472.2			
838	15			0.70		1526.0			
839	15					5 1544.1			
840						3 1555.3			
									1299.7
									1299.7
843									1299.7
844		1.50				3 1503.7			
845		1.50				5 1505.2			
846						5 1329.6			
847						5 1360.2			
848						3 1447.0			
849						5 1481.7			
850									1260.0
851	15	2.00	1.0	0.00	1907.0	5 1882.8	2226.1	1560.4	1813.2

TP	SS	Bias	Ell	Corr	Exact	Grubbs	Rand	Eth	CEP3
852	15	2.00	1.0	0.40	1909.1	1967.6	2255.6	1560.4	1813.2
853	15	2.00	1.0	0.70	1908.8	1975.7	2293.7	1560.4	1813.2
854	15	2.00	1.0	0.85	1908.6	1984.6	2307.4	1560.4	1813.2
855	15	2.00	1.0	1.00	1908.6	1993,5	2313.6	1560.4	1813.2
856	15	2.00	0.8	0.00	1836.5	1830.5	2157.7	1497.4	1749.4
857	15	2.00	8.0	0.40	1848.6	1907.3	2200.3	1497.4	1749.4
858	15	2.00	0.8	0.70	1863.7	1921.4	2250.3	1497.4	1749.4
859	15	2.00	8.0	0.85	1868.9	1906.4	2267.9	1497.4	1749.4
860	15	2.00	0.8	1.00	1871.2	1898.4	2275.9	1497.4	1749.4
861	15	2.00	0.6	0.00	1776.8	1781.1	2093.7	1435.7	1694.5
862	15	2.00	0.6	0.40	1796.3	1838.9	2153.4	1435.7	1694.5
863	15	2.00	0.6	0.70	1826.2	1878.4	2215.7	1435.7	1694.5
864	15	2.00	0.6	0.85	1837.4	1855.6	2236.7	1435.7	1694.5
865	15	2.00	0.6	1.00	1841.8	1800.4	2246.6	1435.7	1694.5
866	15	2.00	0.4	0.00	1733.2	1726.9	2034.6	1371.5	1650.6
867	15	2.00	0.4	0.40	1755.4	1779.4	2117.1	1371.5	1650.6
868	15	2.00	0.4	0.70	1797.0	1854.0	2190.5	1371.5	1650.6
869	15	2.00	0.4	0.85	1814.3	1848.5	2214.2	1371.5	1650.6
870	15	2.00	0.4	1.00	1820.8	1757.1	2225.8	1371.5	1650.6
871	15	2.00	0.2	0.00	1707.1	1695.1	1981.1	1268.4	1620.5
872	15	2.00	0.2	0.40	1730.6	1748.6	2093.9	1268.4	1620.5
873	15	2.00	0.2	0.70	1778.3	1825.5	2175.3	1268.4	1620.5
874	15	2.00	0.2	0.85	1800.3	1861.3	2200.6	1268.4	1620.5
875	15	2.00	0.2	1.00	1808.1	1821.6	2213.5	1268.4	1620.5

Appendix F. Relative Errors

This Appendix lists the Relative Errors of the CEP estimates made by the quick methods for the 875 test design points. The names of the four parameters and the names of the CEP estimation methods for this experiment are abbreviated in the table headings as follows:

<u>Index</u>

Test Point - TP

<u>Parameters</u>

Sample Size - SS

Bias - Bias

Ellipticity - Ell

Correlation - Corr

Estimation Methods

Grubbs-Patnaik/chi-square method - Grubbs

Modified RAND-234 method - Rand

Ethridge method - Eth

CEP3 method - CEP3

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
1	3	0.00	1.0	0.00	0.080	0.083	-0.031	0.002
2	3	0.00	1.0	0.40	0.074	0.081	-0.032	0.000
3	3	0.00	1.0	0.70	0.074	0.080	-0.032	0.000
4	3	0.00	1.0	0.85	0.076	0.080	-0.032	0.000
5	3	0.00	1.0	1.00	0.074	0.079	-0.032	0.000
6	3	0.00	0.8	0.00	0.100	0.085	-0.028	0.007
7	3	0.00	0.8	0.40	0.096	0.082	-0.032	0.003
8	3	0.00	0.8	0.70	0.086	0.080	-0.036	-0.001
9	3	0.00	0.8	0.85	0.084	0.079	-0.037	-0.002
10	3	0.00	0.8	1.00	0.077	0.079	-0.037	-0.002
11	3	0.00	0.6	0.00	0.141	0.096	-0.018	0.026

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
								0.044
12	3	0.00	0.6	0.40	0.133	0.088	-0.032	
13	3	0.00	0.6	0.70	0.102	0.081	-0.049	-0.006
14	3	0.00	0.6	0.85	0.091	0.078	-0.054	-0.012
15	3	0.00	0.6	1.00	0.076		-0.056	
16	3	0.00	0.4	0.00	0.226		0.004	
17	3	0.00	0.4	0.40	0.175		-0.036	
18	3	0.00	0.4	0.70	0.118	0.082	-0.078	-0.019
19	3	0.00	0.4	0.85	0.097		-0.091	-0.032
20	3	0.00	0.4		0.077			
21	3	0.00	0.2	0.00	0.346		0.012	
22	3	0.00	0.2	0.40 0.70	0.205	0.114 0.082	-0.132	0.040
23	3	0.00	0.2	0.70	0.133 0.111	0.082	-0.152	-0.042
24 25	3 3	0.00	0.2		0.111		-0.151	-0.070
26					0.073			0.001
27 27	3	0.25 0.25	1.0	0.40	0.073		-0.032	
28	3 3	0.25	1.0	0.70	0.078		-0.034	-0.001
29	3	0.25	1.0	0.70	0.076	0.089	-0.034	-0.001
30	3	0.25	1.0	1.00	0.073		-0.034	-0.001
31	3	0.25	0.8	0.00				0.007
32	3	0.25	0.8	0.40				0.002
33	3	0.25	0.8	0.70	0.087	0.089	-0.039	
34	3	0.25	0.8	0.85	0.085	0.089	-0.040	
35	3	0.25	0.8	1.00	0.079	0.089	-0.040	-0.004
36	3	0.25	0.6	0.00	0.146	0.110		0.028
37	3	0.25	0.6	0.40			-0.033	
38	3	0.25	0.6	0.70			-0.051	
39	3	0.25	0.6	0.85			-0.057	
40	3	0.25	0.6	1.00		0.089	-0.059	
41	3			0.00			0.005	
42	3	0.25	0.4	0.40	0.175	0.116	-0.037	0.026
43		0.25	0.4	0.70	0.122	0.095	-0.081	-0.021
44		0.25	0.4	0.85	0.094	0.089	-0.094	-0.035
45	3	0.25	0.4	1.00	0.072	0.088	-0.099	-0.039
46		0.25	0.2	0.00	0.343	0.141	0.011	0.116
47		0.25	0.2	0.40	0.205	0.131	-0.059	0.039
48		0.25	0.2	0.70	0.127	0.096	-0.134	-0.044
49		0.25	0.2	0.85	0.106	0.088	-0.153	-0.065
50		0.25	0.2	1.00	0.077	0.086	-0.160	-0.073
51	3		1.0	0.00	0.073	0.114	-0.034	-0.001

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
52	3	0.50	1.0	0.40	0.077	0.112	-0.036	-0.003
53	3		1.0	0.70	0.082	0.112	-0.036	-0.003
54	3	0.50	1.0	0.85	0.082	0.112	-0.036	-0.003
55	3		1.0	1.00	0.084	0.111	-0.036	-0.003
56	3	0.50	0.8	0.00	0.103	0.125	-0.029	0.008
57	3	0.50	0.8	0.40	0.103	0.121	-0.036	
58	3	0.50	0.8	0.70	0.092	0.117	-0.042	-0.006
59	3	0.50	0.8	0.85	0.087	0.116	-0.044	-0.008
60	3	0.50	0.8	1.00	0.085	0.115	-0.045	-0.009
61	3	0.50	0.6	0.00	0.150	0.146	-0.016	0.031
62	3	0.50	0.6	0.40	0.130	0.134	-0.036	0.011
63	3	0.50	0.6	0.70	0.101	0.122	-0.059	-0.013
64	3	0.50	0.6	0.85	0.090	0.119	-0.066	-0.020
65	3	0.50	0.6	1.00	0.080	0.117	-0.068	-0.023
66	3	0.50	0.4	0.00	0.231	0.178	0.004	0.074
67	3	0.50	0.4	0.40	0.168	0.154	-0.041	0.025
68	3	0.50	0.4	0.70	0.110	0.128	-0.090	-0.027
69	3	0.50	0.4	0.85	0.092	0.120	-0.104	-0.042
70	3	0.50	0.4	1.00	0.073	0.118	-0.109	-0.047
71	3	0.50	0.2	0.00	0.331	0.184	0.003	0.110
72	3	0.50	0.2	0.40	0.197	0.172	-0.065	0.035
73	3	0.50	0.2	0.70	0.121	0.131	-0.141	-0.049
74	3	0.50	0.2	0.85	0.094	0.120	-0.161	-0.072
75	3	0.50	0.2	1.00	0.070	0.118	-0.168	-0.079
76	3	0.75	1.0	0.00	0.065		-0.037	-0.006
77	3	0.75	1.0	0.40	0.076	0.139	-0.039	-0.008
78	3	0.75	1.0	0.70	0.079		-0.039	-0.008
79	3	0.75	1.0	0.85	0.087		-0.039	-0.008
80	3	0.75	1.0	1.00	0.086		-0.039	-0.008
81	3	0.75	0.8	0.00	0.096	0.157	-0.031	0.005
82	3	0.75	0.8	0.40	0.096	0.152	-0.040	-0.004
83	3	0.75	0.8	0.70	0.084	0.147	-0.049	-0.013
84	3	0.75	0.8	0.85	0.086	0.145	-0.052	-0.017
85	3	0.75	0.8	1.00	0.081	0.145	-0.053	-0.018
86	3	0.75	0.6	0.00	0.145	0.184	-0.018	0.030
87	3	0.75	0.6	0.40	0.119	0.170	-0.042	0.005
88	3	0.75	0.6	0.70	0.094	0.154	-0.069	-0.023
89	3	0.75	0.6	0.85	0.080	0.149	-0.078	-0.032
90	3	0.75	0.6	1.00	0.073	0.147	-0.081	-0.036
91	3	0.75	0.4	0.00	0.219	0.217	-0.002	0.067

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
92	3	0.75	0.4	0.40	0.148	0.191	-0.050	0.016
. 93	3		0.4	0.70	0.090	0.160	-0.102	-0.039
94	3		0.4	0.85	0.075	0.152	-0.117	-0.056
95	3	0.75	0.4	1.00	0.058	0.149	-0.123	-0.061
96	3	0.75	0.2	0.00	0.291	0.216	-0.014	0.088
97	3	0.75	0.2	0.40	0.169	0.210	-0.074	
98	3	0.75	0.2	0.70	0.099	0.164	-0.149	-0.061
99	3	0.75	0.2	0.85	0.074		-0.169	-0.083
100	3	0.75	0.2	1.00	0.048		-0.176	-0.091
101	3	1.00	1.0	0.00	0.049		-0.041	-0.015
102	3	1.00	1.0	0.40	0.065		-0.042	-0.016
103	3	1.00	1.0	0.70	0.076	0.164	-0.042	-0.016
104	3	1.00	1.0	0.85	0.080	0.165	-0.042	-0.016
105	3	1.00	1.0	1.00	0.080		-0.042	-0.016
106	3	1.00	8.0	0.00	0.079		-0.035	-0.003
107	3	1.00	0.8	0.40	0.079		-0.045	-0.013
108	3	1.00	0.8	0.70	0.075		-0.056	-0.025
109	3	1.00	0.8	0.85	0.072		-0.060	-0.029
110	3	1.00	0.8	1.00	0.071	0.169	-0.062	-0.030
111	3	1.00	0.6	0.00	0.125	0.206	-0.025	0.019
112	3	1.00	0.6	0.40	0.098	0.192	-0.050	-0.008
113	3	1.00	0.6	0.70	0.063	0.177	-0.079	-0.038
114	3	1.00	0.6	0.85	0.057	0.172	-0.089	-0.048
115	3	1.00	0.6	1.00	0.056	0.171	-0.092	-0.051
116	3	1.00	0.4	0.00	0.181	0.230	-0.019	0.044
117	3	1.00	0.4	0.40	0.113	0.212	-0.062	-0.001
118	3	1.00	0.4	0.70	0.060	0.182	-0.112	-0.055
119	3	1.00	0.4	0.85	0.045	0.173	-0.127	-0.071
120	3	1.00	0.4	1.00	0.033	0.171	-0.133	-0.077
121	3	1.00	0.2	0.00	0.224	0.219	-0.039	0.050
122	3	1.00	0.2	0.40	0.131	0.228	-0.085	0.000
123	3	1.00	0.2	0.70	0.068	0.186	-0.153	-0.074
124	3	1.00	0.2	0.85	0.043	0.173	-0.173	-0.096
125	3	1.00	0.2	1.00	0.008	0.170	-0.180	-0.103
126	3	1.50	1.0	0.00	0.020	0.176	-0.047	-0.036
127	3	1.50	1.0	0.40	0.028	0.182	-0.048	-0.037
128	3	1.50	1.0	0.70	0.039	0.191	-0.047	-0.036
129	3	1.50	1.0	0.85	0.041	0.195	-0.047	-0.036
130	3	1.50	1.0	1.00	0.046	0.196	-0.047	-0.036
131	3	1.50	0.8	0.00	0.037	0.188	-0.045	-0.029

132 3 1.50 0.8 0.40 0.031 0.190 -0.055 -0.038 133 3 1.50 0.8 0.70 0.021 0.195 -0.065 -0.049 134 3 1.50 0.8 1.00 0.024 0.197 -0.070 -0.054 136 3 1.50 0.6 0.00 0.062 0.199 -0.046 -0.021 137 3 1.50 0.6 0.40 0.042 0.200 -0.064 -0.039 138 3 1.50 0.6 0.70 0.007 0.198 -0.088 -0.063 139 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.6 0.85 -0.003 0.197 -0.098 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 145 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 146 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.095 146 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.095 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 156 3 2.00 0.8 0.40 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.40 -0.015 0.194 -0.065 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 166 3 2.00 0.6 0.70 -0.037 0.207 -0.065 -0.066 167 3 2.00 0.6 0.70 -0.055 0.211 -0.060 -0.057 168 3 2.00 0.6 0.70 -0.055 0.211 -0.083 -0.080 166 3 2.00 0.6 0.70 -0.065 0.210	TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
133 3 1.50 0.8 0.70 0.021 0.195 -0.065 -0.049 134 3 1.50 0.8 0.85 0.020 0.196 -0.069 -0.053 135 3 1.50 0.8 1.00 0.024 0.197 -0.070 -0.054 136 3 1.50 0.6 0.40 0.042 0.200 -0.046 -0.021 137 3 1.50 0.6 0.40 0.007 0.198 -0.088 -0.063 138 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.6 1.00 -0.004 0.197 -0.098 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.00 0.202 -0.113 -0.077 143 3 1.50 <t< td=""><td>132</td><td>7</td><td>1 50</td><td>0.8</td><td>0.40</td><td>0.031</td><td>0 190</td><td>-0.055</td><td>-0 038</td></t<>	132	7	1 50	0.8	0.40	0.031	0 190	-0.055	-0 038
134 3 1.50 0.8 0.85 0.020 0.196 -0.069 -0.053 135 3 1.50 0.8 1.00 0.024 0.197 -0.070 -0.054 136 3 1.50 0.6 0.00 0.062 0.199 -0.046 -0.039 138 3 1.50 0.6 0.40 0.007 0.198 -0.084 -0.063 139 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.6 1.00 -0.004 0.197 -0.096 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 <									
135 3 1.50 0.8 1.00 0.024 0.197 -0.070 -0.054 136 3 1.50 0.6 0.00 0.062 0.199 -0.046 -0.021 137 3 1.50 0.6 0.40 0.042 0.200 -0.064 -0.039 138 3 1.50 0.6 0.70 0.007 0.198 -0.088 -0.063 139 3 1.50 0.6 1.00 -0.004 0.197 -0.096 -0.071 140 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 141 3 1.50 0.4 0.00 0.042 0.198 -0.056 -0.018 142 3 1.50 0.4 0.70 0.002 0.202 -0.018 -0.077 -0.043 143 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 145 3									
136 3 1.50 0.6 0.00 0.062 0.199 -0.046 -0.021 137 3 1.50 0.6 0.40 0.042 0.200 -0.064 -0.039 138 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.6 1.00 -0.004 0.197 -0.098 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.013 -0.071 144 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 145 3 1.50 0.2 0.00 0.004 0.181 -0.022 0.00 147 3 1.50 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>									
137 3 1.50 0.6 0.40 0.042 0.200 -0.064 -0.039 138 3 1.50 0.6 0.70 0.007 0.198 -0.088 -0.063 139 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 141 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 145 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 <									
138 3 1.50 0.6 0.70 0.007 0.198 -0.088 -0.071 139 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.6 1.00 -0.004 0.197 -0.098 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 0.4 1.00 -0.038 0.196 -0.130 -0.095 145 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50									
139 3 1.50 0.6 0.85 -0.003 0.197 -0.096 -0.071 140 3 1.50 0.6 1.00 -0.004 0.197 -0.098 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 0.4 1.00 -0.038 0.196 -0.130 -0.095 145 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50									
140 3 1.50 0.6 1.00 -0.004 0.197 -0.098 -0.074 141 3 1.50 0.4 0.00 0.082 0.198 -0.056 -0.018 142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 144 3 1.50 0.4 1.00 -0.038 0.196 -0.130 -0.095 146 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50								-0.096	-0.071
142 3 1.50 0.4 0.40 0.040 0.210 -0.078 -0.041 143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 145 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 146 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00			1.50	0.6	1.00	-0.004	0.197	-0.098	-0.074
143 3 1.50 0.4 0.70 0.002 0.202 -0.113 -0.077 144 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.090 145 3 1.50 0.4 1.00 -0.038 0.196 -0.130 -0.095 146 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.099 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00	141	3	1.50	0.4	0.00	0.082	0.198	-0.056	-0.018
144 3 1.50 0.4 0.85 -0.018 0.197 -0.125 -0.095 145 3 1.50 0.4 1.00 -0.038 0.196 -0.130 -0.095 146 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00	142	3	1.50	0.4	0.40	0.040	0.210	-0.078	-0.041
145 3 1.50 0.4 1.00 -0.038 0.196 -0.130 -0.095 146 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00	143	3	1.50	0.4	0.70	0.002	0.202	-0.113	-0.077
146 3 1.50 0.2 0.00 0.094 0.181 -0.076 -0.022 147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00	144	3	1.50	0.4	0.85	-0.018	0.197	-0.125	-0.090
147 3 1.50 0.2 0.40 0.050 0.216 -0.097 -0.045 148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 155 3 2.00	145	-3	1.50	0.4	1.00	-0.038	0.196	-0.130	-0.095
148 3 1.50 0.2 0.70 0.016 0.205 -0.140 -0.090 149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 <td>146</td> <td>3</td> <td>1.50</td> <td>0.2</td> <td>0.00</td> <td>0.094</td> <td>0.181</td> <td>-0.076</td> <td>-0.022</td>	146	3	1.50	0.2	0.00	0.094	0.181	-0.076	-0.022
149 3 1.50 0.2 0.85 -0.016 0.198 -0.155 -0.106 150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 <td>147</td> <td>3</td> <td>1.50</td> <td>0.2</td> <td>0.40</td> <td>0.050</td> <td>0.216</td> <td>-0.097</td> <td>-0.045</td>	147	3	1.50	0.2	0.40	0.050	0.216	-0.097	-0.045
150 3 1.50 0.2 1.00 -0.063 0.196 -0.161 -0.112 151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 <td>148</td> <td>3</td> <td>1.50</td> <td>0.2</td> <td>0.70</td> <td>0.016</td> <td>0.205</td> <td>-0.140</td> <td>-0.090</td>	148	3	1.50	0.2	0.70	0.016	0.205	-0.140	-0.090
151 3 2.00 1.0 0.00 -0.005 0.175 -0.043 -0.049 152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 <td>149</td> <td>3</td> <td>1.50</td> <td>0.2</td> <td>0.85</td> <td>-0.016</td> <td>0.198</td> <td>-0.155</td> <td>-0.106</td>	149	3	1.50	0.2	0.85	-0.016	0.198	-0.155	-0.106
152 3 2.00 1.0 0.40 -0.007 0.186 -0.044 -0.050 153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 <td>150</td> <td>3</td> <td>1.50</td> <td></td> <td>1.00</td> <td>-0.063</td> <td>0.196</td> <td>-0.161</td> <td>-0.112</td>	150	3	1.50		1.00	-0.063	0.196	-0.161	-0.112
153 3 2.00 1.0 0.70 -0.013 0.202 -0.044 -0.050 154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.40 -0.015 0.177 -0.050 -0.046 162 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 <td>151</td> <td>3</td> <td>2.00</td> <td>1.0</td> <td>0.00</td> <td>-0.005</td> <td>0.175</td> <td>-0.043</td> <td></td>	151	3	2.00	1.0	0.00	-0.005	0.175	-0.043	
154 3 2.00 1.0 0.85 -0.003 0.208 -0.044 -0.050 155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 <td>152</td> <td>3</td> <td>2.00</td> <td>1.0</td> <td></td> <td>-0.007</td> <td></td> <td></td> <td></td>	152	3	2.00	1.0		-0.007			
155 3 2.00 1.0 1.00 -0.005 0.211 -0.044 -0.050 156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>									
156 3 2.00 0.8 0.00 0.006 0.178 -0.045 -0.047 157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.85 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 166									
157 3 2.00 0.8 0.40 -0.010 0.190 -0.051 -0.054 158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>									
158 3 2.00 0.8 0.70 -0.028 0.204 -0.059 -0.061 159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
159 3 2.00 0.8 0.85 -0.031 0.209 -0.062 -0.064 160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
160 3 2.00 0.8 1.00 -0.032 0.211 -0.063 -0.065 161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
161 3 2.00 0.6 0.00 0.016 0.177 -0.050 -0.046 162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
162 3 2.00 0.6 0.40 -0.015 0.194 -0.060 -0.057 163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
163 3 2.00 0.6 0.70 -0.037 0.207 -0.075 -0.072 164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
164 3 2.00 0.6 0.85 -0.055 0.210 -0.081 -0.078 165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
165 3 2.00 0.6 1.00 -0.067 0.211 -0.083 -0.080 166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
166 3 2.00 0.4 0.00 0.025 0.170 -0.058 -0.048 167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
167 3 2.00 0.4 0.40 -0.011 0.199 -0.070 -0.060									
100 0 2.00 0.1 0.70 0.040 0.210 0.001 0.001									
169 3 2.00 0.4 0.85 -0.071 0.211 -0.100 -0.090									
170 3 2.00 0.4 1.00 -0.099 0.212 -0.103 -0.093									
171 3 2.00 0.2 0.00 0.028 0.155 -0.069 -0.051									

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
172	3	2.00	0.2	0.40	0.006	0.201	-0.082	-0.064
173	3	2.00	0.2	0.70	-0.020	0.213	-0.107	-0.089
174	3	2.00	0.2	0.85	-0.060	0.211	-0.118	-0.100
175	3	2.00	0.2	1.00	-0.123	0.212	-0.121	-0.104
176	5	0.00	1.0	0.00	0.018	0.048	-0.057	0.002
177	5	0.00	1.0	0.40	0.009	0.046	-0.059	
178	5	0.00	1.0	0.70	0.010	0.045	-0.059	0.000
179	5	0.00	1.0	0.85	0.010	0.045	-0.059	0.000
180	5	0.00	1.0	1.00	0.007	0.044	-0.059	
181	5	0.00	0.8	0.00	0.046	0.049	-0.055	
182	5	0.00	0.8	0.40	0.042	0.047	-0.059	0.003
183	5	0.00	0.8	0.70	0.030	0.045	-0.062	-0.001
184	5	0.00	0.8	0.85	0.022	0.044	-0.063	-0.002
185	5	0.00	0.8	1.00	0.016	0.044	-0.064	-0.002
186	5	0.00	0.6	0.00	0.097	0.057	•	0.026
187	5	0.00	0.6	0.40	0.083	0.051	-U. 30	0.011
188	5	0.00	0.6	0.70	0.052	0.046	-0.076	-0.006
189	5	0.00	0.6	0.85	0.039	0.044	-0.081	-0.012
190	5	0.00	0.6	1.00	0.023	0.043	-0.083	-0.013
191	5	0.00	0.4	0.00	0.173	0.072	-0.029	0.069
192	5	0.00	0.4	0.40	0.124	0.060	-0.068	0.026
193	5	0.00	0.4	0.70	0.083	0.047	-0.109	-0.019
194	5	0.00	0.4	0.85	0.055	0.043	-0.121	-0.032
195	5	0.00	0.4	1.00	0.026	0.043	-0.125	-0.037
196	5	0.00	0.2	0.00	0.300	0.065	-0.031	0.117
197	5	0.00	0.2	0.40	0.154	0.070	-0.098	0.040
198	5	0.00	0.2	0.70	0.092	0.048	-0.169	-0.042
199	5	0.00	0.2	0.85	0.078	0.043	-0.187	-0.063
200	5	0.00	0.2	1.00	0.044	0.043	-0.194	-0.070
201	5	0.25	1.0	0.00	0.019	0.059	-0.060	
202	5	0.25	1.0	0.40	0.013	0.057	-0.062	-0.001
203	5	0.25	1.0	0.70	0.016	0.056	-0.062	-0.001
204	5	0.25	1.0	0.85	0.020	0.056	-0.062	-0.001
205	5	0.25	1.0	1.00	0.017	0.056	-0.062	-0.001
206	5	0.25	0.8	0.00	0.046	0.063	-0.057	0.007
207	5	0.25	0.8	0.40	0.045	0.060	-0.062	0.002
208	5	0.25	0.8	0.70	0.036	0.058	-0.066	-0.002
209	5	0.25	0.8	0.85	0.036	0.057	-0.067	-0.004
210	5	0.25	0.8	1.00	0.024	0.057	-0.068	
211	5	0.25	0.6	0.00	0.101	0.075	-0.047	0.028

	TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
	212	5	0.25	0.6	0.40	0.088	0.068	-0.062	0.011
	213	5	0.25	0.6	0.70	0.066	0.061	-0.080	-0.008
	214	5	0.25	0.6	0.85	0.048	0.059	-0.086	-0.014
	- 215	5	0.25	0.6	1.00	0.029	0.059	-0.088	-0.016
	216	5	0.25	0.4	0.00	0.182	0.095	-0.029	0.071
	217	5	0.25	0.4	0.40	0.129	0.080	-0.069	0.026
	218	5	0.25	0.4	0.70	0.086	0.065	-0.112	-0.021
	219	5	0.25	0.4	0.85	0.063	0.061	-0.124	-0.035
	220	5	0.25	0.4	1.00	0.036	0.060	-0.129	-0.039
•	221	5	0.25	0.2	0.00	0.307	0.090	-0.032	0.116
	222	5	0.25	0.2	0.40	0.156	0.093	-0.099	0.039
	223	5	0.25	0.2	0.70	0.098	0.068	-0.171	-0.044
	224	5	0.25	0.2	0.85	0.081	0.062	-0.190	-0.065
	225	5	0.25	0.2	1.00	0.055	0.061	-0.196	-0.073
	226	5	0.50	1.0	0.00	0.021	0.087	-0.062	-0.001
	227	5	0.50	1.0	0.40	0.029	0.086	-0.064	-0.003
	228	5	0.50	1.0	0.70	0.030	0.086	-0.064	-0.003
	229	5	0.50	1.0	0.85	0.034	0.086	-0.064	-0.003
	230	5	0.50	1.0	1.00	0.035	0.085	-0.064	-0.003
	231	5	0.50	0.8	0.00	0.053	0.099	-0.058	0.008
	232	5	0.50	0.8	0.40	0.058	0.095	-0.064	0.001
	233	5	0.50	0.8	0.70	0.057	0.092	-0.070	-0.006
	234	5	0.50	0.8	0.85	0.048	0.091	-0.073	-0.008
	235	5	0.50	0.8	1.00	0.042	0.091	-0.074	-0.009
	236	5	0.50	0.6	0.00	0.109	0.120	-0.047	0.031
	237	5	0.50	0.6	0.40	0.095	0.110	-0.066	0.011
	238	5	0.50	0.6	0.70	0.075	0.100	-0.088	-0.013
	239	5	0.50	0.6	0.85	0.064	0.097	-0.095	-0.020
	240	5	0.50	0.6	1.00	0.046	0.096	-0.097	-0.023
	241	5	0.50	0.4	0.00	0.195	0.149	-0.031	0.074
	242	5	0.50	0.4	0.40	0.133	0.130	-0.075	0.025
	243	5	0.50	0.4	0.70	0.087	0.108	-0.122	-0.027
	244	5	0.50	0.4	0.85	0.079	0.103	-0.136	-0.042
	245	5	0.50	0.4	1.00	0.050	0.101	-0.140	-0.047
	246	5	0.50	0.2	0.00	0.308	0.150	-0.042	0.110
	247	5	0.50	0.2	0.40	0.154	0.148	-0.107	0.035
	248	5	0.50	0.2	0.70	0.104	0.114	-0.179	-0.049
	249	5	0.50	0.2	0.85	0.088	0.106	~0.198	-0.072
	250	5	0.50	0.2	1.00	0.064	0.105	-0.205	-0.079
	251	5	0.75	1.0	0.00	0.020	0.121	-0.066	-0.006

TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
252	5	0.75	1.0	0.40	0.044	0.120	-0.068	-0.008
252 253	5	0.75	1.0	0.70	0.052		-0.068	-0.008
253 254	5	0.75	1.0	0.70	0.052	0.121	-0.068	-0.008
255	5	0.75	1.0	1.00	0.051	0.122	-0.068	-0.008
256	5	0.75	0.8	0.00	0.056	0.122	-0.061	0.005
257	5	0.75	0.8	0.40	0.069		-0.070	-0.004
258	5	0.75	0.8	0.70	0.003	0.133	-0.079	-0.013
259	5	0.75	0.8	0.85	0.059		-0.082	-0.017
260	5	0.75	0.8	1.00	0.058		-0.083	-0.018
261	5	0.75	0.6	0.00	0.116		-0.051	0.030
262	5	0.75	0.6	0.40	0.097		-0.074	
263	5	0.75	0.6	0.70	0.081	0.142	-0.100	-0.023
264	5	0.75	0.6	0.85	0.072		-0.109	-0.032
265	5	0.75	0.6	1.00	0.061		-0.112	-0.036
266	5		0.4		0.187		-0.040	0.067
267	5	0.75	0.4	0.40	0.123		-0.086	
268	5	0.75	0.4	0.70	0.090		-0.136	-0.039
269	5	0.75	0.4	0.85	0.074		-0.151	-0.056
270	5	0.75	0.4	1.00	0.060	0.143	-0.156	-0.061
271	5	0.75	0.2	0.00	0.274		-0.061	0.088
272	5	0.75	0.2	0.40	0.139	0.201	-0.117	0.022
273	5	0.75	0.2	0.70	0.099	0.159	-0.189	-0.061
274	5	0.75	0.2	0.85	0.215	0.291	-0.111	0.030
275	5	0.75	0.2	1.00	0.059	0.147	-0.215	-0.091
276	5	1.00	1.0	0.00	0.015	0.147	-0.069	-0.015
277	5	1.00	1.0	0.40	0.042	0.148	-0.071	-0.016
278	5	1.00	1.0	0.70	0.062	0.152	-0.070	-0.016
279	5	1.00	1.0	0.85	0.067	0.154	-0.070	-0.016
280	5	1.00	1.0	1.00	0.067		-0.070	-0.016
281	5	1.00	0.8	0.00	0.053	0.169	-0.065	-0.003
282	5	1.00	0.8	0.40	0.068	0.165	-0.075	-0.013
283	5	1.00	0.8	0.70	0.068	0.163	-0.086	-0.025
284	5	1.00	ე.8	0.85	0.069	0.162	-0.089	-0.029
285	5	1.00	0.8	1.00	0.066	0.162	-0.091	-0.030
286	5	1.00	0.6	0.00	0.098	0.197	-0.058	0.019
287	5	1.00	0.6	0.40	0.088	0.186	-0.082	-0.008
288		1.00	0.6	0.70	0.071	0.173	-0.110	-0.038
289		1.00	0.6	0.85	0.061	0.169	-0.119	-0.048
290		1.00	0.6	1.00	0.058	0.168	-0.123	-0.051
291	5	1.00	0.4	0.00	0.154	0.223	-0.057	0.044

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
		4 00			0.400	0.000	0.000	0.004
.292	5	1.00	0.4	0.40	0.102	0.208	-0.098	-0.001
293	5	1.00	0.4	0.70	0.074	0.182	-0.146	-0.055
294	5	1.00	0.4	0.85	0.060	0.174	-0.161	-0.071
295 206	5	1.00	0.4	1.00	0.047	0.172	-0.166	-0.077 0.050
296	5	1.00	0.2	0.00	0.205	0.214	-0.085 -0.128	0.000
297 298	5 5	1.00	0.2	0.40 0.70	0.110 0.079	0.227 0.189	-0.128	-0.074
299	5	1.00	0.2	0.70	0.063		-0.193	-0.096
300	5	1.00	0.2	1.00	0.041	0.175	-0.218	-0.103
301	5	1.50	1.0	0.00	0.004	0.170	-0.072	-0.036
302	5	1.50	1.0	0.40	0.035	0.176	-0.073	-0.037
303	5	1.50	1.0	0.70	0.045	0.178	-0.072	-0.036
304	5	1.50	1.0	0.85	0.050	0.192	-0.072	-0.036
305	5	1.50	1.0	1.00	0.049	0.193	-0.072	-0.036
306	5	1.50	0.8	0.00	0.023		-0.072	-0.029
307	5	1.50	0.8	0.40	0.039	0.188	-0.081	-0.038
308	5	1.50	0.8	0.70	0.041	0.194	-0.091	-0.049
309	5	1.50	0.8	0.85	0.035	0.196	-0.095	-0.053
310	5	1.50	0.8	1.00	0.033	0.197	-0.096	-0.054
311	5	1.50	0.6	0.00	0.049	0.198	-0.075	-0.021
312	5	1.50	0.6	0.40	0.041	0.201	-0.093	-0.039
313	5	1.50	0.6	0.70	0.027	0.200	-0.115	-0.063
314	5	1.50	0.6	0.85	0.019	0.200	-0.123	-0.071
315	5	1.50	0.6	1.00	0.007	0.200	-0.126	-0.074
316	5	1.50	0.4	0.00	0.059	0.199	-0.089	-0.018
317	5	1.50	0.4	0.40	0.044	0.213	-0.110	-0.041
318	5	1.50	0.4	0.70	0.027	0.207	-0.144	-0.077
319	5	1.50	0.4	0.85	0.012	0.203	-0.156	-0.090
320	5	1.50	0.4	1.00	-0.009	0.202	-0.160	-0.095
321	5	1.50	0.2	0.00	0.073	0.183	-0.114	-0.022
322	5	1.50	0.2	0.40	0.047	0.221	-0.135	-0.045
323	5	1.50	0.2	0.70	0.039	0.212	-0.176	-0.090
324	5	1.50	0.2	0.85	0.021	0.205	-0.190	-0.106
325	5	1.50	0.2	1.00	-0.017	0.204	-0.196	-0.112
326	5	2.00	1.0	0.00	-0,008	0.171	-0.063	-0.049
327	5	2.00	1.0	0.40	0.005	0.184	-0.064	-0.050
328	5	2.00	1.0	0.70	-0.002	0.202	-0.064	-0.050
329	5	2.00	1.0	0.85	-0.005	0.208	-0.064	-0.050
330	5	2.00	1.0	1.00	0.004	0.211	-0.064	-0.050
331	5	2.00	0.8	0.00	0.003	0.176	-0.066	-0.047

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
								0.054
332	5	2.00	8.0	0.40	-0.002	0.190	-0.072	-0.054
333	5	2.00	8.0	0.70	-0.018	0.206	-0.080	-0.061
334	5	2.00	8.0	0.85	-0.031	0.211	-0.082	-0.064
335	5	2.00	0.8	1.00	-0.032	0.213	-0.083	-0.065
336	5	2.00	0.6	0.00	0.009	0.178	-0.072	-0.046
337	5	2.00	0.6	0.40	0.003	0.196 0.210	-0.082 -0.097	-0.057
338	5	2.00	0.6	0.70	-0.023			-0.072 -0.078
339	5	2.00	0.6	0.85	-0.047	0.213	-0.103 -0.105	-0.080
340	5	2.00	0.6 0.4	1.00	-0.065 0.009	0.215 0.172	-0.083	-0.048
341	5 5	2.00	0.4	0.00 0.40	0.009	0.172	-0.095	-0.040
342	5 5	2.00	0.4	0.70	-0.010	0.202	-0.095	-0.081
343 344	5	2.00	0.4	0.70	-0.015	0.214	-0.124	-0.090
345	5	2.00	0.4	1.00	-0.094		-0.127	-0.093
346	5	2.00	0.4		0.009		-0.099	-0.051
347	5	2.00	0.2	0.40	0.015	0.205	-0.111	-0.064
348	5	2.00	0.2	0.70	0.013		-0.135	-0.089
349	5	2.00	0.2	0.85	-0.017		-0.145	-0.100
350	5	2.00	0.2	1.00	-0.099	0.218	-0.149	-0.104
351	7	0.00	1.0	0.00	-0.013		-0.085	0.002
352	7	0.00	1.0	0.40	-0.025		-0.087	
353	7	0.00	1.0	0.70	-0.022	0.030	-0.087	
354	7	0.00	1.0	0.85	-0.026		-0.087	0.000
355	7	0.00	1.0	1.00	-0.018	0.029	-0.087	0.000
356	7	0.00	0.8	0.00	0.029	0.035	-0.083	0.007
357	7	0.00	0.8	0.40	0.024	0.032	-0.087	0.003
358	7	0.00	0.8	0.70	0.011	0.030	-0.090	-0.001
359	7	0.00	0.8	0.85	-0.001	0.029	-0.091	-0.002
360	7	0.00	0.8	1.00	-0.010	0.029	-0.091	-0.002
361	7	0.00	0.6	0.00	0.077	0.041	-0.076	0.026
362	7	0.00	0.6	0.40	0.063	0.036	-0.089	0.011
363	7	0.00	0.6	0.70	0.039	0.031	-0.105	-0.006
364	7	0.00	0.6	0.85	0.019	0.029	-0.110	-0.012
365	7	0.00	0.6	1.00	-0.005	0.029	-0.111	-0.013
366	7	0.00	0.4	0.00	0.147	0.053	-0.057	0.069
367	7	0.00	0.4	0.40	0.099	0.043	-0.095	0.026
368	7	0.00	0.4	0.70	0.064	0.033	-0.134	-0.019
369	7	0.00	0.4	0.85	0.038	0.030	-0.146	-0.032
370	7	0.00	0.4	1.00	0.006	0.030	-0.150	-0.037
371	7	0.00	0.2	0.00	0.276	0.040	-0.061	0.117

TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
372	7	0.00	0.2	0.40	0.129	0.051	-0.126	0.040
373	7	0.00	0.2		0.067	0.034	-0.194	-0.042
374	7	0.00	0.2		0.057		-0.213	-0.063
375	7	0.00			0.032	0.031	-0.219	-0.070
376	7	0.25	1.0		-0.015	0.045	-0.088	0.001
377	7	0.25	1.0	0.40	-0.012	0.043	-0.089	-0.001
378	7	0.25	1.0	0.70	-0.003	0.042	-0.089	-0.001
379	7	0.25			-0.007		-0.089	-0.001
380	7	0.25		1.00	-0.002		-0.089	-0.001
381	7	0.25	0.8	0.00	0.028		-0.084	
382	7	0.25	0.8	0.40	0.023		-0.088	0.002
383	7	0.25	0.8	0.70	0.020	0.045	-0.092	-0.002
384	7	0.25	0.8	0.85	0.009		-0.094	-0.004
385	7	0.25	0.8	1.00	0.002		-0.094	-0.004
386	7	0.25	0.6	0.00	0.082		-0.075	
387	7	0.25	0.6	0.40	0.068		-0.090	
388	7	0.25	0.6	0.70	0.039		-0.107	-0.008
38 9	7	0.25	0.6	0.85	0.025	0.046	-0.113	-0.014
39 0	7	0.25	0.6	1.00	0.004		-0.115	-0.016
391	7	0.25	0.4	0.00	0.156		-0.055	0.071
392	7	0.25	0.4	0.40	0.108	0.065	-0.095	
393	7	0.25	0.4	0.70	0.069	0.052	-0.136	-0.021
394	7	0.25	0.4	0.85	0.049	0.049	-0.148	-0.035
395	7	0.25	0.4	1.00	0.010	0.048	-0.153	-0.039
396	7	0.25	0.2	0.00	0.201		-0.124	0.040
397	7	0.25	0.2	0.40	0.132	0.076	-0.125	
398	7	0.25	0.2	0.70	0.081	0.055	-0.195	
399	7		0.2	0.85	0.066		-0.213	-0.065
400	7		0.2		0.037		-0.219	-0.073
401	7	0.50	1.0	0.00	-0.008	0.076	-0.090	
402	7	0.50	1.0	0.40	0.008	0.074	-0.092	-0.003
403	7	0.50	1.0	0.70	0.015	0.074	-0.092	-0.003
404	7	0.50	1.0	0.85	0.008	0.074	-0.092	-0.003
405	7	0.50	1.0	1.00	0.013	0.074	-0.092	-0.003
406	7	0.50	0.8	0.00	0.036	0.088	-0.084	0.008
407	7	0.50	0.8	0.40	0.036	0.084	-0.090	0.001
408	7	0.50	0.8	0.70	0.034	0.082	-0.096	-0.006
409	7	0.50	0.8	0.85	0.031	0.081	-0.099	-0.008
410	7	0.50	0.8	1.00	0.024	0.080	-0.099	-0.009
411	7	0.50	0.6	0.00	0.093	0.108	-0.070	0.031

TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
412	7	0.50	0.6	0.40	0.080	0.099	-0.089	0.011
413	7	0.50		0.70	0.055	0.090	-0.110	-0.013
414	7	0.50		0.85	0.050	0.088	-0.117	-0.020
415	7	0.50	0.6	1.00	0.029		-0.119	-0.023
416	7	0.50	0.4	0.00	0.173		-0.054	
417	7	0.50	0.4	0.40	0.111	0.119	-0.097	
418	7	0.50	0.4		0.077	0.100	-0.143	-0.027
419	7		0.4				-0.156	-0.042
420	7		0.4		0.039		-0.161	-0.047
421	7	0.50	0.2		0.299		-0.065	
422	7	0.50	0.2	0.40	0.135		-0.128	0.035
423	7	0.50	0.2	0.70	0.092	0.107	-0.199	-0.049
424	7	0.50	0.2	0.85	0.082	0.099	-0.217	-0.072
425	7	0.50	0.2	1.00	0.063	0.099	-0.224	-0.079
426	7	0.75	1.0	0.00	-0.001	0.112	-0.094	-0.006
427	7	0.75	1.0	0.40	0.023	0.112	-0.096	-0.008
428	7	0.75	1.0	0.70	0.036	0.113	-0.095	-0.008
429	7	0.75	1.0	0.85	0.044	0.113	-0.095	-0.008
430	7	0.75	1.0	1.00	0.039	0.113	-0.095	-0.008
431	7	0.75	0.8	0.00	0.045	0.132	-0.086	0.005
432	7	0.75	0.8	0.40	0.048	0.127	-0.095	-0.004
433	7	0.75	0.8	0.70	0.049	0.125	-0.103	-0.013
434	7	0.75	0.8	0.85	0.054	0.124	-0.107	-0.017
435	7	0.75	0.8	1.00	0.051		-0.108	-0.018
436	7	0.75		0.00				0.030
437		0.75		0.40				0.005
438	7	0.75	0.6	0.70				
439	7	0.75						
440	7		0.6	1.00		0.132		
441	7		0.4		0.175	0.194		
442	7	0.75	0.4	0.40	0.106	0.174	-0.109	0.016
443	7	0.75	0.4	0.70	0.083	0.149	-0.158	-0.039
444	7	0.75	0.4	0.85	0.074	0.142	-0.172	-0.056
445	7	0.75	0.4	1.00	0.056	0.140	-0.177	-0.061
446	7	0.75	0.2	0.00	0.271	0.192	-0.083	0.088
447	7	0.75	0.2	0.40	0.123	0.196	-0.139	0.022
448	7	0.75 0.75	0.2		0.095	0.157	-0.208 -0.227	-0.083
449	7 7	0.75	0.2	0.85	0.083	0.147 0.145	-0.234	-0.083
450 451			0.2	0.00	0.000	0.145	-0.234	-0.091
451	7	1.00	1.0	0.00	0.000	0.142	-0.039	-0.019

452 7 1.00 1.0 0.40 0.034 0.143 -0.101 -0.016 453 7 1.00 1.0 0.70 0.054 0.147 -0.100 -0.016 454 7 1.00 1.0 0.85 0.059 0.149 -0.100 -0.016 455 7 1.00 0.8 0.00 0.064 0.149 -0.100 -0.016 456 7 1.00 0.8 0.00 0.043 v.164 -0.093 -0.003 457 7 1.00 0.8 0.40 0.057 0.161 -0.103 -0.013 458 7 1.00 0.8 0.85 0.063 0.159 -0.117 -0.029 460 7 1.00 0.8 0.85 0.063 0.159 -0.118 -0.030 461 7 1.00 0.8 0.85 0.063 0.159 -0.118 -0.030 461 7 1.00 <td< th=""><th>TP</th><th>SS</th><th>Bias</th><th>E11</th><th>Corr</th><th>Grubbs</th><th>Rand</th><th>Eth</th><th>CEP3</th></td<>	TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
453 7 1.00 1.0 0.70 0.054 0.147 -0.100 -0.016 454 7 1.00 1.0 0.85 0.059 0.149 -0.100 -0.016 455 7 1.00 0.8 0.00 0.043 0.164 -0.093 -0.003 457 7 1.00 0.8 0.40 0.057 0.161 -0.103 -0.013 458 7 1.00 0.8 0.70 0.065 0.159 -0.113 -0.025 459 7 1.00 0.8 0.85 0.063 0.159 -0.118 -0.029 460 7 1.00 0.8 1.00 0.065 0.159 -0.118 -0.030 461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.70 0.071 0.171 -0.136 -0.038 463 7 1.00	452	7	1.00	1.0	0.40	0.034	0.143	-0.101	-0.016
454 7 1.00 1.0 0.85 0.059 0.149 -0.100 -0.016 455 7 1.00 1.0 1.00 0.064 0.149 -0.100 -0.016 456 7 1.00 0.8 0.00 0.043 0.164 -0.093 -0.003 457 7 1.00 0.8 0.40 0.057 0.161 -0.103 -0.013 458 7 1.00 0.8 0.70 0.065 0.159 -0.117 -0.029 460 7 1.00 0.8 0.85 0.063 0.159 -0.118 -0.030 461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 464 7 1.00									
455 7 1.00 1.00 0.064 0.149 -0.100 -0.016 456 7 1.00 0.8 0.00 0.043 0.164 -0.093 -0.003 457 7 1.00 0.8 0.40 0.057 0.161 -0.103 -0.013 458 7 1.00 0.8 0.70 0.065 0.159 -0.117 -0.029 460 7 1.00 0.8 1.00 0.065 0.159 -0.118 -0.030 461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4									
456 7 1.00 0.8 0.00 0.043 0.164 -0.093 -0.003 457 7 1.00 0.8 0.40 0.057 0.161 -0.103 -0.013 458 7 1.00 0.8 0.70 0.065 0.159 -0.117 -0.029 460 7 1.00 0.8 1.00 0.065 0.159 -0.118 -0.030 461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 464 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.044 465 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 1.00 0.4 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>									
458 7 1.00 0.8 0.70 0.06s 0.159 -0.113 -0.025 459 7 1.00 0.8 0.85 0.063 0.159 -0.117 -0.029 460 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 461 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 462 7 1.00 0.6 0.70 0.071 0.171 -0.136 -0.038 463 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.00 0.01 0.207 -0.122 -0.001 468 7 1.00 0.		7				0.043	J.164		-0.003
459 7 1.00 0.8 0.85 0.063 0.159 -0.117 -0.029 460 7 1.00 0.8 1.00 0.065 0.159 -0.118 -0.030 461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.70 0.071 0.171 -0.136 -0.038 464 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.00 0.091 0.207 -0.122 -0.001 469 7 1.00 0	457	7	1.00	0.8	0.40	0.057	0.161	-0.103	-0.013
460 7 1.00 0.8 1.00 0.065 0.159 -0.118 -0.030 461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 <td< td=""><td>458</td><td>7</td><td>1.00</td><td>0.8</td><td>0.70</td><td>0.06১</td><td>0.159</td><td>-0.113</td><td>-0.025</td></td<>	458	7	1.00	0.8	0.70	0.06১	0.159	-0.113	-0.025
461 7 1.00 0.6 0.00 0.084 0.194 -0.085 0.019 462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.70 0.071 0.171 -0.136 -0.038 464 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0	459	7	1.00	0.8	0.85	0.063	0.159	-0.117	-0.029
462 7 1.00 0.6 0.40 0.078 0.183 -0.109 -0.008 463 7 1.00 0.6 0.70 0.071 0.171 -0.136 -0.038 464 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0	460	7	1.00	0.8	1.00	0.065	0.159	-0.118	-0.030
463 7 1.00 0.6 0.70 0.071 0.171 -0.136 -0.038 464 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0	461	7	1.00	0.6	0.00	0.084	0.194	-0.085	0.019
464 7 1.00 0.6 0.85 0.062 0.168 -0.145 -0.048 465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.071 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 473 7 1.00 0	462	7	1.00	0.6	0.40	0.078	0.183	-0.109	-0.008
465 7 1.00 0.6 1.00 0.064 0.167 -0.148 -0.051 466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.	463	7	1.00	0.6	0.70	0.071	0.171	-0.136	-0.038
466 7 1.00 0.4 0.00 0.143 0.221 -0.082 0.044 467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 <t< td=""><td>464</td><td>7</td><td>1.00</td><td>0.6</td><td>0.85</td><td>0.062</td><td>0.168</td><td>-0.145</td><td>-0.048</td></t<>	464	7	1.00	0.6	0.85	0.062	0.168	-0.145	-0.048
467 7 1.00 0.4 0.40 0.091 0.207 -0.122 -0.001 468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 <	465	7	1.00	0.6		0.064	0.167	-0.148	-0.051
468 7 1.00 0.4 0.70 0.074 0.182 -0.169 -0.055 469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 <	466	7	1.00	0.4	0.00	0.143		-0.082	
469 7 1.00 0.4 0.85 0.069 0.175 -0.184 -0.071 470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 <	467	7	1.00		0.40				
470 7 1.00 0.4 1.00 0.058 0.173 -0.189 -0.077 471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 <			1.00						
471 7 1.00 0.2 0.00 0.203 0.212 -0.115 0.050 472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -2.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 <		7							
472 7 1.00 0.2 0.40 0.096 0.228 -0.156 0.000 473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -2.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>									
473 7 1.00 0.2 0.70 0.084 0.190 -0.219 -0.074 474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -2.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>									
474 7 1.00 0.2 0.85 0.074 0.179 -0.237 -0.096 475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -2.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>									
475 7 1.00 0.2 1.00 0.062 0.177 -0.244 -0.103 476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -0.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
476 7 1.50 1.0 0.00 -0.002 0.168 -0.102 -0.036 477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -2.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
477 7 1.50 1.0 0.40 0.029 0.174 -0.103 -0.037 478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -0.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
478 7 1.50 1.0 0.70 0.050 0.186 -0.102 -2.036 479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
479 7 1.50 1.0 0.85 0.054 0.191 -0.102 -0.036 480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
480 7 1.50 1.0 1.00 0.064 0.192 -0.102 -0.036 481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
481 7 1.50 0.8 0.00 0.013 0.183 -0.100 -0.029 482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
482 7 1.50 0.8 0.40 0.041 0.187 -0.109 -0.038 483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
483 7 1.50 0.8 0.70 0.045 0.194 -0.119 -0.049 484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
484 7 1.50 0.8 0.85 0.047 0.197 -0.122 -0.053									
- 7186 - 7 - 1 50 - 0 8 - 1 00 - 1 045 - 0 194 - 0 194 - 0 054	485	7	1.50	0.8	1.00	0.047	0.198	-0.124	-0.054
486 7 1.50 0.6 0.00 0.034 0.198 -0.101 -0.021									
487 7 1.50 0.6 0.40 0.042 0.202 -0.118 -0.039									
488 7 1.50 0.6 0.70 0.041 0.202 -0.140 -0.063									
489 7 1.50 0.6 0.85 0.030 0.201 -0.148 -0.071									
490 7 1.50 0.6 1.00 0.025 0.202 -0.151 -0.074									
491 7 1.50 0.4 0.00 0.043 0.200 -0.114 -0.018									

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
						2 045	0.405	0.044
492	7	1.50	0.4	0.40	0.046	0.215	-0.135	-0.041
493	7	1.50	0.4	0.70	0.040	0.209	-0.168	-0.077
494	7	1.50	0.4	0.85	0.029	0.205	-0.180	-0.090
495	7	1.50	0.4	1.00	0.009	0.205	-0.184	-0.095
496	7	1.50	0.2	0.00	0.056	0.185	-0.145	-0.022
497	7	1.50	0.2	0.40	0.040	0.224	-0.165	-0.045 -0.090
498	7	1.50	0.2	0.70	0.047	0.215	-0.204	
499	7	1.50	0.2		0.038	0.208	-0.218 -0.223	-0.106 -0.112
500	7	1.50	0.2	1.00	0.010	0.207 0.170	-0.223	-0.112
501	7	2.00	1.0	0.00	-0.008 0.014	0.170	-0.088	-0.050
502	7	2.00	1.0	0.40 0.70	0.001	0.103	-0.088	-0.050
503 504	7 7	2.00	1.0	0.70	0.001	0.202	-0.088	-0.050
505	7	2.00	1.0	1.00	0.008	0.211	-0.088	-0.050
506	7	2.00	0.8	0.00	0.012	0.176	-0.091	-0.047
507	7	2.00	0.8	0.40	0.014	0.190	-0.097	-0.054
508	7	2.00	0.8	0.70	-0.009		-0.104	-0.061
509	7	2.00	0.8	0.85	-0.008	0.212	-0.107	-0.064
510	7	2.00	0.8	1.00	-0.016	0.214	-0.108	-0.065
511	7	2.00	0.6		0.005		-0.099	-0.046
512	7	2.00	0.6	0.40	0.018	0.197	-0.109	-0.057
513	7	2.00	0.6	0.70	-0.003		-0.123	-0.072
514	7	2.00	0.6	0.85	-0.033	0.215	-0.129	-0.078
515	7	2.00	0.6	1.00	-0.047		-0.131	-0.080
516	7	2.00	0.4	0.00	0.003		-0.114	-0.048
517	7	2.00	0.4		0.016		-0.125	-0.060
518	7	2.00	0.4	0.70	0.010	0.216	-0.145	-0.081
519	7	2.00	0.4	0.85	-0.024	0.218	-0.153	-0.090
520	7	2.00	0.4	1.00	-0.071	0.219	-0.156	-0.093
521	7	2.00	0.2	0.00	0.002	0.159	-0.138	-0.051
522	7	2.00	0.2	0.40	0.013	0.207	-0.149	-0.064
523	7	2.00	0.2	0.70	0.026	0.220	-0.172	-0.089
524	7	2.00	0.2	0.85	0.014	0.219	-0.182	-0.100
525	7	2.00	0.2	1.00	-0.064	0.221	-0.186	-0.104
526	10	0.00	1.0	0.00	-0.039	0.022	-0.145	0.002
527	10	0.00	1.0	0.40	-0.044	0.020	-0.147	0.000
528	10	0.00	1.0	0.70	-0.038	0.019	-0.147	0.000
529	10	0.00	1.0	0.85	-0.033	0.019	-0.147	0.000
530	10	0.00	1.0	1.00	-0.034	0.019	-0.147	0.000
531	10	0.00	0.8	0.00	0.010	0.022	-0.140	0.007

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
500							A 440	
532	10	0.00	8.0	0.40	0.007	0.021	-0.143	
533	10	0.00	0.8	0.70	-0.005	0.020	-0.146	-0.001
534 535	10 10	0.00	8.0	0.85 1.00	-0.017 -0.030		-0.147	
536	10	0.00	0.6	0.00	0.061	0.019	-0.148	-0.002
537	10	0.00	0.6	0.40	0.046	0.027 0.023	-0.126 -0.139	0.026 0.011
538	10	0.00	0.6	0.70	0.048	0.023	-0.154	-0.006
539	10	0.00	0.6	0.85	0.018		-0.154	-0.012
540	10	0.00	0.6	1.00	-0.022		-0.160	-0.012
541	10	0.00	0.4	0.00	0.119		-0.100	0.069
542	10	0.00	0.4	0.40		0.030	-0.135	
543	10	0.00	0.4	0.70	0.046	0.022	-0.173	-0.019
544	10	0.00	0.4	0.85	0.023	0.020	-0.184	-0.032
545	10	0.00	0.4	1.00	-0.006		-0.188	
546	10	0.00	0.2	0.00	0.256			0.117
547	10	0.00	0.2	0.40	0.101	0.037		0.040
548	10	0.00	0.2	0.70	0.049	0.023	-0.226	-0.042
549	10	0.00	0.2	0.85	0.038	0.021	-0.244	-0.063
550	10	0.00	0.2	1.00	0.023	0.022	-0.249	-0.070
551	10	0.25	1.0	0.00	-0.034		-0.137	
552	10	0.25	1.0	0.40	-0.030		-0.139	-0.001
553	10	0.25	1.0	0.70	-0.034	0.033	-0.139	-0.001
554	10	0.25	1.0	0.85	-0.031	0.033	-0.139	-0.001
555	10	0.25	1.0	1.00	-0.025	0.032	-0.139	-0.001
556	10	0.25	0.8	0.00	0.016	0.039	-0.132	0.007
557	10	0.25	0.8	0.40	0.018	0.042	-0.132	0.007
558	10	0.25	0.8	0.70	-0.001	0.036	-0.140	-0.002
559	10	0.25	0.8	0.85	-0.001	0.035	-0.142	-0.004
560	10	0.25	0.8	1.00	-0.015	0.035	-0.142	-0.004
561	10	0.25	0.6	0.00	0.061	0.049	-0.117	0.028
562	10	0.25	0.6	0.40	0.051	0.044	-0.131	0.011
563	10	0.25	0.6	0.70	0.035	0.040	-0.147	-0.008
564	10	0.25	0.6	0.85	0.011	0.039	-0.153	-0.014
565	10	0.25	0.6	1.00	-0.014	0.039	-0.155	-0.016
566	10	0.25	0.4	0.00	0.134	0.066	-0.095	0.071
567	10	0.25	0.4	0.40	0.081	0.056	-0.133	0.026
568	10	0.25	0.4	0.70	0.054	0.045	-0.173	-0.021
569	10	0.25	0.4	0.85	0.038	0.043	-0.184	-0.035
570	10	0.25	0.4	1.00	0.005	0.042	-0.189	-0.039
571	10	0.25	0.2	0.00	0.275	0.054	-0.094	0.116

TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
572	10	0.25	0.2	0.40	0.109	0.067	-0.156	0.039
573	10	0.25	0.2	0.70	0.066	0.049	-0.223	-0.044
574	10	0.25	0.2	0.85	0.052	0.045	-0.241	-0.065
575	10	0.25	0.2	1.00	0.030	0.046	-0.247	-0.073
576	10	0.50	1.0	0.00	-0.022	0.068	-0.133	-0.001
577	10	0.50	1.0	0.40	-0.007	0.067	-0.134	-0.003
578	10	0.50	1.0	0.70	-0.004	0.067	-0.134	-0.003
579	10	0.50	1.0	0.85	-0.006	0.067	-0.134	0.003
580	10	0.50	1.0	1.00	0.001	0.067	-0.134	-0.003
581	10	0.50	0.8	0.00	0.033	0.081	-0.129	0.008
582	10	0.50	0.8	0.40	0.032	0.078	-0.135	0.001
583	10	0.50	0.8	0.70	0.033	0.076	-0.141	-0.006
584	10	0.50	0.8	0.85	0.023	0.075	-0.143	-0.008
585	10	0.50	8.0	1.00	0.009	0.075	-0.144	-0.009
586	10	0.50	0.6	0.00	0.079	0.101	-0.119	0.031
587	10	0.50	0.6	0.40	0.067	0.094	-0.137	0.011
588	10	0.50	0.6	0.70	0.053	0.086	-0.157	-0.013
589	10	0.50	0.6	0.85	0.042	0.084	-0.163	-0.020
590	10	0.50	0.6	1.00	0.021	0.084	-0.165	-0.023
591	10	0.50	0.4	0.00	0.163	0.130	-0.096	0.074
592	10	0.50	0.4	0.40	0.095	0.115	-0.137	0.025
593	10	0.50	0.4	0.70	0.070	0.097	-0.181	-0.027
594	10	0.50	0.4	0.85	0.067	0.093	-0.194	-0.042
595	10	0.50	0.4	1.00	0.035	0.092	-0.198	-0.047
596	10	0.50	0.2	0.00	0.296	0.128	-0.118	0.110
597	10	0.50	0.2	0.40	0.119	0.134		0.035
598	10	0.50	0.2	0.70	0.080	0.106	-0.244	-0.049
599	10	0.50	0.2	0.85	0.070	0.099	-0.262	-0.072
600	10	0.50	0.2	1.00	0.064	0.099	-0.268	-0.079
601	10	0.75		0.00		0.107		-0.006
602	10	0.75	1.0	0.40	0.015	0.106	-0.148	-0.008
603	10	0.75	1.0	0.70	0.031	0.109	-0.148	-0.008
604	10	0.75	1.0	0.85	0.034	0.109	-0.148	-0.008
605	10	0.75	1.0	1.00	0.036	0.110	-0.148	-0.008
606	10	0.75	0.8	0.00	0.036	0.127	-0.141	0.005
607	10	0.75	8.0	0.40	0.045	0.124	-0.148	-0.004
608	10	0.75	0.8	0.70	0.054	0.122	-0.157	-0.013
609	10	0.75	8.0	0.85	0.059	0.121	-0.159	-0.017
610	10	0.75	0.8	1.00	0.048	0.121	-0.161	-0.018
611	10	0.75	0.6	0.00	0.086	0.157	-0.132	0.030

TP	SS	Bias	E11	Corr	Grubbs	Rand	Eth	CEP3
612	10	0.75	0.6	0.40	0.078	0.146	-0.153	0.005
613	10	0.75	0.6	0.70	0.064	0.136	-0.177	-0.023
614	10		0.6	0.85	0.067		-0.185	-0.032
615	10		0.6	1.00	0.061	0.132	-0.188	-0.036
616	10		0.4	0.00	0.167	0.191	-0.115	
617	10	0.75	0.4	0.40	0.093	0.173	-0.158	0.016
618	10	0.75	0.4	0.70	0.084	0.149	-0.204	-0.039
619	10	0.75	0.4	0.85	0.081	0.143	-0.217	-0.056
620	10	0.75	0.4	1.00	0.071	0.142	-0.222	-0.061
621	10	0.75	0.2	0.00	0.272	0.191	-0.143	0.088
622	10	0.75	0.2	0.40	0.114	0.197	-0.195	0.022
623	10	0.75	0.2	0.70	0.092	0.159	-0.260	-0.061
624	10	C.75	0.2	0.85	0.084	0.150	-0.278	-0.083
625	10	0.75	0.2	1.00	0.075	0.148	-0.284	-0.091
626	10	1.00	1.0	0.00	-0.005	0.138	-0.156	-0.015
627	10	1.00	1.0	0.40	0.032	0.139	-0.157	-0.016
628	10	1.00	1.0	0.70	0.055	0.145	-0.157	-0.016
629	10	1.00	1.0	0.85	0.063	0.146	-0.157	-0.016
630	10	1.00	1.0	1.00	0.069	0.147	-0.157	-0.016
631	10	1.00	0.8	0.00	0.032	0.162	-0.147	-0.003
632	10	1.00	0.8	0.40	0.054	0.159	-0.156	-0.013
633	10	1.00	0.8	0.70	0.068	0.158	-0.166	-0.025
634	10	1.00	0.8	0.85	0.070		-0.170	- 0. c 29
635	10	1.00	0.8	1.00	0.073		-0.171	-0.030
636	10	1.00	0.6	0.00	0.071		-0.136	0.019
637	10	1.00	0.6	0.40	0.073		-0.159	-0.008
638	10	1.00	0.6	0.70	0.076		~0.185	-0.038
639	10	1.00	0.6		0.076		-0.193	-0.048
640	10	1.00	0.6			0.168	-0.196	-0.051
641	10	1.00	0.4	0.00	0.131	0.221	-0.135	0.044
642	10	1.00	0.4	0.40	0.078	0.208	-0.173	-0.001
643	10	1.00	0.4	0.70	0.081	0.184	-0.218	-0.055
644	10	1.00	0.4	0.85	0.078	0.177	-0.231	-0.071
645	10	1.00	0.4	1.00	0.073	0.176	-0.236	-0.077
646	10	1.00	0.2	0.00	0.199	0.213	-0.175	0.050
647	10	1.00	0.2	0.40	0.086	0.230	-0.214	0.000
648	10	1.00	0.2	0.70	0.082	0.193	-0.273	-0.074
649		1.00	0.2	0.85	0.075	0.182	-0.290	-0.096
650		1.00	0.2	1.00	0.076	0.181	-0.296	-0.103
651	10	1.50	1.0	0.00	-0.002	0.165	-0.162	-0.036

TP	SS	Bias	E11	Corr	Grubbs.	Rand	Eth	CEP3
652	10	1.50	1.0	0.40	0.041	0.173	-0.163	-0.037
-653	10	1.50		0.70			-0.163	-0.036
654	10	1.50		0.85	0.070		-0.163	-0.036
655	10	1.50		1.00	0.071	0.192	-0.163	-0.036
656	10	1.50	0.8	0.00	0.009	0.182	-0.164	-0.029
657	10	1.50	0.8	0.40	0.043	0.187	-0.172	-0.038
658	10	1.50	0.8	0.70	0.054	0.194	-0.181	-0.049
659	10	1.50	0.8		0.056		-0.184	-0.053
660	10	1.50	0.8	1.00	0.055		-0.186	-0.054
661	10	1.50	0.6	0.00	0.021	0.197	-0.165	-0.021
662	10	1.50	0.6	0.40	0.042		-0.181	-0.039
663	10	1.50	0.6	0.70	0.049		-0.201	-0.063
664	10	1.50	0.6	0.85	0.040	0.203	-0.208	-0.071
665	10	1.50	0.6	1.00	0.039	0.204	-0.210	-0.074
666	10	1.50	0.4	0.00	0.034	0.201	-0.176	-0.018
667	10	1.50	0.4	0.40	0.042	0.216	-0.195	-0.041
668	10	1.50	0.4	0.70	0.050	0.211	-0.226	-0.077
669	10	1.50	0.4	0.85	0.042	0.208	-0.236	-0.090
670	10	1.50	0.4	1.00	0.024	0.207	-0.240	-0.095
671	10	1.50	0.2	0.00	0.045	0.186	-0.216	-0.022
672	10	1.50	0.2	0.40	0.033	0.226	-0.235	-0.045
673	10	1.50	0.2	0.70	0.045	0.217	-0.271	-0.090
674	10	3 50	0.2	0.85	0.050	0.210	-0.284	-0.106
675	10	1.50	0.2	1.00	0.030	0.210	-0.288	-0.112
676	1.0	2.00	1.0	0.00	-0.009	0.168	-0.146	-0.049
677	10	2.00	1.0	0.40	0.021	0.182	-0.146	-0.050
678	10	2.00	1.0	0.70	0.021	0.202	-0.146	-0.050
679	10	2.00	1.0	0.85	0.019	0.209	-0.146	-0.050
680	10	2.00	1.0	1.00	0.024		-0.146	-0.050
681	10	2.00	0.8	0.00	-0.003	0.175		
682	10	2.00	0.8	0.40	0.022	0.190	-0.153	-0.054
683	10	2.00	0.8	0.70	0.006	0.207	-0.160	-0.061
684	10	2.00	0.8	0.85	-0.004	0.213	-0.162	-0.064
685	10	2.00	0.8	1.00	-0.005	0.215	-0.163	-0.065
686	10	2.00	0.6	0.00	0.003	0.178	-0.159	-0.046
€87	10	2.00	0.6	0.40	0.022	0.198	-0.168	-0.057
688	10	2.00	0.6	0.70	0.012	0.212	-0.182	-0.072
689	10	2.00	0.6	0.85	-0.014	0.216	-0.187	-0.078
690	10	2.00	0.6	1.00	-0.025	0.236	-0.177	-0.066
691	10	2.00	0.4	0.00	-0.002	0.173	-0.177	-0.048

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
					0.004	0.005	0 407	0.000
692	10	2.00	0.4	0.40	0.021	0.205	-0.187	-0.060
693	10	2.00	0.4	0.70	0.022	0.218	-0.206	-0.081
694	10	2.00	0.4	0.85	-0.003		-0.214	-0.090
695	10	2.00	0.4	1.00	-0.061	0.221	-0.216	-0.093 -0.051
696	10	2.00	0.2	0.00	-0.003		-0.220	-0.051
697	10	2.00	0.2	0.40	0.010	0.209	-0.231	-0.064 -0.089
698	10	2.00	0.2	0.70	0.027	0.222	-0.252 -0.261	-0.100
699	10	2.00	0.2		0.029		-0.264	-0.100
700	10	2.00			-0.035			
701	15	0.00	1.0	0.00	-0.068		-0.172 -0.173	
702 703	15 15	0.00	1.0	0.40 0.70	-0.048 -0.055		-0.173	
703		0.00	1.0	0.75	-0.033	0.010	-0.173	
705	15 15	0.00	1.0	1.00	-0.051		-0.173	
705	15	0.00	0.8		0.012		-0.166	
707	15	0.00	0.8	0.40	0.003		-0.170	
708	15	0.00	0.8	0.70	-0.017		-0.173	-0.001
709	15	0.00	0.8	0.85	-0.031	0.010	-0.173	-0.002
710	15	0.00	0.8	1.00	-0.046		-0.174	-0.002
711	15	0.00	0.6	0.00			-0.150	
712	15	0.00	0.6	0.40	0.029		-0.162	
713	15	0.00	0.6	0.70		0.011	-0.176	-0.006
714	15	0.00	0.6	0.85	-0.006	0.011	-0.181	-0.012
715	15	0.00	0.6	1.00	-0.043	0.011	-0.183	-0.013
716	15	0.00	0.4	0.00	0.090	0.026	-0.128	0.069
717	15	0.00	0.4	0.40	0.051	0.020	-0.163	0.026
718	15	0.00	0.4	0.70	0.025	0.013	-0.199	-0.019
719	15	0.00	0.4	0.85	0.015	0.012	-0.210	-0.032
720	15	0.00	0.4	1.00	-0.022	0.013	-0.214	-0.037
721	15	0.00	0.2	0.00	0.234	0.006	-0.120	0.117
722	15	0.00	0.2	0.40	0.078	0.026	-0.180	0.040
723	15	0.00	0.2	0.70	0.022	0.015	-0.244	-0.042
724	15	0.00	0.2	0.85	0.025	0.013	-0.261	-0.063
725	15	0.00	0.2	1.00	0.023	0.015	-0.267	-0.070
726	15	0.25	1.0	0.00	-0.060	0.026	-0.176	0.001
727	15	0.25	1.0	0.40	-0.044	0.024	-0.178	-0.001
728	15	0.25	1.0	0.70	-0.033	0.024	-0.178	-0.001
729	15	0.25	1.0	0.85	-0.027	0.023	-0.178	-0.001
730	15	0.25	1.0	1.00	-0.030	0.023	-0.178	-0.001
731	15	0.25	0.8	0.00	0.015	0.030	-0.175	0.007

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
732	15).25	0.8	0.40	0.008	0.028	-0.179	0.002
733	15	0.25	0.8	0.70	0.003	0.027	-0.183	-0.002
734	15	0.25	0.8	0.85	-0.007	0.027	-0.184	-0.004
735	15	0.25	0.8	1.00	-0.024	0.027	-0.185	-0.004
736	15	0.25	0.6	0.00	0.042	0.039	-0.156	0.028
737	15	0.25	0.6	0.40	0.037	0.035	-0.169	0.011
738	15	0.25	0.6	0.70	0.027	0.032	-0.185	-0.008
739	15	0.25	0.6	0.85	0.019	0.031	-0.193	-0.014
740	15	0.25	0.6	1.00	-0.014	0.031	-0.192	-0.016
741	15	0.25	0.4	0.00	0.114	0.054	-0.133	0.071
742	15	0.25	0.4	0.40	0.056	0.046	-0.169	0.026
743	15	0.25	0.4	0.70	0.039	0.037	-0.207	-0.021
744	15	0.25	0.4	0.85	0.030	0.035	-0.218	-0.035
745	15	0.25	0.4	1.00	0.005	0.036	-0.222	-0.039
746	15	0.25	0.2	0.00	0.261	0.041	-0.130	0.116
747	15	0.25	0.2	0.40	0.095	0.057	-0.190	0.039
748	15	0.25	0.2	0.70	0.046	0.041	-0.254	-0.044
749	15	0.25	0.2	0.85	0.039	0.038	-0.271	-0.065
750	15	0.25	0.2	1.00	0.035	0.040	-0.277	-0.073
751	15	0.50	1.0	0.00	-0.032	0.061	-0.164	-0.001
752	15	0.50	1.0	0.40	-0.018	0.059	-0.165	-0.003
753	15	0.50	1.0	0.70	0.003	0.060	-0.165	-0.003
754	15	0.50	1.0	0.85	0.008	0.060	-0.165	-0.003
755	15	0.50	1.0	1.00	0.007	0.060	-0.165	-0.003
756	15	0.50	0.8	0.00	0.022	0.073	-0.166	0.008
757	15	0.50	0.8	0.40	0.026	0.072	-0.171	0.002
758	15	0.50	0.8	0.70	0.025	0.070	-0.177	-0.006
759	15	0.50	0.8	0.85	0.024	0.069	-0.179	-0.008
760	15	0.50	0.8	1.00	0.017	0.069	-0.180	-0.009
761	15	0.50	0.6	0.00	0.066	0.094	-0.155	0.031
762	15	0.50	0.6	0.40	0.051	0.087	-0.172	0.011
763	15	0.50	0.6	0.70	0.050	0.081	-0.191	-0.013
764	15	0.50	0.6	0.85	0.043	0.079	-0.197	-0.020
765	15	0.50	0.6	1.00	0.033	0.079	-0.200	-0.023
766	15	0.50	0.4	0.00	0.155	0.122	-0.122	0.074
767	15	0.50	0.4	0.40	0.070	0.108	-0.162	0.025
768	15	0.50	0.4	0.70	0.062	0.092	-0.204	-0.027
769	15	0.50	0.4	0.85	0.053	0.088	-0.217	-0.042
770	15	0.50	0.4	1.00	0.041	0.088	-0.221	-0.047
771	15	0.50	0.2	0.00	0.298	0.119	-0.137	0.110

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
772	15	0.50	0.2	0.40	0.111	0.128	-0.195	0.035
773	15	0.50	0.2	0.70	0.085	0.101	-0.261	-0.049
774	15	0.50		0.85			-0.278	-0.072
775	15			1.00	0.054		-0.284	-0.079
776	15	0.75	1.0	0.00	-0.005		-0.182	-0.006
777	15	0.75	1.0	0.40	0.020		-0.183	-0.008
778	15	0.75	1.0	0.70	0.034		-0.183	-0.008
779	15	0.75	1.0	0.85	0.041		-0.183	-0.008
780	15	0.75	1.0		0.043		-0.183	-0.008
781	15		0.8	0.00	0.031			0.005
782	15	0.75	0.8	0.40	0.039		-0.186	-0.004
783	15	0.75	0.8	0.70	0.050		-0.194	-0.013
784	15	0.75	0.8	0.85	0.044		-0.197	-0.017
785	15	0.75	0.8	1.00		0.118	-0.198	-0.018
786	15		0.6	0.00	0.073	0.152		0.030
787	15	0.75	0.6	0.40	0.058	0.143	-0.186	0.005
788	15	0.75	0.6	0.70	0.069	0.133	-0.209	-0.023
789	15	0.75	0.6	0.85	0.066	0.131	-0.217	-0.032
790	15	0.75	0.6	1.00	0.061	0.130	-0.220	-0.036
791	15	0.75	0.4	0.00	0.162	0.187	-0.148	0.067
792	15	0.75	0.4	0.40	0.069	0.170	-0.189	0.016
793	15	0.75	0.4	0.70	0.080	0.147	-0.233	-0.039
794	15	0.75	0.4	0.85	0.072	0.142	-0.246	-0.056
795	15	0.75	0.4	1.00	0.070	0.141	-0.251	-0.061
796	15	0.75	0.2	0.00	0.281	0.187	-0.170	0.088
797	15	0.75	0.2	0.40	0.103	0.195	-0.220	0.022
798	15	0.75	0.2	0.70	0.094	0.158	-0.283	-0.061
799	15	0.75	0.2	0.85	0.077	0.149	-0.300	-0.083
800	15	0.75	0.2	1.00	0.070	0.148	-0.306	-0.091
801	15	1.00	1.0	0.00	-0.006	0.133	-0.184	-0.015
802	15	1.00	1.0	0.40	0.028	0.136	-0.185	-0.016
803	15	1.00	1.0	0.70	0.052	0.142	-0.185	-0.016
804	15	1.00	1.0	0.85	0.062	0.144	-0.185	-0.016
805	15	1.00	1.0	1.00	0.067	0.145	-0.185	-0.016
806	15	1.00	0.8	0.00	0.025	0.158	-0.173	-0.003
807	15	1.00	0.8	0.40	0.052	0.156	-0.182	-0.013
808	15	1.00	0.8	0.70	0.065	0.157	-0.192	-0.025
809	15	1.00	0.8	0.85	0.070	0.157	-0.195	-0.029
810	15	1.00	0.8	1.00	0.074	0.157	-0.196	-0.030
811	15	1.00	0.6	0.00	0.062	0.190	-0.163	0.019

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
812	15	1.00	0.6	0.40	0.060	0.181	-0.185	-0.008
813	15	1.00	0.6	0.70	0.080	0.171	-0.210	-0.038
814	15	1.00	0.6	0.85	0.076		-0.218	-0.048
815	15	1.00		1.00	0.075		-0.221	
816	15	1.00	0.4		0.126		-0.155	
817	15	1.00	0.4		0.061		-0.192	-0.001
818	15	1.00	0.4	0.70	0.082		-0.235	-0.055
819	15	1.00	0.4		0.075		-0.248	-0.071
820	15	1.00				0.177		-0.077
821	15	1.00	0.2			0.212		0.050
822	15	1.00	0.2		0.067			0.000
823	15	1.00	0.2		0.078		-0.282	-0.074
824	15	1.00	0.2		0.076		-0.299	-0.096
825	15	1.00			0.076		-0.305	-0.103
826	15		1.0		-0.013		-0.198	-0.036
827	15	1.50	1.0		0.044			-0.037
828	15	1.50	1.0		0.067		-0.199	-0.036
829	15	1.50	1.0	0.85			-0.199	-0.036
830	15	1.50	1.0	1.00	0.079		-0,199	-0.036
831	15	1.50	0.8				-0.192	-0.029
832	15	1.50	0.8				-0.200	-0.038
833	15	1.50	0.8	0.70			-0.209	-0.049
834	15	1.50	0.8	0.85	0.068		-0.212	-0.053
835	15	1.50	0.8	1.00	0.068		-0.213	-0.054
836	15	1.50	0.6	0.00	0.014		-0.196	-0.021
837	15	1.50	0.6				-0.211	-0.039
838	15	1.50	0.6	0.70				
839	15	1.50		0.85				
840	15	1.50	0.6	1.00			-0.240	-0.074
841	15	1.50	0.4	0.00	0.020			
842	15	1.50	0.4		0.039	0.217	-0.231	-0.041
843	15	1.50	0.4	0.70	0.053	0.212	-0.260	-0.077
844	15	1.50	0.4	0.85	0.053	0.209	-0.270	-0.090
845	15	1.50	0.4	1.00	0.049	0.209	-0.274	-0.095
846	15	1.50	0.2	0.00	0.032	0.187	-0.255	-0.022
847	15	1.50	0.2	0.40	0.031	0.228	-0.273	-0.045
848	15	1.50	0.2	0.70	0.045	0.219	-0.307	-0.090
849	15	1.50	0.2		0.051	0.212	-0.319	-0.106
850	15	1.50	0.2	1.00		0.212	-0.324	-0.112
851	15	2.00	1.0	0.00	-0.013	0.167	-0.182	-0.049

TP	SS	Bias	Ell	Corr	Grubbs	Rand	Eth	CEP3
852	15	2.00	1.0	0.40	0.031	0.181	-0.183	-0.050
853	15	2.00	1.0	0.70	0.035	0.202	-0.183	-0.050
854	15	2.00	1.0	0.85	0.040	0.209	-0.182	-0.050
855	15	2.00	1.0	1.00	0.044	0.212	-0.182	-0.050
856	15	2.00	0.8	0.00	-0.003	0.175	-0.185	-0.047
857	15	2.00	0.8	0.40	0.032	0.190	-0.190	-0.054
858	15	2.00	0.8	0.70	0.031	0.207	-0.197	-0.061
859	15	2.00	0.8	0.85	0.020	0.213	-0.199	-0.064
860	15	2.00	0.8	1.00	0.015	0.216	-0.200	-0.065
861	15	2.00	0.6	0.00	0.002	0.178	-0.192	-0.046
862	15	2.00	0.6	0.40	0.024	0.199	-0.201	-0.057
863	15	2.00	0.6	0.70	0.029	0.213	-0.214	-0.072
864	15	2.00	0.6	0.85	0.010	0.217	-0.219	-0.078
865	15	2.00	0.6	1.00	-0.022	0.220	-0.220	-0.080
866	15	2.00	0.4	0.00	-0.004	0.174	-0.209	-0.048
867	15	2.00	0.4	0.40	0.014	0.206	- 0.219	-0.060
868	15	2.00	0.4	0.70	0.032	0.219	-0.237	-0.081
869	15	2.00	0.4	0.85	0.019	0.220	-0.244	-0.090
870	15	2.00	0.4	1.00	-0.035	0.222	-0.247	-0.093
871	15	2.00	0.2	0.00	-0.007	0.161	-0.257	-0.051
872	15	2.00	0.2	0.40	0.010	0.210	-0.267	-0.064
873	15	2.00	0.2	0.70	0.027	0.223	-0.287	-0.089
874	15	2.00	0.2	0.85	0.034	0.222	-0.295	-0.100
875	15	2.00	0.2	1.00	0.007	0.224	-0.298	-0.104

Appendix G. Comparative Summary

This Appendix summarizes how well the four CEP estimation methods did compared to each other. The following pages list the test points and their associated data characteristics. The four right hand columns list the first, second, third, and fourth methods in the order of best to worst. Next to the name of the method, a grade is given to indicate how well it did with respect to the magnitude of its relative error. The abbreviations and grade range follow.

<u>Index</u>

Test Point - TP

<u>Parameters</u>

Sample Size - SS

Bias - Bias

Ellipticity - Ell

Correlation - Corr

Estimation Methods

Grubbs-Patnaik/chi-square method - GR

Modified RAND-231 method - RA

Ethridge method - ET

CEP3 method - C3

Range of Grades

Grade A: $0.0\% \rightarrow 2.5\%$

Grade B: $2.5\% \rightarrow 5.0\%$

Grade C: $5.0\% \rightarrow 7.5\%$

Grade D: $7.5\% \rightarrow 10.0\%$

Grade E: $10.0\% \to 15.0\%$

Grade F: $15.0\% \to 20.0\%$

Grade G: $20.0\% \rightarrow 30.0\%$

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
1	3	0.00	1.0	0.00	C3A	ETB	GBD	RAD
2	3	0.00	1.0	0.40	C3A	ETB	GBC	RAD
3	3	0.00	1.0	0.70	C3A	ETB	GBC	RAD
4	3	0.00	1.0	0.85	C3A	ETB	GBD	RAD
5	3	0.00	1.0	1.00	C3A	ETB	GBC	RAD
6	3	0.00	0.8	0.00	C3A	ETB	RAD	GBE
7	3	0.00	0.8	0.40	C3A	ETB	RAD	GBD
8	3	0.00	0.8	0.70	C3A	ETB	RAD	GBD
9	3	0.00	0.8	0.85	C3A	ETB	RAD	GBD
10	3	0.00	0.8	1.00	C3A	ETB	GBD	RAD
11	3	0.00	0.6	0.00	ETA	C3B	RAD	GBE
12	3	0.00	0.6	0.40	C3A	ETB	RAD	GBE
13	3	0.00	0.6	0.70	C3A	ETB	RAD	GBE
14	3	0.00	0.6	0.85	C3A	ETC	RAD	GBD
15	3	0.00	0.6	1.00	C3A	ETC	GBD	RAD
16	3	0.00	0.4	0.00	ETA	C3C	RAE	GBG
17	3	0.00	0.4	0.40	C3B	ETB	RAE	GBF
18	3	0.00	0.4	0.70	C3A	ETD	RAD	GBE
19	3	0.00	0.4	0.85	C3B	RAD	ETD	GBD
20	3	0.00	0.4	1.00	C3B	RAD	GBD	ETD
21	3	0.00	0.2	0.00	ETA	C3E	RAE	GBG
22	3	0.00	0.2	0.40	С3В	ETC	RAE	GBG
23	3	0.00	0.2	0.70	C3B	RAD	ETE	GBE
24	3	0.00	0.2	0.85	C3C	RAC	GBE	ETF
25	3	0.00	0.2	1.00	C3C	RAC	GBD	ETF
26	3	0.25	1.0	0.00	C3A	ETB	GBD	RAD
27	3	0.25	1.0	0.40	C3A	ETB	GBC	RAD
28	3	0.25	1.0	0.70	C3A	ETB	GBD	RAD
29	3	0.25	1.0	0.85	C3A	ETB	GBD	RAD
30	3	0.25	1.0	1.00	C3A	ETB	GBC	RAD
31	3	0.25	0.8	0.00	C3A	ETB	RAD	GBE
32	3	0.25	0.8	0.40	C3A	ETB	RAD	GBD
33	3	0.25	0.8	0.70	C3A	ETB	GBD	RAD
34	3	0.25	0.8	0.85	C3A	ETB	GBD	RAD
35	3	U.25	0.8	1.00	C3A	ETB	GBD	RAD
36	3	0.25	0.6	0.00	ETA	C3B	RAE	GBE
37	3	0.25	0.6	0.40	C3A	ETB	RAE	GBE
38	3	0.25	0.6	0.70	C3A	ETC	RAD	GBE
39	3	0.25	0.6	ი.85	C3A	ETC	GBD	RAD
40	3	0.25	0.6	1.00	C3A	ETC	GBD	RAD

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
41	3	0.25	0.4	0.00	ETA	C3C	RAE	GBG
42	3	0.25	0.4	0.40	C3B	ETB	RAE	GBF
43	3	0.25	0.4	0.70	C3A	ETD	RAD	GBE
44	3	0.25	0.4	0.85	C3B	RAD	GBD	ETD
45	3	0.25	0.4	1.00	C3B	GBC	RAD	ETD
46	3	0.25	0.2	0.00	ETA	C3E	RAE	GBG
47	3	0.25	0.2	0.40	C3B	ETC	RAE	GBG
48	3	0.25	0.2	0.70	C3B	RAD	GBE	ETE
49	3	0.25	0.2	0.85	C3C	RAD	GBE	ETF
50	3	0.25	0.2	1.00	C3C	GBD	RAD	ETF
51	3	0.50	1.0	0.00	C3A	ETB	GBC	RAE
52	3	0.50	1.0	0.40	C3A	ETB	GBD	RAE
53	3	0.50	1.0	0.70	C3A	ETB	GBD	RAE
54	3	0.50	1.0	0.85	C3A	ETB	GBD	RAE
55	3	0.50	1.0	1.00	C3A	ETB	GBD	RAE
56	3	0.50	0.8	0.00	C3A	ETB	GBE	RAE
57	3	0.50	0.8	0.40	C3A	ETB	GBE	RAE
58	3	0.50	0.8	0.70	C3A	ETB	GBD	RAE
59	3	0.50	0.8	0.85	C3A	ETB	GBD	RAE
6 0	3	0.50	0.8	1.00	C3A	ETB	GBD	RAE
61	3	0.50	0.6	0.00	ETA	C3B	RAE	GBF
62	3	0.50	0.6	0.40	C3A	ETB	GBE	RAE
63	3	0.50	0.6	0.70	C3A	ETC	GBE	RAE
64	3	0.50	0.6	0.85	C3A	ETC	GBD	RAE
65	3	0.50	0.6	1.00	C3A	ETC	GBD	RAE
6 6	3	0.50	0.4	0.00	ETA	C3C	RAF	GBG
67	3	0.50	0.4	0.40	C3B	ETB	RAF	GBF
68	3	0.50	0.4	0.70	C3B	ETD	GBE	RAE
69	3	0.50	0.4	0.85	C3B	GBD	ETE	RAE
70	3	0.50	0.4	1.00	C3B	GBC	ETE	RAE
71	3	0.50	0.2	0.00	ETA	СЗЕ	RAF	GBG
72	3	0.50	0.2	0.40	C3B	ETC	RAF	GBF
73	3	0.50	0.2	0.70	C3B	GBE	RAE	ETE
74	3	0.50	0.2	0.85	C3C	GBD	RAE	ETF
75	3	0.50	0.2	1.00	GBC	C3D	RAE	ETF
76	3	0.75	1.0	0.00	C3A	ETB	GBC	RAE
77	3	0.75	1.0	0.40	C3A	ETB	GBD	RAE
78	3	0.75	1.0	0.70	C3A	ETB	GBD	RAE
79	3	0.75	1.0	0.85	C3A	ETB	GBD	RAE
80	3	0.75	1.0	1.00	C3A	ETB	GBD	RAE

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
81	3	0.75	8.0	0.00	C3A	ETB	GBD	RAF
82	3	0.75	8.0	0.40	C3A	ETB	GBD	RAF
83	3	0.75	8.0	0.70	C3A	ETB	GBD	RAE
84	3	0.75	0.8	0.85	C3A	ETC	GBD	RAE
85	3	0.75	0.8	1.00	C3A	ETC	GBD	RAE
86	3	0.75	0.6	0.00	ETA	C3B	GBE	RAF
87	3	0.75	0.6	0.40	C3A	ETB	GBE	RAF
88	3	0.75	0.6	0.70	C3A	ETC	GBD	RAF
89	3	0.75	0.6	0.85	C3B	ETD	GBD	RAE
90	3	0.75	0.6	1.00	C3B	GBC	ETD	RAE
91	3	0.75	0.4	0.00	ETA	C3C	RAG	GBG
92	3	0.75	0.4	0.40	C3A	ETC	GBE	RAF
93	3	0.75	0.4	0.70	C3B	GBD	ETE	RAF
94	3	0.75	0.4	0.85	C3C	GBD	ETE	RAF
95	3	0.75	0.4	1.00	GBC	C3C	ETE	RAE
96	3	0.75	0.2	0.00	ETA	C3D	RAG	GBG
97	3	0.75	0.2	0.40	C3A	ETC	GBF	RAG
98	3	0.75	0.2	0.70	C3C	GBD	ETE	RAF
99	3	0.75	0.2	0.85	GBC	C3D	RAF	ETF
100	3	0.75	0.2	1.00	GBB	C3D	RAE	ETF
101	3	1.00	1.0	0.00	C3A	ETB	GBB	RAF
102	3	1.00	1.0	0.40	C3A	ETB	GBC	RAF
103	3	1.00	1.0	0.70	C3A	ETB	GBD	RAF
104	3	1.00	1.0	0.85	C3A	ETB	GBD	RAF
105	3	1.00	1.0	1.00	C3A	ETB	GBD	RAF
106	3	1.00	0.8	0.00	C3A	ETB	GBD	RAF
107	3	1.00	0.8	0.40	C3A	ETB	GBD	RAF
108	3	1.00	0.8	0.70	C3B	ETC	GBD	RAF
109	3	1.00	0.8	0.85	C3B	ETC	GBC	RAF
110	3	1.00	0.8	1.00	C3B	ETC	GBC	RAF
111	3	1.00	0.6	0.00	C3A	ETB	GBE	RAG
112	3	1.00	0.6	0.40	C3A	ETC	GBD	RAF
113	3	1.00	0.6	0.70	С3В	GBC	ETD	RAF
114	3	1.00	0.6	0.85	C3B	GBC	ETD	RAF
115	3	1.00	0.6	1.00	C3C	GBC	ETD	RAF
116	3	1.00	0.4	0.00	ETA	C3B	GBF	RAG
117	3	1.00	0.4	0.40	C3A	ETC	GBE	RAG
118	3	1.00	0.4	0.70	C3C	GBC	ETE	RAF
119	3	1.00	0.4	0.85	GBB	C3C	ETE	RAF
120	3	1.00	0.4	1.00	GBB	C3D	ETE	RA~-F

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
101		1.00	0.2	0.00	ETB	C3C	DA C	GBG
121 122	3 3	1.00	0.2	0.00 0.40	C3A	ETD	RAG GBE	RAG
123	3	1.00	0.2	0.70	GBC	C3C	ETF	RAF
124	3	1.00	0.2	0.85	GBB	C3D	RAF	ETF
125	3	1.00	0.2	1.00	GBA	C3E	RAF	ETF
126	3	1.50	1.0	0.00	GBA	C3B	ETB	RAF
127	3	1.50	1.0	0.40	GBB	C3~-B	ETB	RAF
128	3	1.50	1.0	0.70	C3B	GBB	ETB	RAF
129	3	1.50	1.0	0.85	C3B	GBB	ETB	RAF
130	3	1.50	1.0	1.00	C3B	GBB	ETB	RAF
131	3	1.50	0.8	0.00	C3B	GBB	ETB	RAF
132	3	1.50	0.8	0.40	GBB	C3B	ETC	RAF
133	3	1.50	0.8	0.70	GBA	C3B	ETC	RAF
134	3	1.50	0.8	0.85	GBA	C3C	ETC	RAF
135	3	1.50	0.8	1.00	GBA	C3C	ETC	RAF
136	3	1.50	0.6	0.00	C3A	ETB	GBC	RAF
137	3	1.50	0.6	0.40	C3B	GBB	ETC	RAG
138	3	1.50	0.6	0.70	GBA	C3C	ETD	RAF
139	3	1.50	0.6	0.85	GBA	C3C	ETD	RAF
140	3	1.50	U.6	1.00	GBA	C3C	ETD	RAF
141	3	1.50	0.4	0.00	C3A	ETC	GBD	RAF
142	3	1.50	0.4	0.40	GBB	C3B	ETD	RAG
143	3	1.50	0.4	0.70	GBA	C3D	ETE	RAG
144	3	1.50	0.4	0.85	GBA	C3D	ETE	RAF
145	3	1.50	0.4	1.00	GBB	C3D	ETE	RAF
146	3	1.50	0.2	0.00	C3A	ETD	GBD	RAF
147	3	1.50	0.2	0.40	C3B	GBC	ETD	RAG
148	3	1.50	0.2	0.70	GBA	C3D	ETE	RAG
149	3	1.50	0.2	0.85	GBA	C3E	ETF	RAF
150	3	1.50	0.2			C3E		RAF
151	3	2.00	1.0	0.00	GBA			
152	3	2.00	1.0	0.40	GBA			
153	3	2.00	1.0	0.70	GBA			
154	3	2.00	1.0	0.85	GBA			
155	3	2.00	1.0	1.00	GBA		C3C	
156	3	2.00	0.8	0.00	GBA		C3B	
157	3	2.00	0.8	0.40	GBA	ETC		
158	3	2.00	0.8	0.70	GBB			
159	3	2.00	0.8	0.85	GBB			
160	3	2.00	0.8	1.00	GBB	E1C	C3C	RAG

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
161	3	2.00	0.6	0.00	GBA	C3B	ETC	RAF
162	3	2.00	0.6	0.40	GBA	C3C	ETC	RAF
163	3	2,00	0.6	0.70	GBB	C3C	ETD	RAG
164	3	2.00	0.6	0.85	GBC	C3D	ETD	RAG
165	3	2.00	0.6	1.00	GBC	C3D	ETD	RAG
166	3	2.00	0.4	0.00	GBB	C3B	ETC	RAF
167	3	2.00	0.4	0.40	GBA	C3C	ETC	RAF
168	3	2.00	0.4	0.70	GBB	C3D	ETD	RAG
169	3	2.00	0.4	0.85	GBC	C3D	ETE	RAG
170	3	2.00	0.4	1.00	C3D	GBD	ETE	RAG
171	3	2.00	0.2	0.00	GBB	C3C	ETC	RAF
172	3	2.00	0.2	0.40	GBA	C3C	ETD	RAG
173	3	2.00	0.2	0.70	GBA	C3D	ETE	RAG
174	3	2.00	0.2	0.85	GBC	C3E	ETE	RAG
175	3	2.00	0.2	1.00	C3E	ETE	GBE	RAG
176	5	0.00	1.0	0.00	C3A	GBA	RAB	ETC
177	5	0.00	1.0	0.40	C3A	GBA	RAB	ETC
178	5	0.00	1.0	0.70	C3A	GBA	RAB	ETC
179	5	0.00	1.0	0.85	C3A	GBA	RAB	ETC
180	5	0.00	1.0	1.00	C3A	GBA	RAB	ETC
181	5	0.00	0.8	0.00	C3A	GBB	RAB	ETC
182	5	0.00	0.8	0.40	C3A	GBB	RAB	ETC
183	5	0.00	0.8	0.70	C3A	GBB	RAB	ETC
184	5	0.00	0.8	0.85	C3A	GBA	RAB	ETC
185	5	0.00	0.8	1.00	C3A	GBA	RAB	ETC
186	5	0.00	0.6	0.00	C3B	ETB	RAC	GBD
187	5	0.00	0.6	0.40	C3A	RAC	ETC	GBD
188	5	0.00	0.6	0.70	C3A	RAB	GBC	ETD
189	5	0.00	0.6	0.85	C3A	GBB	RAB	ETD
190	5	0.00	0.6	1.00	C3A	GBA	RAB	ETD
191	5	0.00	0.4	0.00	ETB	C3C	RAC	GBF
192	5	0.00	0.4	0.40	C3B	RAC	ETC	GBE
193	5	0.00	0.4	0.70	C3A	RAB	GBD	ETE
194	5	0.00	0.4	0.85	C3B	RAB	GBC	ETE
195	5	0.00	0.4	1.00	GBB	C3B	RAB	ETE
196	5	0.00	0.2	0.00	ETB	RAC	C3E	GBG
197	5	0.00	0.2	0.40	C3B	RAC	ETD	GBF
198	5	0.00	0.2	0.70	C3B	RAB	GBD	ETF
199	5	0.00	0.2	0.85	RAB	C3C	GBD	ETF
200	5	0.00	0.2	1.00	RAB	GBB	C3C	ETF

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
504		0.05	1 0	0.00	C2 A	CD 4	D4 0	FT 0
201	5	0.25	1.0	0.00	C3A	GBA	RAC	ETC
202 203	5 5	0.25 0.25	1.0	0.40 0.70	C3A C3A	GBA GBA	RAC	ETC
203	5	0.25	1.0	0.70	C3A	GBA	RAC	ETC
205	5	0.25	1.0	1.00	C3A	GBA	RAC	ETC
206	5	0.25	0.8	0.00	C3A	GBB	ETC	RAC
207	5	0.25	0.8	0.40	C3A	GBB	RAC	ETC
208	5	0.25	0.8	0.70	C3A	GBB	RAC	ETC
209	5	0.25	0.8	0.85	C3A	GBB	RAC	ETC
210	5	0.25	0.8	1.00	C3A	GBA	RAC	ETC
211	5	0.25	0.6	0.00	C3B	ETB	RAD	GBE
212	5	0.25	0.6	0.40	C3A	ETC	RAC	GBD
213	5	0.25	0.6	0.70	C3A	RAC	GBC	ETD
214	5	0.25	0.6	0.85	C3A	GBB	RAC	ETD
215	5	0.25	0.6	1.00	C3A	GBB	RAC	ETD
216	5	0.25	0.4	0.00	ETB	C3C	RAD	GBF
217	5	0.25	0.4	0.40	C3B	ETC	RAD	GB E
218	5	0.25	0.4	0.70	C3A	RAC	GBD	ETE
219	5	0.25	0.4	0.85	C3B	RAC	GBC	ETE
220	5	0.25	0.4	1.00	GBB	C3B	RAC	ETE
221	5	0.25	0.2	0.00	ETB	RAD	C3E	GBG
222	5	0.25	0.2	0.40	C3B	RAD	ETD	GBF
223	5	0.25	0.2	0.70	C3B	RAC	GBD	ETF
224	5	0.25	0.2	0.85	RAC	C3C	GBD	ETF
225	5	0.25	0.2	1.00	GBC	RAC	C3C	ETF
226	5	0.50	1.0	0.00	C3A	GBA	ETC	RAD
227	5	0.50	1.0	0.40	C3A	GBB	ETC	RAD
228	5	0.50	1.0	0.70	C3A	GBB	ETC	RAD
229	5	0.50	1.0	0.85	C3A	GBB	ETC	HAD
230	5	0.50	1.0	1.00	C3A	GBB	ETC	RAD
231	5	0.50	0.8	0.00	C3A	GBC		RAD
232	5	0.50	0.8	0.40	C3A	GBC		
233	5	0.50	0.8	0.70	C3A	GBC	ETC	RAD
234	5	0.50	0.8	0.85	C3A	GBB	ETC	
235	5	0.50	0.8	1.00	C3A			
236	5	0.50	0.6	0.00	C3B			
237	5	0.50	0.6	0.40	C3A	ETC	GBD	
238	5	0.50	0.6	0.70	C3A	GBD		
239	5	0.50	0.6	0.85	C3A			
240	5	0.50	0.6	1.00	C3A	GBB	RAD	ETD

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
241	5	0.50	0.4	0.00	ETB	C3C	RAE	GBF
242	5	0.50	0.4	0.40	C3B	ETD	RAE	GBE
243	5	0.50	0.4	0.70	C3B	GBD	RAE	ETE
244	5	0.50	0.4	0.85	C3B	GBD	RAE	ETE
245	5	0.50	0.4	1.00	C3B	GBC	RAE	ETE
246	5	0.50	0.2	0.30	ETB	€3E	RAF	GBG
247	5	0.50	0.2	0.40	C3B	ETE	RAE	GBF
248	5	0.50	0.2	0.70	C3B	GBE	RAE	ETF
249	5	0.50	0.2	0.85	C3C	GBD	RAE	ETF
250	5	0.50	0.2	1.00	GBC	C3D	RAE	ETG
251	5	0.75	1.0	0.00	C3A	GBA	ETC	RAE
252	5	0.75	1.0	0.40	C3A	GBB	ETC	RAE
253	5	0.75	1.0	0.70	C3A	GBC	ETC	RAE
∠54	5	0.75	1.0	0.85	C3A	GBC	ETC	RAE
255	5	0.75	1.0	1.00	C3A	GBC	ETC	RAE
256	5	0.75	0.8	0.00	C3A	GBC	ETC	RAE
257	5	0.75	0.8	0.40	C3A	GBC	ETC	RAE
258	5	0.75	0.8	0.70	C3A	GBC	ETD	RAE
259	5	0.75	0.8	0.85	C3A	GBC	ETD	RAE
260	5	0.75	0.8	1.00	C3A	GBC	ETD	RAE
261	5	0.75	0.6	0.00	C3B	ETC	GBE	RAF
262	5	0.75	1.6	0.40	C3A	ETC	GBD	RAF
263	5	0.75	0.6	0.70	C3A	GBD	ETE	RAE
264	5	0.75	0.6	0.85	C3B	GBC	ETE	RAE
265	5	0.75	0.6	1.00	C3B	GBC	ETE	RAE
266	5	0.75	0.4	0.00	ETB	C3C	GBF	RAG
267	5	0.75	0.4	0.40	C3A	ETD	GBE	RAF
268	5	0.75	0.4	0.70	C3B	GBD	ETE	RAF
269	5	0.75	0.4	0.85	C3C	GBC	RAE	ETF
270	5	0.75	0.4	1.00	GBC	C3C	RAE	ETF
271	5	0.75	0.2	0.00	ETC	C3D	RAG	GBG
272	5	0.75	0.2	0.40	C3A	ETE		RAG
273	5	0.75	0.2	0.70	C3C	GBD		
274	5	0.75	0.2	0.85	C3B	ETE		RAG
275	5	0.75	0.2	1.00	GBC	C3D	RAE	ETG
276	5	1.00	1.0	0.00	C3A	GBA	ETC	RAE
277	5	1.00	1.0	0.40	C3A			RAE
278	5	1.00	1.0	0.70	C3A			RAF
	5	1.00	1.0	0.85	C3A	GBC	ETC	RAF
0	5	1.07	1.0	1.00	C3A	GBC	ETC	RAF

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
281	5	1.00	0.8	0.00	C3A	GBC	ETC	RAF
282	5	1.00	0.8	0.40	C3A	GBC	ETD	RAF
283	5	1.00	0.8	0.70	C3B	GBC	ETD	RAF
284	5	1.00	0.8	0.85	C3B	GBC	ETD	KAF
285	5	1.00	0.8	1.00	C3B	GBC	ETD	RAF
286	5	1.00	0.6	0.00	C3A	ETC	GBD	RAF
287	5	1.00	0.6	0.40	C3A	ETD	GBD	RAF
288	5	1.00	0.6	0.70	C3B	GBC	ETE	RAF
289	5	1.00	0.6	0.85	C3B	GBC	ETE	RAF
290	5	1.00	0.6	1.00	C3C	GBC	ETE	RAF
291	5	1.00	0.4	0.00	C3B	ETC	GBF	RAG
292	5	1.00	0.4	0.40	C3A	ETD	GBE	RAG
293	5	1.00	0.4	0.70	C3C	GBC	ETE	RAF
294	5	1.00	0.4	0.85	GBC	C3C	ETF	RAF
295	5	1.00	0.4	1.00	GBB	C3D	ETF	RAF
296	5	1.00	0.2	0.00	C3C	ETD	GBG	RAG
297	5	1.00	0.2	0.40	C3A	GBE	ETE	RAG
298	5	1.00	0.2	C.70	C3C	GBD	RAF	ETF
299	5	1.00	0.2	0.85	GBC	C3D	RAF	ETG
300	5	1.00	0.2	1.00	GBB	C3E	RAF	ETG
301	5	1.50	1.0	0.00	GBA	C3B	ETC	RAF
302	5	1.50	1.0	0.40	GBB	C3B	ETC	RAF
303	5	1.50	1.0	0.70	C3B	GBB	ETC	RAF
304	5	1.50	1.0	0.85	C3B	GBC	ETC	RAF
305	5	1.50	1.0	1.00	C3B	GBB	ETC	RAF
306	5	1.50	9.0	0.00	GBA	C3B	ETC	RAF
307	5	1.50	0.8	0.40	C3B	GBB	ETD	RAF
308	5	1.50	0.8	0.70	GBB	C3B	ETD	RAF
309	J	1.50	0.8	0.85	GBB	C3C	ETD	RAF
310	5	1.50	0.8	1.00	GBB	C3C	ETD	RAF
311	5	1.50	0.6	0.00	C3A	GBB	ETD	RAF
312	5	1.50	0.6	0.40	C3B	GBB	ETD	RAG
313	5	1.50	0.6	0.70	GBB	C3C	ETE	RAG
314	5	1.50	IJ.6	0.85	GBA	C3C	ETE	RAG
315	5	1.50	0.6	1.00	GBA	C3C	ETE	RAG
316	5	1.50	0.4	0.00	C3A	GBC	ETD	RAF
317	5	1.50	0.4	0.40	C3B	GBB	ETE	RAG
318	5	1.50	0.4	0.70	GBB	C3D	ELE	RAG
319	5	1.50	0.4	0.85	GBA	C3D	ETF	RAG
320	5	1.50	0.4	1.00	GBA	C3D	ETF	RAG

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
321	5	1.50	0.2	0.00	C3A	GBC	ETE	RAF
322	5	1.50	0.2	0.40	C3B	GBB	E1E	RAG
323	5	1.50	0.2	0.70	GBB	C3D	ETF	RAG
324	5	1.50	0.2	0.85	GBA	C3E	ETF	RAG
325	5	1.50	0.2	1.00	GBA	C3E	ETF	RAG
326	5	2.00	1.0	0.00	GBA	C3B	ETC	RAF
327	5	2.00	1.0	0.40	GBA	C3C	ETC	RAF
328	5	2.00	1.0	0.70	GBA	C3C	ETC	RAG
329	5	2.00	1.0	0.85	GBA	C3C	ETC	RAG
330	5	2.00	1.0	1.00	GBA	C3C	ETC	RAG
331	5	2.00	0.8	0.00	GBA	C3B	ETC	RAF
332	5	2.00	0.8	0.40	GBA	C3C	ETC	RAF
333	5	2.00	0.8	0.70	GBA	C3C	ETD	RAG
334	5	2.00	0.8	0.85	GBB	C3C	ETD	RAG
3 35	5	2.00	0.8	1.00	GBB	C3C	ETD	RAG
336	5	2.00	0.6	0.00	GBA	C3B	ETC	RAF
337	5	2.00	0.6	0.40	GBA	C3C	ETD	RAF
338	5	2.00	0.6	0.70	GBA	C3C	ETD	RAG
339	5	2.00	0.6	0.85	GBB	C3D	ETE	RAG
340	5	2.00	0.6	1.00	GBC	C3D	ETE	RAG
341	5	2.00	0.4	0.00	GBA	С3В	ETD	RAF
342	5	2.00	0.4	0.40	GBA	C3C	ETD	RAG
343	5	2.00	0.4	0.70	GBA	C3D	ETE	RAG
344	5	2.00	0.4	0.85	GBB	C3D	ETE	RAG
345	5	2.00	0.4	1.00	C3D	GBD	ETE	RAG
346	5	2.00	0.2	0.00	GBA	C3C	ETD	RAF
347	5	2.00	0.2	0.40	GBA	C3C	ETE	RAG
348	5	2.00	0.2	0.70	GBA	C3D	ETE	RAG
349	5	2.00	0.2	0.85	GBA	С3Е	ETE	RAG
350	5	2.00	0.2	1.00	GBD	C3E	ETE	RAG
351	7	0.00	1.0	0.00	C3A	GBA	RAB	ETD
352	7	0.00	1.0	0.40	C3A	GBB	RAB	ETD
3 53	7	0.00	1.0	0.70	C3A	GBA	RAB	ETD
354	7	0.00	1.0	0.85	C3A	GBB	RAB	ETD
355	7	0.00	1.0	1.00	C3A	GBA	RAB	ETD
356	7	0.00	0.8	0.00	C3A	GBB		ETD
35 7	7	0.00	0.8	0.40	C3A	GBA		ETD
358	7	0.00	0.8	0.70	C3A	GBA	RAB	ETD
359	7	0.00	0.8	0.85	GBA	C3A		ETD
360	7	0.00	0.8	1.00	C3A	GBA		ETD

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
361	7	0.00	0.6	0.00	C3B	RAB	ETD	GBD
362	7	0.00	0.6	0.40	C3A	RAB	GBC	ETD
363	7	0.00	0.6	0.70	C3A	RAB	GBB	ETE
364	7	0.00	0.6	0.85	C3A	GBA	RAB	ETE
365	7	0.00	0.6	1.00	GBA	C3A	RAB	ETE
366	7	0.00	0.4	0.00	RAC	ETC	C3C	GBE
367	7	0.00	0.4	0.40	C3B	RAB	ETD	GBD
368	7	0.00	0.4	0.70	C3A	RAB	GBC	ETE
369	7	0.00	0.4	0.85	RAB	С3В	GBB	ETE
370	7	0.00	0.4	1.00	GBA	RAB	C3B	ETF
371	7	0.00	0.2	0.00	RAB	ETC	C3E	GBG
372	7	0.00	0.2	0.40	C3B	RAC	ETE	GBE
373	7	0.00	0.2	0.70	RAB	C3B	GBC	ETF
374	7	0.00	0.2	0.85	RAB	GBC	C3C	ETG
375	7	0.00	0.2	1.00	RAB	GBB	C3C	ETG
376	7	0.25	1.0	0.00	C3A	GBA	RAB	ETD
377	7	0.25	1.0	0.40	C3A	GBA	RAB	ETD
378	7	0.25	1.0	0.70	C3A	GBA	RAB	ETD
379	7	0.25	1.0	0.85	C3A	GBA	RAB	ETD
380	7	0.25	1.0	1.00	C3A	GBA	RAB	ETD
381	7	0.25	0.8	0.00	C3A	GBB	RAB	ETD
382	7	0.25	0.8	0.40	C3A	GBA	RAB	ETD
383	7	0.25	0.8	0.70	C3A	GBA	RAB	ETD
384	7	0.25	0.8	0.85	C3A	GBA	RAB	ETD
385	7	0.25	0.8	1.00	GBA	C3A	RAB	ETD
386	7	0.25	0.6	0.00	C3B	RAC	ETD	GBD
387	7	0.25	0.6	0.40	C3A	RAC	GBC	ETD
388	7	0.25	0.6	0.70	C3A	GBB	RAB	ETE
389	7	0.25	0.6	0.85	C3A	GBB	RAB	ETE
390	7	0.25	0.6	1.00	GBA	C3A	RAB	ETE
391	7	0.25	0.4	0.00	ETC	C3C	RAD	GBF
392	7	0.25	0.4	0.40	C3B	RAC	ETD	GBE
393	7	0.25	0.4	0.70	C3A	RAC	GBC	ETE
394	7	0.25	0.4	0.85	C3B	RAB	GBB	ETE
395	7	0.25	0.4	1.00	GBA	СЗВ	RAB	ETF
396	7	0.25	0.2	0.00	RAA	C3B	ETE	GBG
397	7	0.25	0.2	0.40	C3B	RAD	ETE	GBE
398	7	0.25	0.2	0.70	C3B	RAC	GBD	ETF
399	7	0.25	0.2	0.85	RAC	C3C	GBC	ETG
400	7	0.25	0.2	1.00	GBB	RAC	C3C	ETG

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
401	7	0.50	1.0	0.00	C3A	GBA	RAD	ETD
402	7	0.50	1.0	0.40	C3A	GBA	RAC	ETD
403	7	0.50	1.0	0.70	C3A	GBA	RAC	ETD
404	7	0.50	1.0	0.85	C3A	GBA	RAC	ETD
405	7	0.50	1.0	1.00	C3A	GBA	RAC	ETD
406	7	0.50	0.8	0.00	C3A	GBB	ETD	RAD
407	7	0.50	8.0	0.40	C3A	GBB	RAD	ETD
408	7	0.50	0.8	0.70	C3A	GBB	RAD	ETD
409	7	0.50	8.0	0.85	C3A	GBB	RAD	ETD
410	7	0.50	0.8	1.00	C3A	GBA	RAD	ETD
411	7	0.50	0.6	0.00	C3B	ETC	GBD	RAE
412	7	0.50	0.6	0.40	C3A	GBD	ETD	RAD
413	7	0.50	0.6	0.70	C3A	GBC	RAD	ETE
414	7	0.50	0.6	0.85	C3A	GBC	RAD	ETE
415	7	0.50	0.6	1.00	C3A	GBB	RAD	ETE
416	7	0.50	0.4	0.00	ETC	C3C	RAE	GBF
417	7	0.50	0.4	0.40	C3B	ETD	GBE	RAE
418	7	0.50	0.4	0.70	СЗВ	GBD	RAE	ETE
419	7	0.50	0.4	0.85	СЗВ	GBC	RAD	ETF
420	7	0.50	0.4	1.00	GBB	C3~-B	RAD	ETF
421	7	0.50	0.2	0.00	ETC	C3E	RAE	GBG
422	7	0.50	0.2	0.40	С3В	ETE	GBE	RAE
423	7	0.50	0.2	0.70	СЗВ	GBD	RAE	ETF
424	7	0.50	0.2	0.85	C3C	GBD	RAD	ETG
425	7	0.50	0.2	1.00	GBC	C3D	RAD	ETG
426	7	0.75	1.0	0.00	GBA	C3A	ETD	RAE
427	7	0.75	1.0	0.40	C3A	GBA	ETD	RAE
428	7	0.75	1.0	0.70	C3A	GBB	ETD	RAE
429	7	0.75	1.0	0.85	C3A	GBB	ETD	RAE
430	7	0.75	1.0	1.00	C3A	GBB	ETD	RAE
431	7	0.75	0.8	0.00	C3A	GBB	ETD	RAE
432	7	0.75	0.8	0.40	C3A	GBB	ETD	RAE
433	7	0.75	0.8	0.70	C3A	GBB	ETE	RAE
434	7	0.75	0.8	0.85	C3A		ETE	RAE
435		0.75	0.8	1.00				
436		0.75	0.6	0.00	С3В			
437		0.75	0.6	0.40				
438		0.75	0.6	0.70	C3A			
439		0.75	0.6		С3В			
440			0.6					
•••	•	U	•	•			_	_

TP	SS	Bias	E11	Corr	1ST	2ND	ЗRD	4TH
441	7	0.75	0.4	0.00	ETC	C3C	GBF	RAF
442	7	0.75	0.4	0.40	C3A	GBE	ETE	RAF
443	7	0.75	0.4	0.70	C3B	GBD	RAE	ETF
444	7	0.75	0.4	0.85	C3C	GBC	RAE	ETF
445	7	0.75	0.4	1.00	GBC	C3C	RAE	ETF
446	7	0.75	0.2	0.00	ETD	C3D	RAF	GBG
447	7	0.75	0.2	0.40	C3A	GBE	ETE	RAF
448	7	0.75	0.2	0.70	C3C	GBD	RAF	ETG
449	7	0.75	0.2	0.85	C3D	GBD	RAE	ETG
450	7	0.75	0.2	1.00	GBC	C3D	RAE	ETG
451	7	1.00	1.0	0.00	GBA	C3A	ETD	RAE
452	7	1.00	1.0	0.40	C3A	GBB	ETE	RAE
453	7	1.00	1.0	0.70	C3A	GBC	ETE	RAE
454	7	1.00	1.0	0.85	C3A	GBC	ETE	RAE
455	7	1.00	1.0	1.00	C3A	GBC	ETE	RAE
456	7	1.00	0.8	0.00	C3A	GBB	ETD	RAF
457	7	1.00	0.8	0.40	C3A	GBC	E.LE	RAF
458	7	1.00	0.8	0.70	C3B	GBC	ETE	RAF
459	7	1.00	0.8	0.85	C3B	GBC	ETE	RAF
460	7	1.00	0.8	1.00	C3B	GBC	ETE	RAF
461	7	1.00	0.6	0.00	C3A	GBD	ETD	RAF
462	7	1.00	0.6	0.40	C3A	GBD	ETE	RAF
463	7	1.00	0.6	0.70	C3B	GBC	ETE	RAF
464	7	1.00	0.6	0.85	C3B	GBC	ETE	RAF
465	7	1.00	0.6	1.00	C3C	GBC	ETE	RAF
466	7	1.00	0.4	0.00	C3B	ETD	GBE	RAG
467	7	1.00	0.4	0.40	C3A	GBD	ETE	RAG
468	7	1.00	0.4	0.70	C3C	GBC	ETF	RAF
469	7	1.00	0.4	0.85	GBC	C3C	RAF	ETF
470	7	1.00	0.4	1.00	GBC	C3D	RAF	ETF
471	7	1.00	0.2	0.00	C3C	ETE	GBG	RAG
472	7	1.00	0.2	0.40	C3A	GBD	ETF	RAG
473	7	1.00	0.2	0.70	C3C	GBD	RAF	ETG
474	7	1.00	0.2	0.85	GBC	C3D	RAF	ETG
475	7	1.00	0.2	1.00	GBC	C3E	RAF	ETG
476	7	1.50	1.0	0.00	GBA	C3B	ETE	RAF
477	7	1.50	1.0	0.40	GBB	C3B	ETE	RAF
478	7	1.50	1.0	0.70	C3B	GBC	ETE	RAF
479	7	1.50	1.0	0.85	C3B	GBC	ETE	RAF
480	7	1.50	1.0	1.00	C3B	GBC	ETE	RAF

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
401	~~	1 50	^ ^	0.00	CD A	72 P		D. E
481	7	1.50	0.8	0.00	GBA	C3B	ETE	RAF
482	7 7	1.50	8.0 8.0	0.40 0.70	C3B	GBB C3B	ETE ETE	RAF RAF
483 484	7	1.50	0.8	0.70	GBB	C3C	ETE	RAF
485	7	1.50	0.8	1.00	GBB GBB	C3C	ETE	RAF
486	7	1.50	0.6	0.00	C3A	GBB	ETE	RAF
487	7	1.50	0.6	0.40	C3B	GBB	ETE	RAG
488	7	1.50	0.6	0.70	GBB	C3C	ETE	RAG
489	7	1.50	0.6	0.85		C3C	ETE	RAG
490	7	1.50	0.6	1.00	GBB	C3C	ETF	RAG
491	7	1.50	0.4	0.00	C3A	GBB	ETE	RAG
492	7	1.50	0.4	0.40	C3B	GBB	ETE	RAG
493	7	1.50	0.4	0.70	GBB	C3D	ETF	RAG
494	7	1.50	0.4	0.85	GBB	C3D	ETF	RAG
495	7	1.50	0.4	1.00	GBA	C3D	ETF	RAG
496	7	1.50	0.2	0.00	C3A	GBC	ETE	RAF
497	7	1.50	0.2	0.40	GBB	C3B	ETF	RAG
498	7	1.50	0.2	0.70	GBB	C3D	ETG	RAG
499	7	1.50	0.2	0.85	GBB	C3E	RAG	ETG
500	7	1.50	0.2	1.00	GBA	С3Е	RAG	ETG
501	7	2.00	1.0	0.00	GBA	C3B	ETD	RAF
502	7	2.00	1.0	0.40	GBA	C3C	ETD	RAF
503	7	2.00	1.0	0.70	GBA	C3C	ETD	RAG
504	7	2.00	1.0	0.85	GBA	C3C	ETD	RAG
505	7	2.00	1.0	1.00	GBA	C3C	ETD	RAG
506	7	2.00	0.8	0.00	GBA	C3B	ETD	RAF
507	7	2.00	0.8	0.40	GBA	C3C	ETD	RAF
508	7	2.00	0.8	0.70	GBA	C3C	ETE	RAG
509	7	2.00	0.8	0.85	GBA	C3C	ETE	RAG
510	7	2.00	0.8	1.00	GBA	C3C	ETE	RAG
511	7	2.00	0.6	0.00	GBA	C3B	ETD	RAF
512	7	2.00	0.6	0.40	GBA	C3C		RAF
513	7	2.00	0.6	0.70	GBA	C3C	ETE	RAG
514	7	2.00	0.6	0.85	GBB			
515	7	2.00	0.6	1.00	GBB			
516	7	2.00	0.4	0.00	GBA	C3B	ETE	
517	7	2.00	0.4	0.40	GBA	C3C		
518	7	2.00	0.4	0.70	GBA		ETE	
519	7	2.00	0.4	0.85	GBA			
520	7	2.00	0.4	1.00	GBC	C3D	ETF	RAG

521 7 2.00 0.2 0.00 GB-A C3-C ET-E RA-F 522 7 2.00 0.2 0.40 GB-A C3-C ET-E RA-G 524 7 2.00 0.2 0.70 GB-B C3-LE ET-F RA-G 525 7 2.00 0.2 1.00 GB-C C3-E ET-F RA-G 526 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 528 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 529 10 0.00 1.0 0.85 C3-A RA-A GB-B ET-E 530 10 0.00 0.8 0.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 531 10 0.00 0.8 0.50 C3-	TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
522 7 2.00 0.2 0.40 GBA C3C ETE RAG 523 7 2.00 0.2 0.70 GBB C3D ETF RAG 524 7 2.00 0.2 1.00 GBC C3E ETF RAG 525 7 2.00 1.0 0.00 C3A RAA GBB ETE 527 10 0.00 1.0 0.40 C3A RAA GBB ETE 528 10 0.00 1.0 0.40 C3A RAA GBB ETE 529 10 0.00 1.0 0.85 C3A RAA GBB ETE 530 10 0.00 0.8 0.00 C3A ARA GBB ETE 531 10 0.00 0.8 0.40 C3A GBA RAA ETE 531 10 0.00 0.8									
523 7 2.00 0.2 0.70 GB-B C3-D ET-F RA-G 524 7 2.00 0.2 0.85 GB-A C3-E ET-F RA-G 525 7 2.00 0.2 1.00 GB-C C3-E ET-F RA-G 526 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 528 10 0.00 1.0 0.70 C3-A RA-A GB-B ET-E 529 10 0.00 1.0 0.85 C3-A RA-A GB-B ET-E 530 10 0.00 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.40 C3-A AB-A RA-A ET-E 531 10 0.00 0.8 0.40 C3-A AB-A RA-A ET-E 531 10 0.00 0.8 0.85 C3-A AB									
524 7 2.00 0.2 0.85 GB-A C3-E ET-F RA-G 525 7 2.00 0.2 1.00 GB-C C3-E ET-F RA-G 526 10 0.00 1.0 0.00 C3-A RA-A GB-B ET-E 527 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 528 10 0.00 1.0 0.70 C3-A RA-A GB-B ET-E 530 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.00 C3-A GB-A RA-A ET-E 531 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 534 10 0.00 0.6 0.00 C3									
525 7 2.00 0.2 1.00 GBC C3-E ET-F RA-G 526 10 0.00 1.0 0.00 C3-A RA-A GB-B ET-E 527 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 528 10 0.00 1.0 0.70 C3-A RA-A GB-B ET-E 530 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.00 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 535 10 0.00 0.6 0.00							C3D	ETF	
526 10 0.00 1.0 0.00 C3-A RA-A GB-B ET-E 527 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 528 10 0.00 1.0 0.85 C3-A RA-A GB-B ET-E 529 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 530 10 0.00 0.8 0.00 C3-A RA-A ET-E 531 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 535 10 0.00 0.8 0.85 C3-A RA-A GB-B-B ET-E 536 10 0.00 0.6 0.40 C3-A <t< td=""><td></td><td></td><td></td><td></td><td></td><td>GBA</td><td>C3E</td><td>ETF</td><td>RAG</td></t<>						GBA	C3E	ETF	RAG
527 10 0.00 1.0 0.40 C3-A RA-A GB-B ET-E 528 10 0.00 1.0 0.70 C3-A RA-A GB-B ET-E 529 10 0.00 1.0 0.85 C3-A RA-A GB-B ET-E 530 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 0.80 C3-A GB-A RA-A ET-E 535 10 0.00 0.6 0.00 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.70	525	7	2.00	0.2	1.00	GBC	C3E	ETF	RAG
528 10 0.00 1.0 0.70 C3-A RA-A GB-B ET-E 529 10 0.00 1.0 0.85 C3-A RA-A GB-B ET-E 530 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 0.85 C3-A RB-A BB-B ET-E 535 10 0.00 0.6 0.00 C3-A RA-A GB-B ET-E 536 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.70		10	0.00	1.0	0.00	C3A	RAA	GBB	ETE
529 10 0.00 1.0 0.85 C3-A RA-A GB-B ET-E 530 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 536 10 0.00 0.6 0.00 C3-B RA-B GB-B ET-E 537 10 0.00 0.6 0.40 C3-A RA-A ET-E 538 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A	527	10	0.00	1.0	0.40	C3A	RAA	GBB	ETE
530 10 0.00 1.0 1.00 C3-A RA-A GB-B ET-E 531 10 0.00 0.8 0.00 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 1.00 C3-A RA-A ET-E 535 10 0.00 0.6 0.00 C3-B RA-A GB-B ET-E 536 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A	528	10	0.00	1.0	0.70	C3A	RAA	GBB	ETE
531 10 0.00 0.8 0.00 C3-A GB-A RA-A ET-E 532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 1.00 C3-A RA-A GB-B ET-E 535 10 0.00 0.6 0.00 C3-B RA-A GB-B ET-E 536 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-F 538 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 540 10 0.00 0.4 0.00	529	10	0.00	1.0	0.85	C3A	RAA	GBB	ETE
532 10 0.00 0.8 0.40 C3-A GB-A RA-A ET-E 533 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 1.00 C3-A RA-A ET-E 535 10 0.00 0.6 0.00 C3-A RA-A GB-B ET-E 536 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.40 C3-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 540 10 0.00 0.4 0.00 RA-B C3-C ET-E ET-F 543 10 0.00 0.4 0.70 C3-A RA-A	530	10	0.00	1.0	1.00	C3A	RAA	GBB	ETE
533 10 0.00 0.8 0.70 C3-A GB-A RA-A ET-E 534 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 535 10 0.00 0.6 0.00 C3-A RA-B GB-B ET-E 536 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.70 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.70 C3-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 540 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 541 10 0.00 0.4 0.40 C3-B RA-B GB-C ET-F 543 10 0.00 0.4 0.85 RA-A	531	10	0.00	0.8	0.00	C3A	GBA	RAA	ETE
534 10 0.00 0.8 0.85 C3-A GB-A RA-A ET-E 535 10 0.00 0.8 1.00 C3-A RA-A GB-B ET-E 536 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.70 C3-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 540 10 0.00 0.6 1.00 C3-A RA-A GB-A ET-F 541 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 542 10 0.00 0.4 0.40 C3-B RA-A GB-E ET-F 543 10 0.00 0.4 0.85 RA-A	532	10	0.00	0.8	0.40	C3A	GBA	RAA	ETE
535 10 0.00 0.8 1.00 C3-A RA-A GB-B ET-E 536 10 0.00 0.6 0.00 C3-B RA-B GB-C ET-E 537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.70 C3-A GB-A RA-A ET-F 539 10 0.00 0.6 1.00 C3-A RA-A GB-A ET-F 540 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 541 10 0.00 0.4 0.40 C3-B RA-B GB-C ET-F 542 10 0.00 0.4 0.70 C3-A RA-B GB-C ET-F 543 10 0.00 0.4 0.85 RA-A GB-A C3-B ET-F 544 10 0.00 0.2 0.00	533	10	0.00	0.8	0.70	C3A	GBA	RAA	ETE
536 10 0.00 0.6 0.00 C3-B RA-B GB-C ET-E 537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.70 C3-A GB-A RA-A ET-F 539 10 0.00 0.6 1.00 C3-A RA-A ET-F 540 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 541 10 0.00 0.4 0.40 C3-B RA-B GB-C ET-F 542 10 0.00 0.4 0.70 C3-A RA-B GB-C ET-F 543 10 0.00 0.4 0.70 C3-A RA-A GB-R ET-F 544 10 0.00 0.2 0.00 RA-A ET-D C3-E GB-B 547 10 0.00 0.2 0.40 RA-B	534	10	0.00	0.8	0.85	C3A	GBA	RAA	ETE
537 10 0.00 0.6 0.40 C3-A RA-A GB-B ET-E 538 10 0.00 0.6 0.70 C3-A GB-A RA-A ET-F 539 10 0.00 0.6 0.85 GB-A C3-A RA-A ET-F 540 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 541 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 542 10 0.00 0.4 0.40 C3-B RA-B GB-C ET-E 543 10 0.00 0.4 0.70 C3-A RA-A GB-B ET-F 544 10 0.00 0.4 0.85 RA-A GB-A C3-B ET-F 545 10 0.00 0.2 0.00 RA-A ET-D C3-E GB-G 547 10 0.00 0.2 0.40	535	10	0.00	0.8	1.00	C3A	RAA	GBB	ETE
538 10 0.00 0.6 0.70 C3A GBA RAA ETF 539 10 0.00 0.6 0.85 GBA C3A RAA ETF 540 10 0.00 0.6 1.00 C3A RAA GBA ETF 541 10 0.00 0.4 0.00 RAB C3C ETE GBE 542 10 0.00 0.4 0.40 C3B RAB GBC ETE 543 10 0.00 0.4 0.70 C3A RAA GBB ETF 544 10 0.00 0.4 0.85 RAA GBA C3B ETF 545 10 0.00 0.2 0.00 RAA ETD C3E GBG 547 10 0.00 0.2 0.40 RAB C3B GBB ETF 548 10 0.00 0.2 <td>536</td> <td>10</td> <td>0.00</td> <td>0.6</td> <td>0.00</td> <td>C3B</td> <td>RAB</td> <td>GBC</td> <td>ETE</td>	536	10	0.00	0.6	0.00	C3B	RAB	GBC	ETE
539 10 0.00 0.6 0.85 GBA C3A RAA ETF 540 10 0.00 0.6 1.00 C3A RAA GBA ETF 541 10 0.00 0.4 0.00 RAB C3C ETE GBE 542 10 0.00 0.4 0.40 C3B RAB GBC ETE 543 10 0.00 0.4 0.70 C3A RAA GBB ETF 544 10 0.00 0.4 0.85 RAA GBA C3B ETF 545 10 0.00 0.2 0.00 RAA ETD C3B ETF 546 10 0.00 0.2 0.40 RAB C3B GBB ETF 548 10 0.00 0.2 0.70 RAA GBB ETG 549 10 0.00 0.2 0.85	537	10	0.00	0.6	0.40	C3A	RAA	GBB	ETE
540 10 0.00 0.6 1.00 C3-A RA-A GB-A ET-F 541 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 542 10 0.00 0.4 0.40 C3-B RA-B GB-C ET-E 543 10 0.00 0.4 0.70 C3-A RA-A GB-B ET-F 544 10 0.00 0.4 0.85 RA-A GB-A C3-B ET-F 545 10 0.00 0.2 0.00 RA-A ET-D C3-E GB-G 547 10 0.00 0.2 0.40 RA-B C3-B GB-E ET-F 548 10 0.00 0.2 0.70 RA-A GB-B B-ET-G 549 10 0.00 0.2 0.85 RA-A GB-B C3-C ET-G 550 10 0.00 0.2 1.00 RA-A <t< td=""><td>538</td><td>10</td><td>0.00</td><td>0.6</td><td>0.70</td><td>C3A</td><td>GBA</td><td>RAA</td><td>ETF</td></t<>	538	10	0.00	0.6	0.70	C3A	GBA	RAA	ETF
541 10 0.00 0.4 0.00 RA-B C3-C ET-E GB-E 542 10 0.00 0.4 0.40 C3-B RA-B GB-C ET-E 543 10 0.00 0.4 0.70 C3-A RA-A GB-R ET-F 544 10 0.00 0.4 0.85 RA-A GB-A C3-B ET-F 545 10 0.00 0.4 1.00 GB-A RA-A C3-B ET-F 546 10 0.00 0.2 0.00 RA-A ET-D C3-E GB-G 547 10 0.00 0.2 0.40 RA-B C3-B GB-E ET-F 548 10 0.00 0.2 0.70 RA-A C3-B GB-B ET-G 549 10 0.00 0.2 0.85 RA-A GB-B C3-C ET-G 550 10 0.00 0.2 1.00 RA-A GB-B RA-B ET-E 551 10 0.25 1.0	539	10	0.00	0.6	0.85	GBA	C3A	RAA	ETF
542 10 0.00 0.4 0.40 C3B RAB GBC ETE 543 10 0.00 0.4 0.70 C3A RAA GBB ETF 544 10 0.00 0.4 0.85 RAA GBA C3B ETF 545 10 0.00 0.4 1.00 GBA RAA C3B ETF 546 10 0.00 0.2 0.00 RAA ETD C3E GBG 547 10 0.00 0.2 0.40 RAB C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBB ETG 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 <td>540</td> <td>10</td> <td>0.00</td> <td>0.6</td> <td>1.00</td> <td>C3A</td> <td>RAA</td> <td>GBA</td> <td>ETF</td>	540	10	0.00	0.6	1.00	C3A	RAA	GBA	ETF
543 10 0.00 0.4 0.70 C3A RAA GBB ETF 544 10 0.00 0.4 0.85 RAA GBA C3B ETF 545 10 0.00 0.2 0.00 RAA ETD C3E GBG 546 10 0.00 0.2 0.40 RAA ETD C3E GBG 547 10 0.00 0.2 0.40 RAB C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBE ETF 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBB C3C ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 <td>541</td> <td>10</td> <td>0.00</td> <td>0.4</td> <td>0.00</td> <td>RAB</td> <td>C3C</td> <td>ETE</td> <td>GBE</td>	541	10	0.00	0.4	0.00	RAB	C3C	ETE	GBE
544 10 0.00 0.4 0.85 RAA GBA C3B ETF 545 10 0.00 0.4 1.00 GBA RAA C3B ETF 546 10 0.00 0.2 0.00 RAA ETD C3E GBG 547 10 0.00 0.2 0.40 RAB C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBB ETG 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBB C3C ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 <td>542</td> <td>10</td> <td>0.00</td> <td>0.4</td> <td>0.40</td> <td>C3B</td> <td>RAB</td> <td>GBC</td> <td>ETE</td>	542	10	0.00	0.4	0.40	C3B	RAB	GBC	ETE
545 10 0.00 0.4 1.00 GBA RAA C3B ETF 546 10 0.00 0.2 0.00 RAA ETD C3E GBG 547 10 0.00 0.2 0.40 RAB C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBB ETG 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBB C3C ETG 551 10 0.00 0.2 1.00 RAA GBB RAB ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.70 C3A RAB GBB ETE 553 10 0.25 1.0 <td>543</td> <td>10</td> <td>0.00</td> <td>0.4</td> <td>0.70</td> <td>C3A</td> <td>RAA</td> <td>GBB</td> <td>ETF</td>	543	10	0.00	0.4	0.70	C3A	RAA	GBB	ETF
546 10 0.00 0.2 0.00 RAA ETD C3E GBG 547 10 0.00 0.2 0.40 RAB C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBB ETG 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBB C3C ETG 551 10 0.00 0.2 1.00 RAA GBB RAB ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.70 C3A GBB RAB ETE 553 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 0.8 <td>544</td> <td>10</td> <td>0.00</td> <td>0.4</td> <td>0.85</td> <td>RAA</td> <td>GBA</td> <td>C3B</td> <td>ETF</td>	544	10	0.00	0.4	0.85	RAA	GBA	C3B	ETF
547 10 0.00 0.2 0.40 RAB C3B GBE ETF 548 10 0.00 0.2 0.70 RAA C3B GBB ETG 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBB C3C ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 0.70 C3A GBB RAB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 0.8 0.00 C3A GBB RAB ETE 556 10 0.25 0.8 <td>545</td> <td>10</td> <td>0.00</td> <td>0.4</td> <td>1.00</td> <td>GBA</td> <td>RAA</td> <td>C3B</td> <td>ETF</td>	545	10	0.00	0.4	1.00	GBA	RAA	C3B	ETF
548 10 0.00 0.2 0.70 RAA C3B GBB ETG 549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBA C3C ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 0.70 C3A RAB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.40 C3A GBA RAB ETE 557 10 0.25 0.8 0.40	546	10	0.00	0.2	0.00	RAA	ETD	С3Е	GBG
549 10 0.00 0.2 0.85 RAA GBB C3C ETG 550 10 0.00 0.2 1.00 RAA GBA C3C ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 0.70 C3A RAB GBB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 <td>547</td> <td>10</td> <td>0.00</td> <td>0.2</td> <td>0.40</td> <td>RAB</td> <td>C3B</td> <td>GBE</td> <td>ETF</td>	547	10	0.00	0.2	0.40	RAB	C3B	GBE	ETF
550 10 0.00 0.2 1.00 RAA GBA C3C ETG 551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 0.70 C3A RAB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	548	10	0.00	0.2	0.70	RAA	C3B	GBB	ETG
551 10 0.25 1.0 0.00 C3A GBB RAB ETE 552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 0.70 C3A RAB GBB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	549	10	0.00	0.2	0.85	RAA	GBB	C3C	ETG
552 10 0.25 1.0 0.40 C3A GBB RAB ETE 553 10 0.25 1.0 0.70 C3A RAB GBB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	550	10	0.00	0.2	1.00	RAA	GBA	C3C	ETG
553 10 0.25 1.0 0.70 C3A RAB GBB ETE 554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	551	10	0.25	1.0	0.00	C3A	GBB	RAB	ETE
554 10 0.25 1.0 0.85 C3A GBB RAB ETE 555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	552	10	0.25	1.0	0.40	C3A	GBB	RAB	ETE
555 10 0.25 1.0 1.00 C3A GBB RAB ETE 556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	553	10	0.25	1.0	0.70	C3A	RAB	GBB	ETE
556 10 0.25 0.8 0.00 C3A GBA RAB ETE 557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	554	10	0.25	1.0	0.85	C3A	GBB	RAB	ETE
557 10 0.25 0.8 0.40 C3A GBA RAB ETE 558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	555	10	0.25	1.0	1.00	C3A	GBB	RAB	ETE
558 10 0.25 0.8 0.70 GBA C3A RAB ETE 559 10 0.25 0.8 0.85 GBA C3A RAB ETE	556	10	0.25	0.8	0.00	C3A	GBA	RAB	ETE
559 10 0.25 0.8 0.85 GBA C3A RAB ETE	557	10	0.25	0.8	0.40	C3A	GBA	RAB	ETE
	558	10	0.25	0.8	0.70	GBA	C3A	RAB	ETE
560 10 0.25 0.8 1.00 C3A GBA RAB ETE	559	10	0.25	0.8	0.85	GBA	C3A	RAB	ETE
	560	10	0.25	0.8	1.00	C3A	GBA	RAB	ETE

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
561	10	0.25	0.6	0.00	C3B	RAB	GBC	ETE
562	10	0.25	0.6	0.40	C3A	RAB	GBC	ETE
56 3	10	0.25	0.6	0.70	C3A	GBB	RAB	ETE
564	10	0.25	0.6	0.85	GBA	C3A	RAB	ETF
565	10	0.25	0.6	1.00	GBA	C3A	RAB	ETF
566	10	0.25	0.4	0.00	RAC	C3C	ETD	GBE
567	10	0.25	0.4	0.40	C3B	RAC	GBD	ETE
5 68	10	0.25	0.4	0.70	C3A	RAB	GBC	ETF
5 69	1 0	0.25	0.4	0.85	C3B	GBB	RAB	ETF
5 70	10	0.25	0.4	1.00	GBA	C3B	RAB	ETF
571	10	0.25	0.2	0.00	RAC	ETD	C3E	GBG
572	10	0.25	0.2	0.40	C3B	RAC	GBE	ETF
573	10	0.25	0.2	0.70	C3B	RAB	GBC	ETG
574	10	0.25	0.2	0.85	RAB	GBC	C3C	ETG
575	10	0.25	0.2	1.00	GBB	RAB	C3C	ETG
576	10	0.50	1.0	0.00	C3A	GBA	RAC	ETE
57 7	10	0.50	1.0	0.40	C3A	GBA	RAC	ETE
57 3	10	0.50	1.0	0.70	C3A	GBA	RAC	ETE
579	10	0.50	1.0	0.85	C3A	GBA	RAC	ETE
5 80	10	0.50	1.0	1.00	GBA	C3A	RAC	ETE
581	10	0.50	0.8	0.00	C3A	GBB	RAD	ETE
5 82	10	0.50	0.8	0.40	C3A	GBB	RAD	ETE
583	10	0.50	0.8	0.70	C3A	GBB	RAD	ETE
584	10	0.50	0.8	0.85	C3A	GBA	RAD	ETE
585	10	0.50	0.8	1.00	C3A	GBA	RAD	ETE
586	10	0.50	0.6	0.00	C3B	GBD	RAE	ETE
587	10	0.50	0.6	0.40	C3A	GBC	RAD	ET E
588	10	0.50	0.6	0.70	C3A	GBC	RAD	ETF
589	1 0	0.50	0.6	0.85	C3A	GBB	RAD	ETF
590	10	0.50	0.6	1.00	GBA	C3A	RAD	ETF
591	10	0.50	0.4	0.00	C3C	ETD	RAE	GBF
592	10	0.50	0.4	0.40	СЗВ	GBD	RAE	ETE
593	10	0.50	0.4	0.70	C3B	GBC	RAD	ETF
594	10	0.50	0.4	0.85	C3B	GBC	RAD	ETF
595	10	0.50	0.4	1.00	GBB	C3B	RAD	ETF
596	10	0.50	0.2	0.00	C3E	ETE	RAE	GBG
597	10	0.50	0.2	0.40	C3B	GBE	RAE	ETF
598	10	0.50	0.2	0.70	C3B	GBD	RAE	ETG
599	10	0.50	0.2	0.85	GBC	C3C	RAD	ETG
600	10	0.50	0.2	1.00	GBC	C3D	RAD	ETG

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
601	10	0.75	1.0	0.00	GBA	C3A	RAE	ETE
602	10	0.75	1.0	0.40	C3A	GBA	RAE	ETE
603	10	0.75	1.0	0.70	C3A	GBB	RAE	ETE
604	10	0.75	1.0	0.85	C3A	GBB	RAE	ETE
605	10	0.75	1.0	1.00	C3A	GBB	RAE	ETE
606	10	0.75	0.8	0.00	C3A	GBB	RAE	ETE
607	10	0.75	0.8	0.40	C3A	GBB	RAE	ETE
608	10	0.75	0.8	0.70	C3A	GBC	RAE	ETF
609	10	0.75	0.8	0.85	C3A	GBC	RAE	ETF
610	10	0.75	0.8	1.00	C3A	GBB	RAE	ETF
611	10	0.75	0.6	0.00	C3B	GBD	ETE	RAF
612	10	0.75	0.6	0.40	C3A	GBD	RAE	ETF
613	10	0.75	0.6	0.70	C3A	GBC	RAE	ETF
614	10	0.75	0.6	0.85	C3B	GBC	RAE	ETF
615	10	0.75	0.6	1.00	C3B	GBC	RAE	ETF
616	10	0.75	0.4	0.00	C3C	ETE	GBF	RAF
617	10	0.75	0.4	0.40	C3A	GBD	ETF	RAF
618	10	0.75	0.4	0.70	C3B	GBD	RAE	ETG
619	10	0.75	0.4	0.85	C3C	GBD	RAE	ETG
620	10	0.75	0.4	1.00	C3C	GBC	RAE	ETG
621	10	0.75	0.2	0.00	C3D	ETE	RAF	GBG
622	10	0.75	0.2	0.40	C3A	GBE	ETF	RAF
623	10	0.75	0.2	0.70	C3C	GBD	RAF	ETG
624	10	0.75	0.2	0.85	C3D	GBD	RAF	ETG
625	10	0.75	0.2	1.00	GBD	C3D	RAE	ETG
626	10	1.00	1.0	0.00	GBA	C3A	RAE	ETF
627	10	1.00	1.0	0.40	C3A	GBB	RAE	ETF
628	10	1.00	1.0	0.70	C3A	GBC	RAE	ETF
629	10	1.00	1.0	0.85	C3A	GBC	RAE	ETF
630	10	1.00	1.0	1.00	C3A	GBC	RAE	ETF
631	10	1.00	0.8	0.00	C3A	GBB	ETE	RAF
632	10	1.00	0.8	0.40	C3A	GBC	ETF	RAF
633	10	1.00	0.8	0.70	C3B	GBC	RAF	ETF
634	10	1.00	0.8	0.85	C3B	GBC	RAF	ETF
635	10	1.00	0.8	1.00	C3B	GBC	RAF	ETF
636	10	1.00	0.6	0.00	C3A	GBC	ETE	RAF
637	10	1.00	0.6	0.40	C3A	GBC	ETF	RAF
638	10	1.00	0.6	0.70	C3B	GBD	RAF	ETF
639	10	1.00	0.6	0.85	C3B	GBD	RAF	ETF
640	10	1.00	0.6	1.00	C3C	GBC	RAF	ETF

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
641	10	1.00	0.4	0.00	C3B	GBE	ETE	RAG
642	10	1.00	0.4	0.40	C3A	GBD	ETF	RAG
643	10	1.00	0.4	0.70	C3C	GBD	RAF	ETG
644	10	1.00	0.4	0.85	C3C	GBD	RAF	ETG
645	10	1.00	0.4	1.00	GBC	C3D	RAF	ETG
646	10	1.00	0.2	0.00	C3C	ETF	GBF	RAG
647	10	1.00	0.2	0.40	C3A	GBD	ETG	RAG
648	10	1.00	0.2	0.70	C3C	GBD	RAF	ETG
649	10	1.00	0.2	0.85	GBD	C3D	RAF	ETG
650	10	1.00	0.2	1.00	GBD	C3E	RAF	ETG
651	10	1.50	1.0	0.00	GBA	C3B	ETF	RAF
652	10	1.50	1.0	0.40	C3B	GBB	ETF	RAF
653	10	1.50	1.0	0.70	C3B	GBC	ETF	RAF
654	10	1.50	1.0	0.85	C3B	GBC	ETF	RAF
655	10	1.50	1.0	1.00	C3B	GBC	ETF	RAF
656	10	1.50	0.8	0.00	GBA	C3B	ETF	RAF
657	10	1.50	0.8	0.40	C3B	GBB	ETF	RAF
658	10	1.50	0.8	0.70	СЗВ	GBC	ETF	RAF
659	10	1.50	0.8	0.85	C3C	GBC	ETF	RAF
660	10	1.50	0.8	1.00	C3C	GBC	ETF	RAF
661	10	1.50	0.6	0.00	C3A	GBA	ETF	RAF
662	10	1.50	0.6	0.40	C3B	GBB	ETF	RAG
663	10	1.50	0.6	0.70	GBB	C3C	ETG	RAG
664	10	1.50	0.6	0.85	GBB	C3C	RAG	ETG
665	10	1.50	0.6	1.00	GBB	C3C	RAG	ETG
666	10	1.50	0.4	0.00	C3A	GBB	ETF	RAG
667	10	1.50	0.4	0.40	C3B	GBB	ETF	RAG
668	10	1.50	0.4	0.70	GBC	C3D	RAG	ETG
669	10	1.50	0.4	0.85	GBB	C3D	RAG	ETG
670	10	1.50	0.4	1.00	GBA	C3D	RAG	ETG
671	10	1.50	0.2	0.00	C3A	GBB	RAF	ETG
672	10	1.50	0.2	0.40	GBB	C3B	RAG	ETG
673	10	1.50	0.2	0.70	GBB	C3D	RAG	
674	10	1.50	0.2	0.85	GBC	C3E	RAG	ETG
675	10	1.50	0.2	1.00	GBB	C3E	RAG	ETG
676	10	2.00	1.0	0.00	GBA			
677	10	2.00	1.0	0.40	GBA		ETE	
678	10	2.00	1.0	0.70	GBA		ETE	
679	10	2.00	1.0	0.85		C3C		RAG
680	10	2.00	1.0	1.00	GBA	C3C	ETE	RAG

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
681	10	2.00	0.8	0.00	GBA	C3B	ETE	RAF
682	10	2.00	0.8	0.40	GBA	C3C	ETF	RAF
683	10	2.00	8.0	0.70	GBA	C3C	ETF	RAG
684	10	2.00	0.8	0.85	GBA	C3C	ETF	RAG
685	10	2.00	0.8	1.00	GBA	C3C	ETF	RAG
686	10	2.00	0.6	0.00	GBA	C3B	ETF	RAF
687	10	2.00	0.6	0.40	GBA	C3C	ETF	RAF
688	10	2.00	0.6	0.70	GBA	C3C	ETF	RAG
689	10	2.00	0.6	0.85	GBA	C3D	ETF	RAG
690	10	2.00	0.6	1.00	GBB	C3C	ETF	RAG
691	10	2.00	0.4	0.00	GBA	C3B	RAF	ETF
692	10	2.00	0.4	0.40	GBA	C3C	ETF	RAG
693	10	2.00	0.4	0.70	GBA	C3D	ETG	RAG
694	10	2.00	0.4	0.85	GBA	C3D	ETG	RAG
695	10	2.00	0.4	1.00	GBC	C3D	ETG	RAG
696	10	2.00	0.2	0.00	GBA	C3C	RAF	ETG
697	10	2.00	0.2	0.40	GBA	C3C	RAG	ETG
698	10	2.00	0.2	0.70	GBB	C3D	RAG	ETG
699	10	2.00	0.2	0.85	GBB	C3E	RAG	ETG
700	10	2.00	0.2	1.00	GBB	С3Е	RAG	ETC
701	15	0.00	1.0	0.00	C3A	RAA	GBC	ETF
702	15	0.00	1.0	0.40	C3A	RAA	GBB	ETF
703	15	0.00	1.0	0.70	C3A	RAA	GBC	ETF
704	15	0.00	1.0	0.85	C3A	RAA	GBB	ETF
705	15	0.00	1.0	1.00	C3A	RAA	GBC	ETF
706	15	0.00	0.8	0.00	C3A	GBA	RAA	ETF
707	15	0.00	0.8	0.40	C3A	GBA	RAA	ETF
708	15	0.00	0.8	0.70	C3A	RAA	GBA	ETF
709	15	0.00	0.8	0.85	C3A	RAA	GBB	ETF
710	15	0.00	0.8	1.00	C3A	RAA	GBB	≞TF
711	15	0.00	0.6	0.00	RAA	C3B	GBB	ETF
712	15	0.00	0.6	0.40	C3A	RAA	GBB	ETF
713	15	0.00	0.6	0.70	C3A	GBA	RAA	ETF
714	15	0.00	0.6	0.85	GBA	RAA	C3A	ETF
715	15	0.00	0.6	1.00	RAA	C3A	GBB	ETF
716	15	0.00	0.4	0.00	RAB	C3C	GBD	ETE
717	15	0.00	0.4	0.40	RAA	C3B	GBC	ETF
718	15	0.00	0.4	0.70	RAA	C3A	GBB	ETF
719	15	0.00	0.4	0.85	RAA	GBA	С3В	ETG
720	15	0.00	0.4	1.00	RAA	GBA	C3B	ETG

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
721	15	0.00	0.0	0.00	DA A		ET E	
722	15 15	0.00 0.00	0.2	0.00 0.40	RAA RAB	C3E C3B	ETE GBD	GBG
723	15	0.00	0.2	0.70	RAA	GBA	C3B	ETF ETG
724	15	0.00	0.2	0.70	RAA	GBB	C3C	ETG
725	15	0.00	0.2	1.00	RAA	GBA	C3C	ETG
726	15	0.25	1.0	0.00	C3A	RAB	GBC	ETF
727	15	0.25	1.0	0.40	C3A	RAA	GBB	ETF
728	15	0.25	1.0	0.70	C3A	RAA	GBB	ETF
729	15	0.25	1.0	0.85	C3A	RAA	GBB	ETF
730	15	0.25	1.0	1.00	C3A	RAA	GBB	ETF
731	15	0.25	0.8	0.00	C3A	GBA	RAB	ETF
732	15	0.25	0.8	0.40	C3A	GBA	RAB	ETF
733	15	0.25	0.8	0.70	C3A	GBA	RAB	ETF
734	15	0.25	0.8	0.85	C3A	GBA	RAB	ETF
735	15	0.25	0.8	1.00	C3A	GBA	RAB	ETF
736	15	0.25	0.6	0.00	C3B	RAB	GBB	ETF
737	15	0.25	0.6	0.40	C3A	RAB	GBB	ETF
738	15	0.25	0.6	0.70	C3A	GBB	RAB	ETF
739	15	0.25	0.6	0.85	C3A	GBA	RAB	ETF
740	15	0.25	0.6	1.00	GBA	C3A	RAB	ETF
741	15	0.25	0.4	0.00	RAC	C3C	GBE	ETE
742	15	0.25	0.4	0.40	C3B	RAB	GBC	ETF
743	15	0.25	0.4	0.70	C3A	RAB	GBB	ETG
744	15	0.25	0.4	0.85	GBB	C3B	RAB	ETG
745	15	0.25	0.4	1.00	GBA	RAB	С3В	ETG
746	15	0.25	0.2	0.00	RAB	C3E	ETE	GBG
747	15	0.25	0.2	0.40	C3B	RAC	GBD	ETF
748	15	0.25	0.2	0.70	RAB	C3B	GDB	ETG
749	15	0.25	0.2	0.85	RAB	GBB	C3C	ETG
750	15	0.25	0.2					ETG
751	15	0.50	1.0	0.00	C3A	GBB	RAC	
752	15	0.50	1.0	0.40	C3A		RAC	
753	15	0.50	1.0	0.70	C3A	GBA	RAC	
754	15	0.50	1.0	0.85	C3A		RAC	
755 756	15	0.50	1.0	1.00	C3A		RAC	
756	15	0.50	0.8	0.00	C3A			
757	15	0.50	0.8	0.40	C3A		RAC	ETF
758 750	15	0.50	0.8	0.70	C3A		RAC	ETF
759 760	15	0.50	0.8	0.85	C3A			
760	15	0.50	0.8	1.00	C3A	GBA	RAC	ETF

TP	SS	Bias	Ell	Corr	1ST	2ND	3RD	4TH
761	15	0.50	0.6	0.00	C3B	GBC	RAD	ETF
762	15	0.50	0.6	0.40	C3A	GBC	RAD	ETF
763	15	0.50	0.6	0.70	C3A	GBC	RAD	ETF
764	15	0.50	0.6	0.85	C3A	GBB	RAD	ETF
765	15	0.50	0.6	1.00	C3A	GBB	RAD	ETG
766	15	0.50	0.4	0.00	C3C	ETE	RAE	GBF
767	15	0.50	0.4	0.40	C3B	GBC	RAE	ETF
768	15	0.50	0.4	0.70	C3B	GBC	RAD	ETG
769	15	0.50	0.4	0.85	C3B	GBC	RAD	ETG
770	15	0.50	0.4	1.00	GBB	C3B	RAD	ETG
771	15	0.50	0.2	0.00	C3E	RAE	ETE	GBG
772	15	0.50	0.2	0.40	C3B	GBE	RAE	ETF
773	15	0.50	0.2	0.70	C3B	GBD	RAE	ETG
774	15	0.50	0.2	0.85	GBC	C3C	RAD	ETG
775	15	0.50	0.2	1.00	GBC	C3D	RAD	F:T G
776	15	0.75	1.0	0.00	GBA	C3A	RAE	ETF
777	15	0.75	1.0	0.40	C3A	GBA	RAE	ETF
778	15	0.75	1.0	0.70	C3A	GBB	RAE	ETF
7 79	15	0.75	1.0	0.85	C3A	GBB	RAE	ETF
780	15	0.75	1.0	1.00	C3A	GBB	RAE	ETF
781	15	0.75	0.8	0.00	C3A	GBB	RAE	ETF
782	15	0.75	8.0	0.40	C3A	GBB	RAE	ETF
783	15	0.75	0.8	0.70	C3A	GBC	RAE	ETF
784	15	0.75	0.8	0.85	C3A	GBB	RAE	ETF
785	15	0.75	0.8	1.00	C3A	GBC	RAE	ETF
786	15	0.75	0.6	0.00	C3B	GBC	RAF	ETF
787	15	0.75	0.6	0.40	C3A	GBC	RAE	ETF
788	15	0.75	0.6	0.70	C3A	GBC	RAE	ETG
789	15	0.75	0.6	0.85	C3B	GBC	RAE	ETG
79 0	15	0.75	0.6	1.00	СЗВ	GBC	RAE	ETG
791	15	0.75	0.4	0.00	C3C	ETE	GBF	RAF
792	15	0.75	0.4	0.40	C3A	GBC	RAF	ETF
793	15	0.75	0.4	0.70	C3B	GBD	RAE	ETG
794	15	0.75	0.4	0.85	C3C	GBC	RAE	ETG
795	15	0.75	0.4	1.00	C3C	GBC	RAE	ETG
796	15	0.75	0.2	0.00	C3D	ETF	RAF	GBG
797	15	0.75	0.2	0.40	C3A	GBE	RAF	ETG
798	15	0.75	0.2	0.70	C3C	GBD	RAF	ETG
799	15	0.75	0.2	0.85	GBD	C3D	RAE	ETG
800	15	0.75	0.2	1.00	GBC	C3D	RAE	ETG

801 15 1.00 1.0 0.00 GB-A C3-A RA-E ET-F 802 15 1.00 1.0 0.40 C3-A GB-B RA-E ET-F 803 15 1.00 1.0 0.70 C3-A GB-C RA-E ET-F 804 15 1.00 1.0 0.85 C3-A GB-C RA-E ET-F 805 15 1.00 1.0 1.00 C3-A GB-C RA-E ET-F 806 15 1.00 0.8 0.00 C3-A GB-B RA-F ET-F 807 15 1.00 0.8 0.4 J3-A GB-C RA-F ET-F 808 15 1.00 0.8 0.70 C3-B GB-C RA-F ET-F 809 15 1.00 0.8 0.85 C3-B GB-C RA-F ET-F 810 15 1.00 0.6 0.00 C	TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
802 15 1.00 1.0 0.40 C3A GBB RAE ETF 803 15 1.00 1.0 0.70 C3A GBC RAE ETF 804 15 1.00 1.0 0.85 C3A GBC RAE ETF 805 15 1.00 1.0 1.00 C3A GBC RAE ETF 806 15 1.00 0.8 0.0 C3A GBC RAF ETF 807 15 1.00 0.8 0.4 J3A GBC RAF ETF 808 15 1.00 0.8 0.70 C3B GBC RAF ETF 809 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.6 0.00 C3A GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15									
803 15 1.00 1.0 0.70 C3A GBC RAE ETF 804 15 1.00 1.0 0.85 C3A GBC RAE ETF 805 15 1.00 1.0 1.00 C3A GBC RAE ETF 806 15 1.00 0.8 0.0 C3A GBB RAF ETF 807 15 1.00 0.8 0.4 J3A GBC RAF ETF 808 15 1.00 0.8 0.70 C3B GBC RAF ETF 809 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.6 0.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC RAF ETF 812 15 1.00 0.6 0.70 C3B GBD RAF ETF 814 15								RAE	ETF
804 15 1.00 1.0 0.85 C3A GBC RAE ETF 805 15 1.00 1.0 1.00 C3A GBC RAE ETF 806 15 1.00 0.8 0.0 C3A GBB RAF ETF 807 15 1.00 0.8 0.70 C3B GBC RAF ETF 808 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.8 0.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC ETF RAF ETF 812 15 1.00 0.6 0.40 C3A GBC RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>ETF</td>									ETF
805 15 1.00 1.0 1.00 C3A GBC RAE ETF 806 15 1.00 0.8 0.00 C3A GBB RAF ETF 807 15 1.00 0.8 0.70 C3B GBC RAF ETF 808 15 1.00 0.8 0.70 C3B GBC RAF ETF 810 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.8 1.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC ETF RAF ETF 812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.6 1.00 C3C GBD RAF ETF 816<							GBC	RAE	ETF
806 15 1.00 0.8 0.00 C3A GBB RAF ETF 807 15 1.00 0.8 0.4 C3A GBC RAF ETF 808 15 1.00 0.8 0.70 C3B GBC RAF ETF 809 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.8 1.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC ETF RAF ETF 812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.70 C3B GBD RAF ETG 815 15 1.00 0.6 0.85 C3B GBD RAF ETG 816 15 1.00 0.4 0.00 C3B GBD RAF ETF 817 </td <td></td> <td>15</td> <td>1.00</td> <td>1.0</td> <td>0.85</td> <td>C3A</td> <td>GBC</td> <td>RAE</td> <td>ETF</td>		15	1.00	1.0	0.85	C3A	GBC	RAE	ETF
807 15 1.00 0.8 0.4 C3-A GB-C RA-F ET-F 808 15 1.00 0.8 0.70 C3-B GB-C RA-F ET-F 809 15 1.00 0.8 0.85 C3-B GB-C RA-F ET-F 810 15 1.00 0.8 1.00 C3-B GB-C ET-F RA-F ET-F 811 15 1.00 0.6 0.40 C3-A GB-C ET-F RA-F ET-F 812 15 1.00 0.6 0.40 C3-A GB-C RA-F ET-F 813 15 1.00 0.6 0.70 C3-B GB-D RA-F ET-G 814 15 1.00 0.6 0.85 C3-B GB-D RA-F ET-G 815 15 1.00 0.4 0.00 C3-B GB-D RA-F ET-F 816 15 1.00 0.4 0.40 C3-A GB-C ET-F RA-G 818 15	805		1.00	1.0	1.00	C3A	GBC	RAE	ETF
808 15 1.00 0.8 0.70 C3B GBC RAF ETF 809 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.8 1.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC RAF ETF 812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.70 C3B GBD RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.4 0.00 C3B GBD RAF ETG 816 15 1.00 0.4 0.40 C3B GBC ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAF ETG 818<	806	15	1.00	8.0	0.00	C3A	GBB	RAF	ETF
809 15 1.00 0.8 0.85 C3B GBC RAF ETF 810 15 1.00 0.8 1.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.40 C3A GBC RAF ETF 812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.70 C3B GBD RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.6 1.00 C3C GBD RAF ETG 816 15 1.00 0.4 0.40 C3A GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBE ETF RAF ETG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819<	807	15	1.00	0.8	0.4	33A	GBC	RAF	ETF
810 15 1.00 0.8 1.00 C3B GBC RAF ETF 811 15 1.00 0.6 0.00 C3A GBC ETF RAF ETF 812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.70 C3B GBD RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.4 0.00 C3B GBD RAF ETF 816 15 1.00 0.4 0.40 C3A GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAF 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820<	808	15	1.00	0.8	0.70	C3B	GBC	RAF	ETF
811 15 1.00 0.6 0.00 C3A GBC ETF RAF 812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.70 C3B GBD RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.4 0.00 C3B GBD RAF ETG 816 15 1.00 0.4 0.40 C3B GBC ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	809	15	1.00	3.0	0.85	C3B	GBC	RAF	ETF
812 15 1.00 0.6 0.40 C3A GBC RAF ETF 813 15 1.00 0.6 0.70 C3B GBD RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.6 1.00 C3C GBD RAF ETG 816 15 1.00 0.4 0.40 C3A GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	810	15	1.00	0.8	1.00	C3B	GBC	RAF	ETF
813 15 1.00 0.6 0.70 C3B GBD RAF ETG 814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.6 1.00 C3C GBD RAF ETG 816 15 1.00 0.4 0.00 C3B GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	811	15	1.00	0.6	0.00	C3A	GBC	ETF	RAF
814 15 1.00 0.6 0.85 C3B GBD RAF ETG 815 15 1.00 0.6 1.00 C3C GBD RAF ETG 816 15 1.00 0.4 0.00 C3B GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	812	15	1.00	0.6	0.40	C3A	GBC	RAF	ETF
815 15 1.00 0.6 1.00 C3C GBD RAF ETG 816 15 1.00 0.4 0.00 C3B GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	813	15	1.00	0.6	0.70	C3B	GBD	RAF	ETG
816 15 1.00 0.4 0.00 C3B GBE ETF RAG 817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	814	15	1.00	0.6	0.85	C3B	GBD	RAF	ETG
817 15 1.00 0.4 0.40 C3A GBC ETF RAG 818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	815	15	1.00	0.6	1.00	C3C	GBD	RAF	ETG
818 15 1.00 0.4 0.70 C3C GBD RAF ETG 819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	816	15	1.00	0.4	0.00	C3B	GBE	ETF	RAG
819 15 1.00 0.4 0.85 C3C GBD RAF ETG 820 15 1.00 0.4 1.00 GBC C3D RAF ETG	817	15	1.00	0.4	0.40	C3A	GBC	ETF	RAG
820 15 1.00 0.4 1.00 GBC C3D RAF ETG	818	15	1.00	0.4	0.70	C3C	GBD	RAF	ETG
	819	15	1.00	0.4	0.85	C3C	GBD	RAF	ETG
821 15 1.00 0.2 0.00 C3C ETF GBF RAG	820	15	1.00	0.4	1.00	GBC	C3D	RAF	ETG
	821	15	1.00	0.2	0.00	C3C	ETF	GBF	RAG
822 15 1.00 0.2 0.40 C3A GBC ETG RAG	822	15	1.00	0.2	0.40	C3A	GBC	ETG	RAG
823 15 1.00 0.2 0.70 C3C GBD RAF ETG	823	15	1.00	0.2	0.70	C3C	GBD	RAF	ETG
824 15 1.00 0.2 0.85 GBD C3D RAF ETG	824	15	1.00	0.2	0.85	GBD	C3D	RAF	ETG
825 15 1.00 0.2 1.00 GBD C3E RAF ETG	825	15	1.00	0.2	1.00	GBD	C3E	RAF	ETG
826 : 1.50 1.0 0.00 GBA C3B RAF ETF	826	:	1.50	1.0	0.00	GBA	C3B	RAF	ETF
827 15 1.50 1.0 0.40 C3B GBB RAF ETF	827	15	1.50	1.0	0.40	C3B	GBB	RAF	ETF
828 15 1.50 1.0 0.70 C3B GBC RAF ETF	828	15	1.50	1.0	0.70	C3B	GBC	RAF	ETF
829 15 1.50 1.0 0.85 C3B GBC RAF ETF	829	15	1.50	1.0	0.85	C3B	GBC	RAF	ETF
830 15 1.50 1.0 1.00 C3B GBD RAF ETF	830	15	1.50	1.0	1.00	С3В	GBD	RAF	ETF
831 15 1.50 0.8 0.00 GBA C3B RAF ETF	831	15	1.50	0.8	0.00	GBA	C3B	RAF	ETF
832 15 1.50 0.8 0.40 C3B GBB RAF ETG	832	15	1.50	0.8	0.40	C3P	GBB	RAF	ETG
833 15 1.50 0.8 0.70 C3B GBC RAF ETG	833	15	1.50	0.8	0.70	C3B	GBC	RAF	ETG
834 15 1.50 0.8 0.85 C3C GBC RAF ETG	834	15	1.50	0.8	0.85	€3C	GBC	RAF	ETG
835 15 1.50 0.8 1.00 C3C GBC RAG ETG	835	15	1.50	0.8	1.00	C3C	GBC	RAG	ETG
836 15 1.50 0.6 0.00 GBA C3A ETF RAF						GBA	C3A		
837 15 1.50 0.6 0.40 C3B GBB RAG ETG									
838 15 1.50 0.6 0.70 GBC C3C RAG ETG									
839 15 1.50 0.6 0.85 GBC C3C RAG ETG									
840 15 1.50 0.6 1.00 GBC C3C RAG ETG					1.00	GBC			

TP	SS	Bias	E11	Corr	1ST	2ND	3RD	4TH
841	15	1.50	0.4	0.00	C3A	GBA	RAG	ETG
842	15	1.50	0.4	0.40	GBB	C3B	RAG	ETG
843	15	1.50	0.4	0.70	GBC	C3D	RAG	ETG
844	15	1.50	0.4	0.85	GBC	C3D	RAG	ETG
845	15	1.50	0.4	1.00	GBB	C3D	RAG	ETG
846	15	1.50	0.2	0.00	C3A	GBB	RAF	ETG
847	15	1.50	0.2	0.40	GBB	C3B	RAG	ETG
848	15	1.50	0.2	0.70	GBB	C3D	RAG	ETG
849	15	1.50	0.2	0.85	GBC	C3E	RAG	ETG
850	15	1.50	0.2	1.00	GBC	С3Е	RAG	ETG
851	15	2.00	1.0	0.00	GBA	C3B	RAF	ETF
852	15	2.00	1.0	0.40	GBB	C3C	RAF	ETF
853	15	2.00	1.0	0.70	GBB	C3C	ETF	RAG
854	15	2.00	1.0	0.85	GBB	C3C	ETF	RAG
855	15	2.00	1.0	1.00	GBB	C3C	ETF	RAG
856	15	2.00	0.8	0.00	GBA	C3B	RAF	ETF
857	15	2.00	0.8	0.40	GBB	C3C	RAF	ETF
858	15	2.00	0.8	0.70	GBB	C3C	ETF	RAG
859	15	2.00	0.8	0.85	GBA	C3C	ETF	RAG
860	15	2.00	0.8	1.00	GBA	C3C	ETG	RAG
861	15	2.00	0.6	0.00	GBA	C3B	RAF	ETF
862	15	2.00	0.6	0.40	GBA	C3C	RAF	ETG
863	15	2.00	0.6	0.70	GBB	C3C	RAG	ETG
864	15	2.00	0.6	0.85	GBA	C3D	RAG	ETG
865	15	2.00	0.6	1.00	GBA	C3D	RAG	ETG
866	15	2.00	0.4	0.00	GBA	С3В	RAF	ETG
867	15	2.00	0.4	0.40	GBA	C3C	RAG	ETG
868	15	2.00	0.4	0.70	GBB	C3D	RAG	ETG
869	15	2.00	0.4	0.85	GBA	C3D	RAG	ETG
870	15	2.00			GBB		RAG	ETG
871	15	2.00	0.2	0.00	GBA	C3· ′		ETG
872	15	2.00	0.2	ú.40	GBA	C3C		ETG
873	15	2.00	0.2	0.70	GBB	C3D		ETG
874	15	2.00	0.2	0.85	GBB			ETG
875	15	2.00	0.2	1.00	GBA	C3E	RAG	ETG

Bibliography

- 1. Berg, Major David H. Chief, ICBM Support Branch. Personal Interview. HQ SAC, Offutt AFB NE, 16 June through 18 June 1991.
- 2. Elder, Capt Richard L. An Examination of Circular Error Probable Approximation Techniques. MS thesis, AFIT/GST/ENS/86M-6. School of Engineering, Air Force Institute of Technology(AU), Wright-Patterson AFB OH, May 1986 (AD-A1103970).
- Ethridge, Major Ronald A. Robust Estimation of Circular Error Probable for Small Samples. Student Report. Air Command and Staff College, Maxwell AFB AL, 29 June 1983 (AD-B074540).
- Germond, H. H. "Integral of the Gaussian Distribution Over an Offset Ellipse." Report P.94. Publications Department, The RAND Corporation, Santa Monica CA, 27 January 1984.
- 5. Grubbs, Frank E. "Approximate Circular and Noncircular Offset Probabilities of Hitting," Operations Research, 12 (1): 51-62 (January-February 1964).
- 6. Harter, H. Leon. "Circular Error Probabilities," Journal of the American Statistical Association, 55 (292): 723-731 (December 1960).
- 7. MathCAD by MathSoft Inc., One Kendall Square; Cambridge, MA 02139.
- 8. Memo for record. Subject: Development of CEP Formula, HQ SAC/OAOC, Offutt AFB NE. 16 November 1964.
- 9. Mendenhall, William and others Mathematical Statistics with Applications. Boston: PWS-KENT Publishing Company, 1990.
- "Offset Circle Probabilities." Report R-234. Computer Sciences Department, The RAND Corporation. Santa Monica CA, 14 March 1952.
- 11. Pritsker, A. Alan B. Introduction to Simulation and SLAM II. New York: Halsted Press, 1986.
- 12. SAS Institute Inc. Box 8000; SAS Circle; Cary, NC 27512-8000.
- 13. Simkins, L. S. Correspondence, PM-4746, "Calculation of Circle of Equiprobability for a Biased, Correlated, Bivariate, Normal Distribution," Applied Physics Laboratory, The John Hopkins University, Silver Spring MD, 26 March 1974.
- 14. Smith, C. C. Project Engineer, Minuteman Q. C. Data Base, Interoffice correspondence, 82,F651,24-008, "Methods of CEP Calculation," TRW Defense and Space Systems Group, Redondo Beach CA, 26 July 1982.
- 15. Smith, C. C. Project Engineer, Minuteman Q. C. Data Base. Interoffice correspondence, 84.H235.36-004. "CEP calculation Using Infinite Series." TRW Defense Systems Group, Redondo Beach CA, 31 March 1984.

Thompson, Colonel Kenneth L. "Derivation of RAND-234 CEP Formula." Ballistic Missile Evaluation, HQ SAC, Offutt AFB NE, 17 March 1977.

Vita

Captain Peter Puhek was born on 18 January 1960 in San Diego, California. He graduated from Millard Preparatory School in Bandon, Oregon in 1979. He attended the United States Air Force Academy and received Bachelor of Science degrees in Management and Operations Research in June, 1983. After graduation, he was assigned to Vandenberg AFB, CA where he worked as a business manager for Vandenberg's Space Shuttle Site Activation Task Force. In 1987, he was transferred to Edwards AFB, CA where he was a data analyst for the B-2 Advanced Technology Bomber Combined Test Force. In August 1990, he entered the Graduate Operations Research Program, School of Engineerng, Air Force Institute of Technology, Wright-Patterson AFB, OH.

Permanent address: 5821 West 75th Street

Los Angeles, California

90045

REPORT DOCUMENTATION PAGE

Form Approved
OMB No. 0704-0188

Public reporting burder for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection of information. Send comments regarding this burden estimate or any other aspect of this collection of information. Including suggestions for reducing this burden to Washington Headquarters Services, Directorate for information Departions and Reports, 1215 Jefferson Daris Mighway, Suite 1204. Arlington, VA. 22202-4302, and to the Office of Management and Budget, Paperwork Reduction Project (0704-0188), Washington, DC 200533.

1. AGENCY USE ONLY (Leave bla	nk) 2. REPORT DATE March 1992	3. REPORT TYPE AND Master's Thesis	DATES COVERED
4. TITLE AND SUBTITLE			. FUNDING NUMBERS
A SENSITIVITY ANALY PROXIMATION TECHN	YSIS OF CIRCULAR ERRO NIQUES	R PROBABLE AP-	
6. AUTHOR(S)			
Peter Puhek, Captain, U	SAF		:
7. PERFORMING ORGANIZATION I	NAME(S) AND ADDRESS(ES)		PERFORMING ORGANIZATION REPORT NUMBER
Air Force Institute of Tec	chnology, WPAFB OH 45433-	6583	AFIT/GOR/ENS/92M-23
9. SPONSORING MONITORING AC	GENCY NAME(S) AND ADDRESS(E	s) 1	O. SPONSORING / MONITORING
HQ SAC/XPSW Offutt AFB, NE			AGENCY REPORT NUMBER
11. SUPPLEMENTARY NOTES		<u> </u>	
12a. DISTRIBUTION AVAILABILITY	STATEMENT	11	2b. DISTRIBUTION CODE
Approved for public relea	ase; distribution unlimited		
13. ABSTRACT (Maximum 200 wor	·ds)	· · · · · · · · · · · · · · · · · · ·	
downrange miss distance the sensitivities of these The accuracy of each mo method dominated as the parameter in determining nated as the best when b	s of the sample data follow a models to changes in the par del is expressed in terms of rele most accurate were noted. It get the best CEP method. A simas was 0, .25, .5, .75, or 1, and	bivariate normal distrib ameters of sample size, lative error, and the para n general, it was found the mple method, based on the d the Grubbs-Patnaik/c	ution. The analysis determined bias, correlation, and ellipticity, meter regions in which a certain hat bias was the most significant the Rayleigh distribution, dominisquare method dominated for of bias greater than 2 were not
14. SUBJECT TERMS Statistics; Model 3			15. NUMBER OF PAGES 181 16. PRICE CODE
17. SECURITY CLASSIFICATION OF REPORT	18. SECURITY CLASSIFICATION OF THIS PAGE	19. SECURITY CLASSIFICA OF ABSTRACT	TION 20. LIMITATION OF ABSTRACT
Unclassified	Unclassified	Unclassified	UL

GENERAL INSTRUCTIONS FOR COMPLETING SF 298

The Report Documentation Page (RDP) is used in announcing and cataloging reports. It is important that this information be consistent with the rest of the report, particularly the cover and title page. Instructions for filling in each block of the form follow. It is important to stay within the lines to meet optical scanning requirements.

- Block 1. Agency Use Only (Leave blank).
- Block 2. Report Date. Full publication date including day, month, and year, if available (e.g. 1 Jan 88). Must cite at least the year.
- Block 3. Type of Report and Dates Covered. State whether report is interim, final, etc. If applicable, enter inclusive report dates (e.g. 10 Jun 87 30 Jun 88).
- Block 4. <u>Title and Subtitle</u>. A title is taken from the part of the report that provides the most meaningful and complete information. When a report is prepared in more than one volume, repeat the primary title, add volume number, and include subtitle for the specific volume. On classified documents enter the title classification in parentheses.
- Block 5. <u>Funding Numbers</u>. To include contract and grant numbers; may include program element number(s), project number(s), task number(s), and work unit number(s). Use the following labels.

C - Contract G - Grant PE - Plogram PR - Project TA - Task WU - Work U

PE - Flogram WU - Work Unit Element Accession No.

- Block 6. <u>Author(s)</u> Name(s) of person(s) respons the for writing the report, performing the research, or credited with the content of the report. If editor or complier, this should follow the name(s)
- Block 7. <u>Performing Organization Name(s) and Address(es)</u>. Self-explanatory
- Block 8. <u>Performing Organization Report</u>
 <u>Number</u> Enter the unique alphanumeric report
 number(s) assigned by the organization
 performing the report.
- Block 9. Sponsoring/Monitoring Agency Name(s) and Address(es): Self-explanatory
- Block 10. <u>Sponsoring/Monitoring Agency</u> Report Number. (If known)
- Block 11. <u>Supplementary Notes</u>. Enter information not included elsewhere such as: Prepared in cooperation with...; Trans. of...; To be published in When a report is revised, include a statement whether the new report supersedes or supplements the older report.

8lock 12a. <u>Distribution/Availability Statement</u>. Denotes public availability or limitations. Cite any availability to the public. Enter additional limitations or special markings in all capitals (e.g. NOFORN, REL, ITAR).

DOD - See DoDD 5230.24, "Distribution Statements on Technical Documents."

DOE - See authorities.

NASA - See Handbook NHB 2200.2.

NTIS - Leave blank.

Block 12b. Distribution Code.

DOD - Leave blank.

DOE - Enter DOE distribution categories from the Standard Distribution for Unclassified Scientific and Technical Reports.

NASA - Leave blank. NTIS - Leave blank.

- Block 13. <u>Abstract</u>. Include a brief (*Maximum 200 words*) factual summary of the most significant information contained in the report.
- Block 14. <u>Subject Terms</u>. Keywords or phrases identifying major subjects in the report.
- Block 15. <u>Number of Pages</u>. Enter the total number of pages.
- Block 16. <u>Price Code</u>. Enter appropriate price code (NTIS only).
- Blocks 17. 19. <u>Security Classifications</u>. Self-explanatory. Enter U.S. Security Classification in accordance with U.S. Security Regulations (i.e., UNCLASSIFIED). If form contains classified information, stamp classification on the top and bottom of the page.
- Block 20. <u>Limitation of Abstract</u>. This block must be completed to assign a limitation to the abstract. Enter either UL (unlimited) or SAR (same as report). An entry in this block is necessary if the abstract is to be limited. If blank, the abstract is assumed to be unlimited.